



How to change front coil
springs on **BMW E82** –
replacement guide

VIDEO TUTORIAL


** Important!**

This replacement procedure can be used for:

BMW 3 Touring (E91) 318d 2.0, BMW 3 Saloon (E90) 318d 2.0, BMW 3 Touring (E91) 316d 2.0, BMW 1 Coupe (E82) 118d 2.0, BMW 3 Coupe (E92) 318i 2.0, BMW 1 Hatchback (E81) 120d 2.0, BMW 3 Saloon (E90) 320i 2.0, BMW 3 Saloon (E90) 325i 2.5, BMW 3 Saloon (E90) 330i 3.0, BMW 3 Saloon (E90) 320d 2.0, BMW 1 Hatchback (E81) 130i 3.0, BMW 3 Touring (E91) 320i 2.0, BMW 3 Touring (E91) 325i 2.5, BMW 3 Touring (E91) 330i 3.0, BMW 3 Touring (E91) 320d 2.0, (+ 32)

The steps may slightly vary depending on the car design.

REPLACEMENT: COIL SPRINGS – BMW E82. TOOLS YOU NEED:

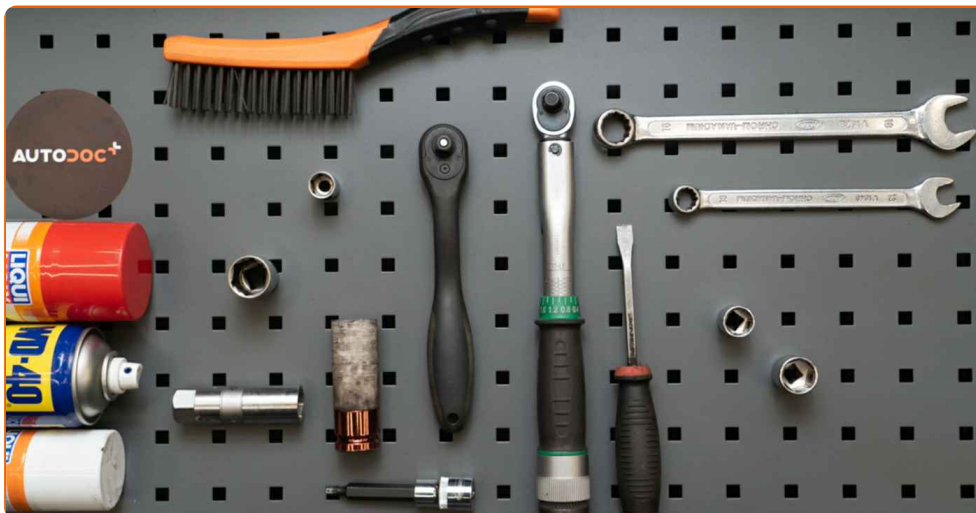

- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Combination spanner #13
- Combination spanner #18
- HEX bit no.H6.
- Drive socket # 13
- Drive socket # 15
- Drive socket # 18
- Drive socket # 21
- Wheel impact socket #17
- Shock absorber socket
- Ratchet wrench
- Torque wrench
- Tap wrench
- Crow bar
- Hydraulic strut spring compressor
- Hydraulic transmission jack
- Fender cover
- Wheel chock

BUY TOOLS

Replacement: coil springs – BMW E82. Tip from AUTODOC:

- Both coil springs of the front suspension should be replaced simultaneously.
- The replacement procedure is identical for the left and right coil springs of the front suspension.
- Warning! Shut down the engine before starting any work – BMW E82.


CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1

Open the bonnet.


**2**

 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.




3

 Clean the fasteners of the shock strut upper mount. Use a wire brush. Use WD-40 spray.



4

 Loosen the upper fastener of the shock strut mount. Use a combination spanner #13.



5

Secure the wheels with chocks.



6

 
Loosen the wheel mounting bolts. Use wheel impact socket #17.



7 Raise the front of the car and secure on supports.




8 Unscrew the wheel bolts.




AUTODOC recommends:

- Important! Hold the wheel while unscrewing the fastening bolts. BMW E82

 9 Remove the wheel.




 10 Clean the stabiliser link fasteners. Use a wire brush. Use WD-40 spray.




11

Unscrew the fastener connecting the stabilizer link to the shock strut. Use a combination spanner #18. Use a drive socket #15. Use a ratchet wrench.

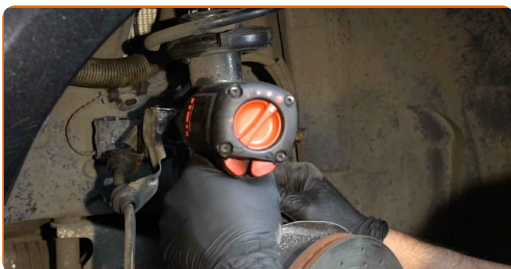


12

Remove the stabilizer rod.

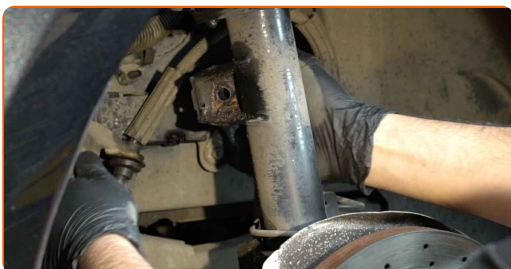


13

Disconnect the ABS sensor wiring.

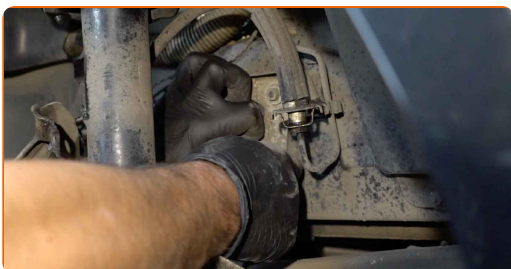


14

Detach the ABS sensor connector.

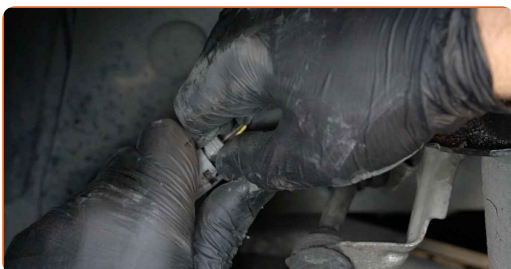


15

Spread the brake pads. Use a crowbar.

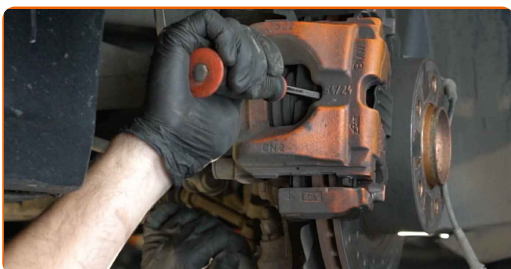

16

 Clean the brake caliper bracket fasteners. Use a wire brush. Use WD-40 spray.



17

Unscrew the caliper bracket fastening. Use a drive socket #18. Use a tap wrench.



18

Remove the brake caliper together with its bracket.



AUTODOC recommends:

- Tie the caliper to the suspension or to the body with a wire without disconnecting from the brake hose to prevent depressurization of the brake system.
- Make sure that the brake caliper is not hanging on the brake hose.
- Don't press the brake pedal after the brake caliper has been removed. As a result, the piston can fall out from the brake cylinder, and brake fluid leakage and depressurization of the system may occur.

 
19

Clean the fastener connecting the tie rod end to the steering knuckle. Use a wire brush. Use WD-40 spray.




20

Unscrew the end fastening nut to the steering knuckle. Use a drive socket #21. Use a ratchet wrench.




21

Disconnect the tie rod end from the steering knuckle.

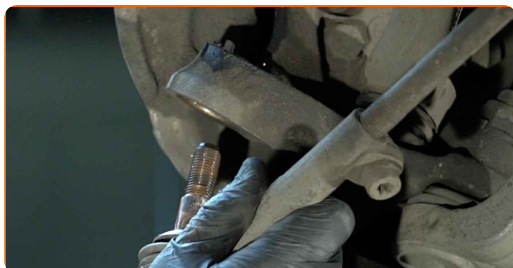


22

Clean all joints of the arm. Use a wire brush. Use WD-40 spray.

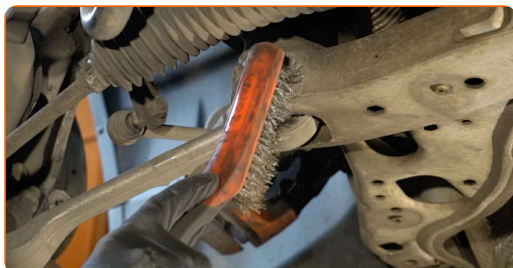


 - 23 Unscrew the rear fastener connecting the control arm to the subframe. Use a combination spanner #18. Use a drive socket #18. Use a ratchet wrench.




- 24 Clean the fasteners connecting the shock strut to the steering knuckle. Use a wire brush. Use WD-40 spray.


- 25 Unscrew the lower fastener connecting the shock strut to the steering knuckle. Use a combination spanner #18. Use a drive socket #18. Use a ratchet wrench.

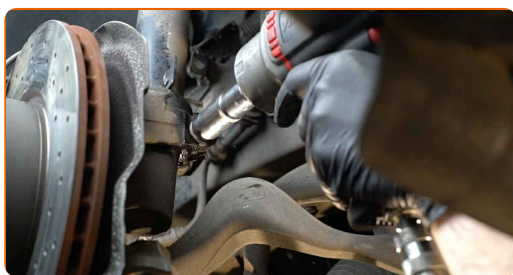


- 26 Unscrew the front arm fastener. Use a combination spanner #18. Use a drive socket #18. Use a ratchet wrench.

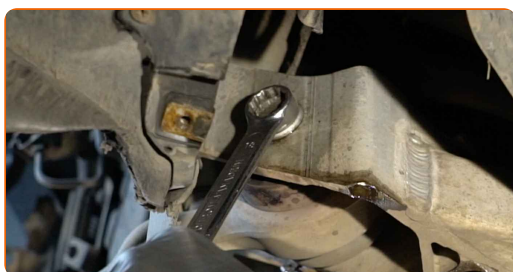


- 27 Remove the fastening bolts.

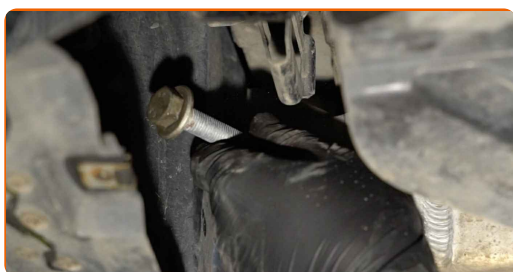

 
28 Remove the control arms. Use a crowbar.




29 Remove the fastening bolt.

 

 
30 Prop up the steering knuckle. Use a hydraulic transmission jack.



 31 Release the lower fastener connecting the shock strut to the steering knuckle. Use a special drive socket to remove the shock absorber. Use a ratchet wrench.



 32 Lower the hydraulic transmission jack by 10-15 cm.




AUTODOC recommends:

- Replacement: coil springs – BMW E82. Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.

33

 Disconnect the steering knuckle from the shock absorber strut.



34

Unscrew the top fastening of the shock strut mount.

 


Replacement: coil springs – BMW E82. AUTODOC recommends:

- To avoid injuries, hold the shock strut when undoing the fastening bolts.


35

Remove the suspension strut.



36

 Set the shock absorber strut on the spring compressor tool.



Replacement: coil springs – BMW E82. AUTODOC experts recommend:

- Note that when using a spring compressor, spring coils need to be securely gripped, compressing the spring on the opposite sides.
- Ensure the correct position of the spring in the retainer.
- Make sure that the spring coils tightly entered the lock handles.


37

Compress the spring.




38


Remove the shock strut mount cap. Use a crowbar.

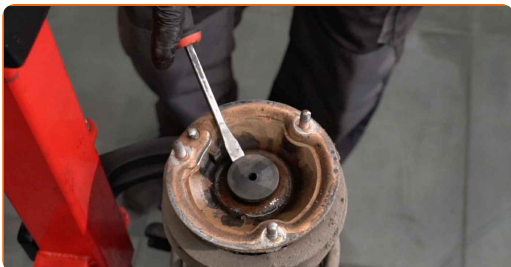

 
39 Treat the shock strut rod. Use a wire brush. Use WD-40 spray.



 
40 Remove the strut piston rod nut. Use a drive socket #21. Use HEX No.H6. Use a ratchet wrench.




41 Remove the top strut mount.

 

42 Release the coil spring.

 

43 Remove the spring.

 

AUTODOC recommends:

- Replacement: coil springs – BMW E82. Carefully inspect the mount, the boot, and the bump stop of the shock absorber. Replace if necessary.

44

Install the spring on the shock absorber.



 
45

Compress the spring.



46

Install the upper strut mount and the strut mount bearing.



47

Tighten the shock strut piston rod nut. Use a drive socket #21. Use HEX No.H6. Use a torque wrench. Tighten it to 64 Nm torque.



Replacement: coil springs – BMW E82. Tip from AUTODOC experts:

- Check to make sure the spring is positioned correctly. Avoid its misalignment.

 
48

Treat the shock strut rod. Use copper grease.




49

Install the shock strut mount cap.




50

 Decompress the spring.



51

 Remove the assembled shock strut.




52

Treat the shock strut mounting seat on the steering knuckle. Use a wire brush. Use WD-40 spray.




53

 Install the shock strut into the wheel arch.



54

 Screw the top fastening of the shock strut mount. Do not tighten it.




AUTODOC recommends:

- Important! Hold the suspension strut while screwing in the fastening bolts. BMW E82

55

Treat the shock strut mounting seat on the steering knuckle. Use a wire brush. Use WD-40 spray.

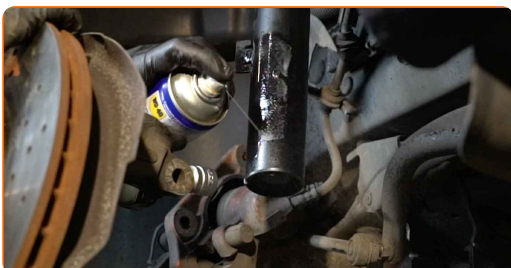


56 Fix the shock absorber strut on the steering knuckle.



57 Install the fastening bolt.



 
58 Remove the support from under the steering knuckle.




AUTODOC recommends:

- BMW E82 – Do not lower the transmission jack sharply to avoid damaging components and mechanisms of the car.

 
59 Clean the mounting seats and the thread of the suspension arm. Use a wire brush. Use WD-40 spray.




60 Install the control arms.

 


61 Install the fastening bolts.

 

 
62 Clean the mounting seats of the tie rod end. Use a wire brush. Use WD-40 spray.



 
63 Connect the tie rod end to the steering knuckle.



 
64 Screw on the fastening nut that connects the tie rod end to the steering knuckle. Use a drive socket #21. Use a ratchet wrench.



 
65 Install the brake caliper together with its bracket.



 
66 Tighten the brake caliper bracket. Use a drive socket #18. Use a torque wrench. Tighten it to 110 Nm torque.



 67 Screw in the fastener that connects the shock strut to the steering knuckle. Use a combination spanner #18. Use a drive socket #18. Use a ratchet wrench.



 68 Support the arm. Use a hydraulic transmission jack.




- 69** Tighten the rear fastener of the control arm. Use a combination spanner #18. Use a drive socket #18. Use a torque wrench. Tighten it to 68 Nm torque.+90°



AUTODOC recommends:

- Important! Be sure to use new fasteners.

 - 70** Tighten the front fastener connecting the control arm to the subframe. Use a combination spanner #18. Use a drive socket #18. Use a torque wrench. Tighten it to 68 Nm torque.+90°



AUTODOC recommends:

- Important! Be sure to use new fasteners.


71

Tighten the lower fasteners connecting the shock strut to the steering knuckle. Use a combination spanner #18. Use a drive socket #18. Use a torque wrench. Tighten it to 82 Nm torque.



72

Remove the support from under the arm.

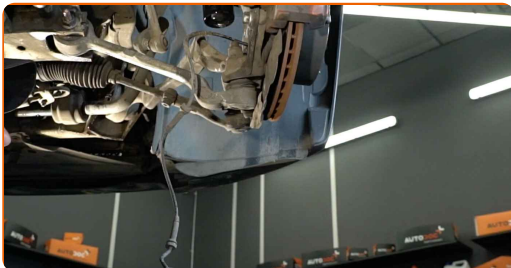

Replacement: coil springs – BMW E82. Tip from AUTODOC:

- Lower the hydraulic transmission jack smoothly, without jerks, to avoid damaging assemblies and mechanisms.

73

Tighten the fastening nut connecting the tie rod end to the steering knuckle. Use a drive socket #21. Use a torque wrench. Tighten it to 165 nm torque.




AUTODOC recommends:

- Important! Be sure to use new fasteners.


74

Attach the ABS sensor connector.

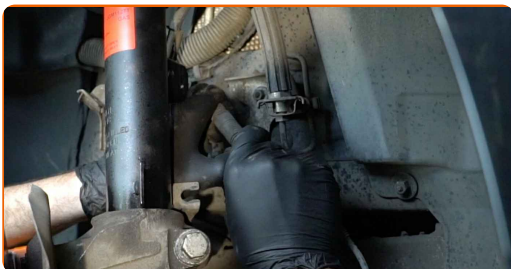


75

 Connect the ABS sensor wiring.




76

 Install the transverse stabilizer link.




77

 
Tighten the fastener connecting the stabilizer link to the shock strut. Use a combination spanner #18. Use a drive socket #15. Use a torque wrench. Tighten it to 58 Nm torque.



 
78 Treat all joints of the arm. Treat the shock strut fasteners. Use copper grease.



 79 Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



 80 Clean the brake disk surface. Use a brake cleaner.



AUTODOC recommends:

- Replacement: coil springs – BMW E82. After applying the spray, wait a few minutes.

81 Install the wheel.



Replacement: coil springs – BMW E82. Tip from AUTODOC experts:

- To avoid injury, hold up the wheel when screwing in the fastening bolts.

82

Screw in the wheel bolts. Use wheel impact socket #17.



 
83

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 nm torque.




84


Remove the jacks and chocks.



 
- 85** Tighten the upper fastener of the shock absorber strut mount. Use a drive socket #13. Use a torque wrench. Tighten it to 34 Nm torque.



 
- 86** Treat the fasteners of the shock strut mount. Use copper grease.



 - 87** Remove the fender protection cover.



- 88** Close the hood.

 

AUTODOC recommends:

- BMW E82 – Without starting the engine, press the brake pedal several times until it feels firm.

WELL DONE! [VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR BMW

COIL SPRINGS: A WIDE SELECTION

CHOOSE CAR PARTS FOR BMW E82

COIL SPRINGS FOR BMW: BUY NOW

COIL SPRINGS FOR BMW E82: THE BEST DEALS & OFFERS

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.