- AUTODOC CLUB

How to change rear coil springs on **BMW 1 Hatchback (E87)** – replacement guide



SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

(i) Important!

This replacement procedure can be used for: BMW 1 Hatchback (E87) 116d 2.0

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: BMW 3 Saloon (E90) 318i 2.0



REPLACEMENT: COIL SPRINGS – BMW 1 HATCHBACK (E87). LIST OF THE TOOLS YOU'LL NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Combination spanner #21
- Drive socket # E12
- Drive socket # 21

- Wheel impact socket #17
- Ratchet wrench
- Flat Screwdriver
- Crow bar
- Hydraulic transmission jack
- Wheel chock

Buy tools

+ AUTODOC CLUB





- Both coil springs of the rear suspension should be replaced simultaneously.
- The replacement procedure is identical for the left and right coil springs of the rear suspension.
- Please note: all work on the car BMW 1 Hatchback (E87) should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:



Secure the wheels with chocks.





Loosen the wheel mounting bolts. Use wheel impact socket #17.



3

Raise the rear of the car and secure on supports.





Unscrew the wheel bolts.



AUTODOC recommends:

• Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts. BMW 1 Hatchback (E87)

5

Remove the wheel.



6

Support the stub axle. Use a hydraulic transmission jack.



7

Clean the shock absorber fasteners. Use a wire brush. Use WD-40 spray.



8

Unscrew the lower fastener of the shock absorber. Use a drive socket #E12. Use a ratchet wrench.



9

Clean the control arm fasteners. Use a wire brush. Use WD-40 spray.

10

Unscrew the fastener connecting the control arm to the rear knuckle. Use a combination spanner #21. Use a drive socket #21. Use a ratchet wrench.



11

Remove the fastening bolt. Use a flat screwdriver.

12

Remove the support from under the stub axle.



AUTODOC recommends:

• Replacement: coil springs – BMW 1 Hatchback (E87). Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.



13

Pull down the suspension control arm. Use a crowbar.

14

Remove the spring.



15

Clean the coil spring mounting seats. Use a wire brush. Use WD-40 spray.



Pull down the suspension control arm. Use a crowbar.

16

17

Install the spring.



Replacement: coil springs – BMW 1 Hatchback (E87). Tip from AUTODOC experts:

• Make sure that the coil spring is correctly positioned in its mounting seats.

+ AUTODOC CLUB



18

Support the stub axle. Use a hydraulic transmission jack.



19

Tighten the lower fastener of the shock absorber. Use a drive socket #E12. Use a torque wrench. Tighten it to 47 Nm torque.



20 21 Treat the shock absorber fasteners. Use copper grease.

- Install the fastening bolt. Use a flat screwdriver.
- 22

Tighten the fastener connecting the suspension arm to the rear knuckle. Use a combination spanner #21. Use a drive socket #21. Use a torque wrench. Tighten it to 100 Nm torque.



23

Treat the rear knuckle fasteners. Use copper grease.



+ AUTODOC CLUB



24

Remove the support from under the stub axle.

AUTODOC recommends:

 BMW 1 Hatchback (E87) – Do not lower the transmission jack sharply to avoid damaging components and mechanisms of the car.



Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



26

Clean the brake disk surface. Use a brake cleaner.



AUTODOC recommends:

 Replacement: coil springs – BMW 1 Hatchback (E87). After applying the spray, wait a few minutes.



27

Install the wheel.



AUTODOC recommends:

• Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. BMW 1 Hatchback (E87)

28

Screw in the wheel bolts. Use wheel impact socket #17.



29

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 Nm torque.







Remove the jacks and chocks.






VIEW MORE TUTORIALS



AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

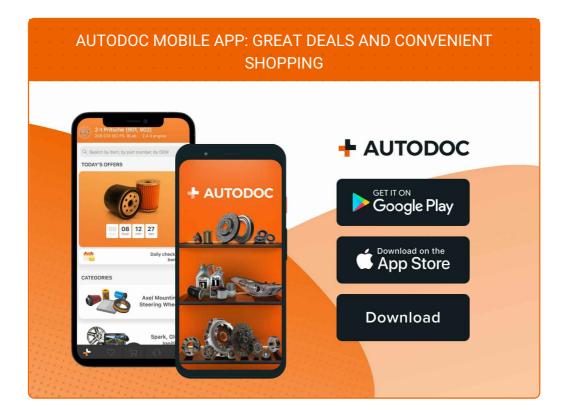

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

COIL SPRINGS: A WIDE SELECTION

(i) **DISCLAIMER**:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.