



How to change rear  
suspension lower control  
arm on **BMW 3 Coupe**  
**(E46)** – replacement  
guide

## SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

### **Important!**

This replacement procedure can be used for:

BMW 3 Coupe (E46) 323Ci 2.5, BMW 3 Coupe (E46) 328Ci 2.8, BMW 3 Coupe (E46) 320Ci 2.0, BMW 3 Coupe (E46) 318Ci 1.9, BMW 3 Coupe (E46) M3, BMW 3 Coupe (E46) 330xi 3.0, BMW 3 Coupe (E46) 320Ci 2.2, BMW 3 Coupe (E46) 325Ci 2.5, BMW 3 Coupe (E46) 316Ci 1.6, BMW 3 Coupe (E46) 318Ci 2.0, BMW 3 Coupe (E46) 330Cd 3.0, BMW 3 Coupe (E46) 320Cd 2.0, BMW 3 Coupe (E46) 330Ci 3.0

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: BMW X3 (E83) 2.5 i

**REPLACEMENT: REAR SUSPENSION LOWER CONTROL ARM – BMW 3 COUPE (E46). TOOLS YOU NEED:**



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Torque wrench
- Combination spanner #18
- Drive socket # 18
- Wheel impact socket #17
- Ratchet wrench
- Pin punch
- Hammer
- Crow bar
- Hydraulic transmission jack
- Wheel chock

**Buy tools**

Replacement: rear suspension lower control arm – BMW 3 Coupe (E46).  
AUTODOC experts recommend:

- The replacement procedure is identical for the left and right lower control arms.
- All work should be done with the engine stopped.

**REPLACEMENT: REAR SUSPENSION LOWER CONTROL ARM – BMW 3 COUPE (E46). USE THE FOLLOWING PROCEDURE:**

**1** Secure the wheels with chocks.

 
**2** Loosen the wheel mounting bolts. Use wheel impact socket #17.



**3** Raise the rear of the car and secure on supports.



**4** Unscrew the wheel bolts.

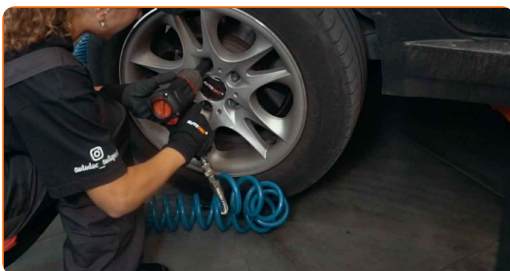

**AUTODOC recommends:**

- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts.  
BMW 3 Coupe (E46)

 
**5** Remove the wheel.




**6** Clean all joints of the arm. Use a wire brush. Use WD-40 spray.



**7** Make a mark on the camber adjustment bolt.

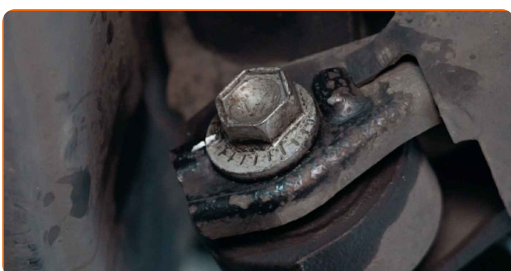

 **8** Unscrew the fastener connecting the control arm to the rear knuckle. Use a combination spanner #18. Use a drive socket #18. Use a ratchet wrench.

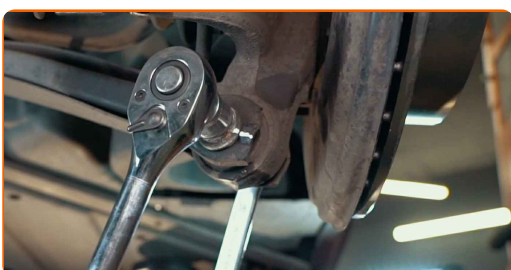

**9** Clean all joints of the arm. Use a wire brush.



**10** Remove the fastening bolt. Use a drive socket #18. Use a crowbar.



**11** Unscrew the fastener connecting the control arm to the subframe. Use a drive socket #18. Use a crowbar.



**12** Support the rear knuckle. Use a hydraulic transmission jack.



**13** Remove the fastening bolts. Use a pin punch. Use a hammer. Use a crowbar. Use a combination spanner #18.





**14** Remove the arm.



**15** Clean the mounting seats and the thread of the suspension arm. Use a wire brush. Use WD-40 spray.




**16** Install a new arm.



**AUTODOC recommends:**

 - Replacement: rear suspension lower control arm – BMW 3 Coupe (E46). Use only new bolts and nuts for installation.
- Do not damage the ball joint cover.


**17** Install the control arm fasteners. Use a combination spanner #18. Use a crowbar.

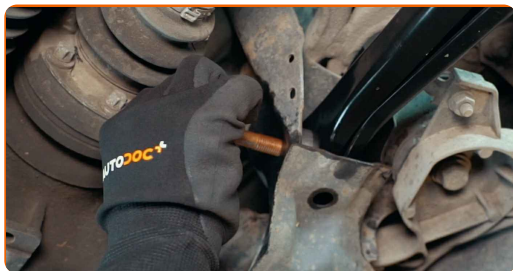


**18** Adjust the position of the alignment bolt according to the mark.



 **19** Screw in the fasteners connecting the control arm to the rear knuckle. Use a combination spanner #18. Use a drive socket #18. Use a ratchet wrench.

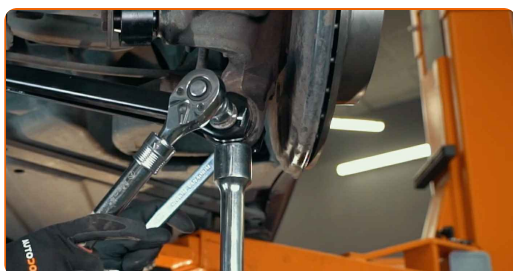

 
**20** Raise the hydraulic transmission jack by 10-15 cm.

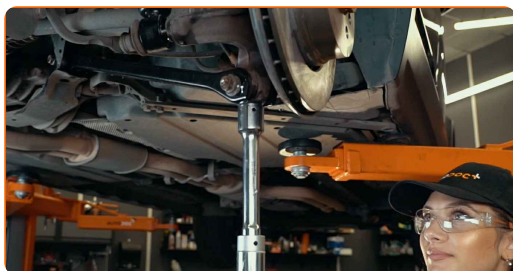



**21**

Tighten the fastener connecting the control arm to the rear knuckle. Use a combination spanner #18. Use a drive socket #18. Use a torque wrench. Tighten it to 100 Nm torque.

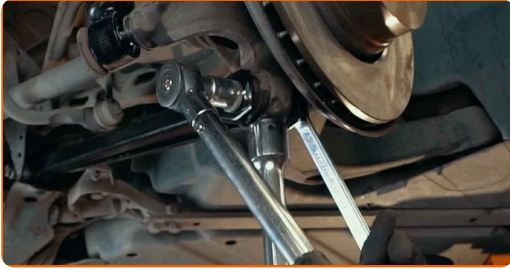

**22**

Tighten the fastener connecting the control arm to the subframe. Use a drive socket #18. Use a torque wrench. Tighten it to 77 Nm torque.



**23**

 
Remove the support from under the rear knuckle.



**AUTODOC recommends:**

- Replacement: rear suspension lower control arm – BMW 3 Coupe (E46). Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.

**24** Treat all joints of the arm. Use copper grease.

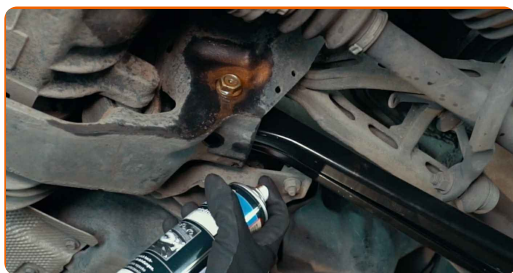

**25** Clean the wheel rim mounting seat. Use a wire brush.



**26** Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



**27** Clean the brake disk surface. Use a brake cleaner.



**AUTODOC recommends:**

- Replacement: rear suspension lower control arm – BMW 3 Coupe (E46). After applying the spray, wait a few minutes.

28

Install the wheel.



**AUTODOC recommends:**

- Important! Hold the wheel while screwing in the fastening bolts. BMW 3 Coupe (E46)

29

Screw in the wheel bolts. Use wheel impact socket #17.



30

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 140 Nm torque.



31

Remove the jacks and chocks.



**WELL DONE!** 

**VIEW MORE TUTORIALS**

# AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

**AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING**



**+ AUTODOC**

GET IT ON  
**Google Play**

 Download on the  
**App Store**

**Download**

**A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR**

**CONTROL ARM: A WIDE SELECTION**

## **DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.