


How to change fuel filter on **BMW 6 Convertible**(F12) – replacement guide





SIMILAR VIDEO TUTORIAL

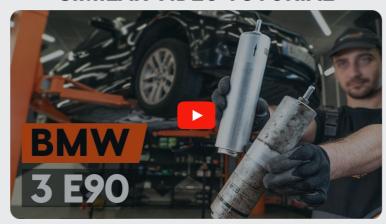

This video shows the replacement procedure of a similar car part on another vehicle

(i) Important!

This replacement procedure can be used for: BMW 6 Convertible (F12) 640d xDrive 3.0, BMW 6 Convertible (F12) 640d 3.0

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: BMW 3 Saloon (E90) 320d 2.0

CLUB.AUTODOC.CO.UK 1-10





REPLACEMENT: FUEL FILTER – BMW 6 CONVERTIBLE (F12). TOOLS YOU NEED:



- All-purpose cleaning spray
- Drive socket #8
- Drive socket # 13
- Torx bit T20
- Fluid container

- Flat screwdriver
- Crow bar
- Ratchet wrench
- Wheel chock

Buy tools

CLUB.AUTODOC.CO.UK 2-10





Replacement: fuel filter – BMW 6 Convertible (F12). Tip:

- Ensure adequate ventilation of the workplace. Fuel vapors are poisonous.
- All work should be done with the engine stopped.

REPLACEMENT: FUEL FILTER – BMW 6 CONVERTIBLE (F12). RECOMMENDED SEQUENCE OF STEPS:

- Open the fuel door.
- 2 Unscrew the fuel filler cap.
- Lift the car using a jack or place it over an inspection pit.
- Unscrew fixing bolts of the protective cover. Use a drive socket #8. Use a ratchet wrench.



Remove the protective cover.



CLUB.AUTODOC.CO.UK 3-10



9

10





6 Prepare a container for fluids.



Treat the fasteners attaching the tubes to the fuel filter. Use all-purpose cleaning spray.



Loosen the fuel filter clamps. Use a flat screwdriver.



Remove the snap ring of the fuel pressure regulator retainer clip.



Detach the fuel pressure regulator from the fuel filter. Use a crowbar.



CLUB.AUTODOC.CO.UK 4-10





Replacement: fuel filter – BMW 6 Convertible (F12). AUTODOC experts recommend:

• Be careful! Fuel may leak from the filter housing and hoses.





Disconnect the fuel supply lines from the fuel filter.



Unscrew the fastener of the fuel filter bracket. Use Torx T20. Use a ratchet wrench.



CLUB.AUTODOC.CO.UK 5-10









Remove the fuel filter. Put the old filter cartridge in the container.



15 Install a new fuel filter.

17

Replacement: fuel filter – BMW 6 Convertible (F12). AUTODOC recommends:

- Remember, it is important not to mix up the input and output of the filter. Arrows
 on the filter indicate the direction of fuel flow.
- During installation, take care to prevent dust and dirt from getting into the fuel filter housing.
- Attention! Use quality filters BMW 6 Convertible (F12).

Connect the fuel supply lines to the fuel filter.



Tighten the fuel supply line fastening. Use a flat screwdriver.



CLUB.AUTODOC.CO.UK 6-10







18 Ins

Install the bracket on the fuel filter.



Tighten the fastener of the fuel filter bracket. Use Torx T20. Use a ratchet wrench.



Tighten the fuel filter fasteners. Use a drive socket #13. Use a ratchet wrench.



Attach the fuel pressure regulator to the fuel filter. Install the snap ring of the fuel pressure regulator's retainer clip.



CLUB.AUTODOC.CO.UK 7-10







Take the fluid container away from under the fuel filter.



23 Install the protective cover.



Tighten fixing bolts of the protective cover. Use a drive socket #8. Use a ratchet wrench.



- Lower the car.
- Tighten the fuel filler cap.
- Close the fuel door.

 
Replacement: fuel filter – BMW 6 Convertible (F12). AUTODOC experts recommend:

• Before starting off, switch the ignition on and off several times. This should be done to activate the fuel pump to make it pump fuel through the fuel system.

CLUB.AUTODOC.CO.UK 8-10







29 Shut off the engine.

Replacement: fuel filter – BMW 6 Convertible (F12). Tip:

• To protect the environment from pollution, be sure to dispose of the used filters at special collection points.



VIEW MORE TUTORIALS

CLUB.AUTODOC.CO.UK 9-10





AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

FUEL FILTER: A WIDE SELECTION

(i) DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2021 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.

CLUB.AUTODOC.CO.UK 10-10