How to change engine radiator on **BMW 7 (E38)** – replacement guide



SIMILAR VIDEO TUTORIAL




This video shows the replacement procedure of a similar car part on another vehicle

(i) Important!

This replacement procedure can be used for: BMW 7 (E38) 730d 2.9, BMW 7 (E38) 740d 3.9

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: BMW 5 Touring (E39) 530d 3.0

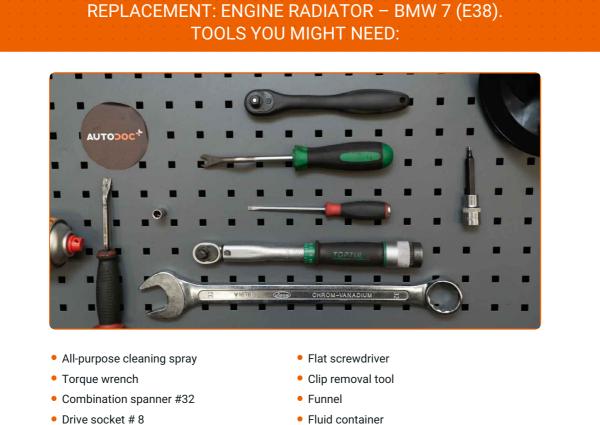

- HEX bit No.H5
- Ratchet wrench

- Crow bar
- Fender cover

Buy tools

3

O



Replacement: engine radiator – BMW 7 (E38). AUTODOC experts recommend:

- Follow the terms, recommendations and requirements of the part operation provided by the manufacturer.
- Check the coolant condition and replace it if necessary.
- Please note: all work on the car BMW 7 (E38) should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

Open the hood.



1

Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.



Unscrew the coolant reservoir cap.





Remove the fan shroud clips. Use a clip removal tool.





5

Unscrew the cooling fan fastener. Use a combination spanner #32 (2 pieces).



6

Remove the fan shroud. Remove the cooling fan.



7

Prepare a container for fluids.



8

Open the coolant drain tap.



9

Drain the coolant from the engine.





Replacement: engine radiator – BMW 7 (E38). Tip:

- Caution! The coolant can be very hot.
- Wear gloves to prevent contact with hot liquid.
- All work should be done with the engine stopped.
- Wait until the coolant has completely flowed out of the drain hole.

Close the coolant drain tap.

11

10

Detach the clamp of the upper coolant hose. Use a crowbar.



12

Detach the upper coolant hose.



Replacement: engine radiator – BMW 7 (E38). Tip from AUTODOC experts:

• Caution! Coolant may leak from radiator openings.





Detach the clamp of the lower coolant pipe. Use a crowbar.





Detach the lower coolant pipe.



Replacement: engine radiator – BMW 7 (E38). AUTODOC recommends:

• Caution! Coolant may leak from radiator openings.

15

Unscrew the radiator fasteners. Use a drive socket #8. Use a ratchet wrench.



16

Remove the radiator.







Install the new radiator.



18

Screw in the radiator fasteners. Use a drive socket #8. Use a ratchet wrench.



19

Clean the coolant hose. Use all-purpose cleaning spray.



20

Attach the lower coolant pipe.



21

Attach the clamp of the lower coolant pipe.





22

Clean the coolant hose. Use all-purpose cleaning spray.



23

Attach the upper coolant hose.



24

Attach the clamp of the upper coolant hose.



25

Install the cooling fan. Install the fan shroud.



26

Tighten the cooling fan fastener. Use a combination spanner #32 (2 pieces). Use a torque wrench. Tighten it to 33 Nm torque.







Install the fan shroud clips.



28

Unscrew the engine cover fastener. Use HEX No.H5. Use a ratchet wrench.



29

Remove the engine cover.



AUTODOC recommends:

 Replacement: engine radiator – BMW 7 (E38). Do not use excessive force when removing the part as this may damage it.



Open the coolant system bleed screw. Use a flat screwdriver.





31

Remove the coolant reservoir cap.



32

Insert the funnel.



33

Pour coolant in the coolant reservoir.



Replacement: engine radiator – BMW 7 (E38). Tip:

- Only use the coolant recommended by the manufacturer.
- The coolant level should be at the MAX mark.
- Wait until the air goes out of the system.





Close the coolant system bleed screw. Use a flat screwdriver.



35

Run the engine for a few minutes. This should be done in order to remove residual air from the cooling system and to check if the components are operating correctly.

Shut off the engine.



36

Check the coolant level. If necessary, top up to the required level.



38

Open the coolant system bleed screw. Use a flat screwdriver.



Replacement: engine radiator - BMW 7 (E38). AUTODOC recommends:

• This should be done in order to remove residual air from the cooling system and to check if the components are operating correctly.



Close the coolant system bleed screw. Use a flat screwdriver.



40

Install the coolant reservoir cap.

41

Screw on the coolant reservoir cap.



42

Install the engine cover and secure it.



AUTODOC recommends:

 Replacement: engine radiator – BMW 7 (E38). To avoid damaging the part during installation, do not use excessive force.



Screw in the engine cover fasteners. Use HEX No.H5. Use a ratchet wrench.



44

Remove the fender protection cover.



Close the hood.



VIEW MORE TUTORIALS

f

Ø



AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

ENGINE RADIATOR: A WIDE SELECTION

i DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.