+ AUTODOC CLUB

How to change front brake discs on **Fiat Bravo 2** – replacement guide







VIDEO TUTORIAL



(i) Important!

This replacement procedure can be used for:

FIAT FIORINO Box Body / Estate (225) 1.3 D Multijet, FIAT BRAVO II (198) 1.6 D Multijet, FIAT QUBO (225) 1.3 D Multijet, FIAT COUPE (FA/175) 2.0 16V Turbo, FIAT BRAVO I (182) 2.0 HGT 20V, FIAT Doblo Cargo (223_) 1.3 JTD 16V Multijet, FIAT Doblo Cargo (223_) 1.9 JTD Multijet, FIAT MAREA (185) 2.0 150 20V, FIAT MAREA (185) 2.4 TD 125, FIAT MAREA Weekend (185) 2.0 150 20V, FIAT MAREA Weekend (185) 2.4 TD 125, FIAT BRAVO II (198) 1.9 D Multijet, FIAT CROMA (154) 2.5 V6, FIAT Idea (350_) 1.3 D Multijet, FIAT Idea (350_) 1.6 D Multijet, (+ 48)

The steps may slightly vary depending on the car design.

CLUB.AUTODOC.CO.UK 1-15







REPLACEMENT: BRAKE DISCS – FIAT BRAVO 2. LIST OF THE TOOLS YOU'LL NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Drive socket # 12
- Drive socket # 13
- Drive socket # 19

- Wheel impact socket #17
- Brake caliper wind back tool
- Ratchet wrench
- Torque wrench
- Tap wrench
- Crow bar
- Wheel chock

BUY TOOLS

CLUB.AUTODOC.CO.UK 2-15







Replacement: brake discs – Fiat Bravo 2. AUTODOC recommends:

- Replace the brake disks on the car Fiat Bravo 2 in complete set for each axis.
 Regardless of the state of components. This will ensure even braking.
- The replacement procedure is identical for both brake disks on the same axle.
- When changing the brake discs, always replace the brake pads.
- Please note: all work on the car Fiat Bravo 2 should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1

Open the bonnet. Unscrew the brake fluid reservoir cap.



2

Secure the wheels with chocks.



CLUB.AUTODOC.CO.UK 3-15







Loosen the wheel mounting bolts. Use wheel impact socket #17.



Raise the front of the car and secure on supports.



Unscrew the wheel bolts.



Replacement: brake discs – Fiat Bravo 2. Tip:

• To avoid injury, hold up the wheel when unscrewing the bolts.

6 Remove the wheel.



CLUB.AUTODOC.CO.UK 4-15







Disconnect the brake pad wear sensor plug.



Please note!

- Some cars are not equipped with the brake pad wear sensor.
- Spread the brake pads. Use a crowbar.



Clean the brake caliper fasteners. Use a wire brush. Use WD-40 spray.



Unscrew the brake caliper fastening. Use a drive socket #13. Use a ratchet wrench.



10

CLUB.AUTODOC.CO.UK 5-15







11 Remove the brake caliper.



Replacement: brake discs – Fiat Bravo 2. AUTODOC experts recommend:

- Tie the caliper to the suspension or to the body with a wire without disconnecting from the brake hose to prevent depressurization of the brake system.
- Make sure that the brake caliper is not hanging on the brake hose.
- Don't press the brake pedal after the brake caliper has been removed. As a result, the piston can fall out from the brake cylinder, and brake fluid leakage and depressurization of the system may occur.

Remove the brake pads. Use a crowbar.

12



CLUB.AUTODOC.CO.UK 6-15







Clean the brake caliper bracket fasteners. Use a wire brush. Use WD-40 spray.



Unscrew the caliper bracket fastening. Use a drive socket #19. Use a ratchet wrench. Use a tap wrench.



Remove the caliper bracket.

16



Clean the brake disc fasteners. Use a wire brush. Use WD-40 spray.



CLUB.AUTODOC.CO.UK 7–15







Unscrew the brake disc fastening. Use a drive socket #12. Use a ratchet wrench.



18 Remove the brake disc.



Clean the hub. Use a wire brush. Treat the contacting surface. Use copper grease.



20 Install the brake disc.



CLUB.AUTODOC.CO.UK 8-15







Tighten the brake disc fastening. Use a drive socket #12. Use a torque wrench. Tighten it to 10 Nm torque.



Clean the brake caliper bracket from dirt and dust. Use a wire brush. Use a brake cleaner.



AUTODOC recommends:

- Replacement: brake discs Fiat Bravo 2. After applying the spray, wait a few minutes.
- 23 Install the brake caliper bracket.



CLUB.AUTODOC.CO.UK 9-15







Tighten the brake caliper bracket. Use a drive socket #19. Use a torque wrench. Tighten it to 110 Nm torque.



25 Install the brake pads.

27




Treat the brake caliper piston. Use a brake cleaner.



Replacement: brake discs – Fiat Bravo 2. Tip from AUTODOC:

• After applying the spray, wait a few minutes.

Press in the brake caliper piston. Use brake caliper wind back tool.

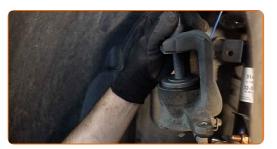

CLUB.AUTODOC.CO.UK 10-15







Install the brake caliper and fix it. Use a drive socket #13. Use a torque wrench. Tighten it to 30 Nm torque.



Connect the brake pad wear sensor plug.



Clean the brake disk surface. Use a brake cleaner.



AUTODOC recommends:

- Replacement: brake discs Fiat Bravo 2. After applying the spray, wait a few minutes.
- Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



CLUB.AUTODOC.CO.UK 11-15







32 Install the wheel.



Replacement: brake discs – Fiat Bravo 2. Tip from AUTODOC experts:

• To avoid injury, hold up the wheel when screwing in the fastening bolts.

Screw in the wheel bolts. Use wheel impact socket #17.



Lower the car and working in a cross order, tighten the wheel bolts. Use a torque wrench. Tighten it to 120 Nm torque.



Replacement: brake discs – Fiat Bravo 2. Professionals recommend:

• Check the brake fluid level in the expansion tank and refill if necessary.

CLUB.AUTODOC.CO.UK 12-15







Tighten the brake fluid reservoir cap. Close the hood.



AUTODOC recommends:

• Fiat Bravo 2 – Without starting the engine, press the brake pedal several times until it feels firm.

36

Remove the jacks and chocks.





VIEW MORE TUTORIALS

CLUB.AUTODOC.CO.UK 13-15





AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR FIAT

BRAKE DISCS: A WIDE SELECTION

CLUB.AUTODOC.CO.UK 14-15







BRAKE DISCS FOR FIAT: BUY NOW

BRAKE DISCS FOR FIAT BRAVO 2: THE BEST DEALS & OFFERS

i DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.

CLUB.AUTODOC.CO.UK 15-15