# - AUTODOC CLUB

How to change rear coil springs on **Fiat Bravo 2** – replacement guide




#### **VIDEO TUTORIAL**



(i) Important!

This replacement procedure can be used for: FIAT Bravo II Hatchback (198) 1.4 16V, FIAT Bravo II Hatchback (198) 1.6 D Multijet, FIAT Bravo II Hatchback (198) 1.9 D Multijet, FIAT Bravo II Hatchback (198) 1.4 LPG, FIAT Bravo II Hatchback (198) 1.4, FIAT Bravo II Hatchback (198) 1.4 T-Jet, FIAT Bravo II Hatchback (198) 2.0 D Multijet

The steps may slightly vary depending on the car design.

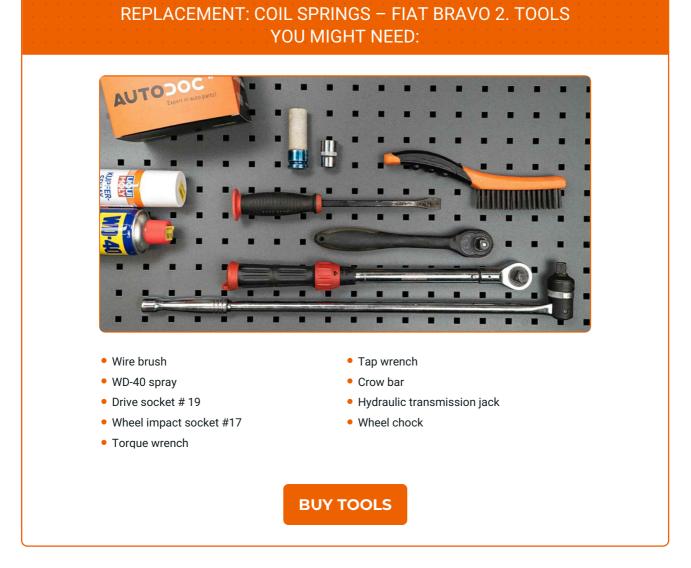

A

O



#### Replacement: coil springs – Fiat Bravo 2. Professionals recommend:

- Both coil springs of the rear suspension should be replaced simultaneously.
- The replacement procedure is identical for the left and right coil springs of the rear suspension.
- All work should be done with the engine stopped.

## **REPLACEMENT: COIL SPRINGS – FIAT BRAVO 2. TAKE THE FOLLOWING STEPS:**



Secure the wheels with chocks.



2

Loosen the wheel mounting bolts. Use wheel impact socket #17.



3

Raise the rear of the car and secure on supports.







Unscrew the wheel bolts.



#### AUTODOC recommends:

• Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts. Fiat Bravo 2



Remove the wheel.



6

Support the rear suspension beam. Use a hydraulic transmission jack.



7

Clean the shock absorber fasteners. Use a wire brush. Use WD-40 spray.





Unscrew the lower fastener of the shock absorber. Use a drive socket #19. Use a tap wrench.



9

Remove the mounting from under the rear axle beam.



#### AUTODOC recommends:

 Replacement: coil springs – Fiat Bravo 2. Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.



Support the rear suspension beam. Use a hydraulic transmission jack.





Unscrew the lower fastener of the shock absorber. Use a drive socket #19. Use a tap wrench.



12

Lower the hydraulic transmission jack by 10-15 cm.



#### AUTODOC recommends:

 Fiat Bravo 2 – Do not lower the transmission jack sharply to avoid damaging components and mechanisms of the car.

13

Remove the spring.



14

Inspect the rubber mounts of the suspension spring. Replace if necessary.



Clean the coil spring mounting seats. Use a wire brush. Use WD-40 spray.



16

Pull down the rear suspension beam. Use a crowbar.



17

Install the coil spring together with the rubber mounts into the mounting seats.



18

Support the rear suspension beam. Use a hydraulic transmission jack.



19

Screw in the lower fastener of the shock absorber. Use a drive socket #19.





Remove the mounting from under the rear axle beam.



#### AUTODOC recommends:

• Replacement: coil springs – Fiat Bravo 2. Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.

21

Support the rear suspension beam. Use a hydraulic transmission jack.



22

 
Tighten the lower fastener of the shock absorber. Use a drive socket #19. Use a torque wrench. Tighten it to 110 Nm torque.



23

Install the wheel.





႐ြံ

#### AUTODOC recommends:

• Important! Hold the wheel while screwing in the fastening bolts. Fiat Bravo 2

24

Screw in the wheel bolts. Use wheel impact socket #17.



25

Lower the car and working in a cross order, tighten the wheel bolts. Use a torque wrench. Tighten it to 120 Nm torque.



26

Remove the jacks and chocks.






**VIEW MORE TUTORIALS** 



#### AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

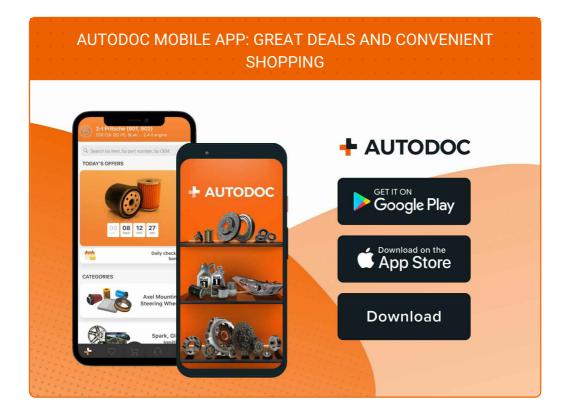

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

#### **BUY SPARE PARTS FOR FIAT**

**COIL SPRINGS: A WIDE SELECTION** 



#### **CHOOSE CAR PARTS FOR FIAT BRAVO 2**

#### **COIL SPRINGS FOR FIAT: BUY NOW**

### COIL SPRINGS FOR FIAT BRAVO 2: THE BEST DEALS & OFFERS

#### (i) **DISCLAIMER**:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.