# - AUTODOC CLUB

How to change front brake discs on **Audi A6 4F2** – replacement guide



#### **VIDEO TUTORIAL**



(i) Important!

This replacement procedure can be used for:

AUDI A6 C6 Saloon (4F2) 3.0 TFSI quattro, AUDI A6 C6 Avant (4F5) 3.0 TFSI quattro, AUDI A6 C6 Saloon (4F2) 3.2 FSI, AUDI A8 D3 (4E2, 4E8) 4.2 quattro, AUDI A8 D3 (4E2, 4E8) 3.7 quattro, AUDI A8 D3 (4E2, 4E8) 4.0 TDI quattro, AUDI A8 D3 (4E2, 4E8) 3.0, AUDI A8 D3 (4E2, 4E8) 6.0 W12 quattro, AUDI A6 C6 Saloon (4F2) 2.4, AUDI A6 C6 Saloon (4F2) 3.2 FSI quattro, AUDI A6 C6 Saloon (4F2) 4.2 quattro, AUDI A6 C6 Saloon (4F2) 3.0 TDI quattro, AUDI A8 D3 (4E2, 4E8) 3.0 TDI quattro, AUDI A6 C6 Saloon (4F2) 2.7 TDI, AUDI A6 C6 Saloon (4F2) 2.4 quattro, (+ 34)

The steps may slightly vary depending on the car design.





- Wire brush
- Brake cleaner
- Copper grease
- Torx bit T30
- HEX bit no.H7.
- Drive socket # 21
- Wheel impact socket #17

• Brake caliper wind back tool

A

O

- Ratchet wrench
- Torque wrench
- Tap wrench
- Crow bar
- Wheel chock

**BUY TOOLS** 



#### Replacement: brake discs – Audi A6 4F2. AUTODOC recommends:

- Replace the brake disks on the car Audi A6 4F2 in complete set for each axis. Regardless of the state of components. This will ensure even braking.
- The replacement procedure is identical for both brake disks on the same axle.
- When changing the brake discs, always replace the brake pads.
- All work should be done with the engine stopped.

## **REPLACEMENT: BRAKE DISCS – AUDI A6 4F2. RECOMMENDED SEQUENCE OF STEPS:**



Open the bonnet. Unscrew the brake fluid reservoir cap.



2

Secure the wheels with chocks.





Loosen the wheel mounting bolts. Use wheel impact socket #17.



4

Raise the front of the car and secure on supports.



5

Unscrew the wheel bolts.



#### AUTODOC recommends:

• Important! Hold the wheel while unscrewing the fastening bolts. Audi A6 4F2



Remove the wheel.





Disconnect the brake pads wear sensor. Use a crowbar.



#### Please note!

• Some cars are not equipped with the brake pad wear sensor.



Spread the brake pads. Use a crowbar.



9

Remove the dust boot caps of the brake caliper guide pins. Use a crowbar.



10

Unscrew the brake caliper fastening. Use HEX No.H7. Use a ratchet wrench.





Detach the brake caliper retaining spring. Use a crowbar.



#### 12

Remove the brake caliper.



#### Replacement: brake discs – Audi A6 4F2. Tip from AUTODOC experts:

- Tie the caliper to the suspension or to the body with a wire without disconnecting from the brake hose to prevent depressurization of the brake system.
- Make sure that the brake caliper is not hanging on the brake hose.
- Don't press the brake pedal after the brake caliper has been removed. As a result, the piston can fall out from the brake cylinder, and brake fluid leakage and depressurization of the system may occur.
- Check the brake caliper bracket, brake caliper guide pins and boots. Clean them. Replace, if necessary.



Remove the brake pads.



14

Unscrew the caliper bracket fastening. Use a drive socket #21. Use a ratchet wrench. Use a tap wrench.



15

Remove the caliper bracket.



16

Unscrew the brake disc fastening. Use Torx T30. Use a ratchet wrench.



17

Remove the brake disc.



Clean the hub. Use a wire brush. Treat the contacting surface. Use copper grease.



19

Install the brake disc.



20

Tighten the brake disc fastening. Use Torx T30. Use a torque wrench. Tighten it to 5 Nm torque.



21

Clean the brake caliper bracket from dirt and dust. Use a wire brush. Use a brake cleaner.



#### AUTODOC recommends:

 Replacement: brake discs – Audi A6 4F2. After applying the spray, wait a few minutes.



Install the brake caliper bracket.



23

Tighten the brake caliper bracket. Use a drive socket #21. Use a torque wrench. Tighten it to 190 Nm torque.



24

Treat the brake caliper piston. Use a brake cleaner.



Replacement: brake discs – Audi A6 4F2. Professionals recommend:

• After applying the spray, wait a few minutes.



Press in the brake caliper piston. Use brake caliper wind back tool.



26

Install the brake pads.



27

Install the brake caliper and fix it. Use HEX No.H7. Use a torque wrench. Tighten it to 30 Nm torque.



28

Install the dust boot caps of the brake caliper guide pins.



29

Connect the brake pads wear sensor.



### + AUTODOC CLUB



30

Install the brake caliper retaining spring. Use a crowbar.



31

Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



32

Clean the brake disk surface. Use a brake cleaner.



#### AUTODOC recommends:

 Replacement: brake discs – Audi A6 4F2. After applying the spray, wait a few minutes.

33

Install the wheel.





#### Replacement: brake discs - Audi A6 4F2. AUTODOC experts recommend:

• To avoid injury, hold up the wheel when screwing in the fastening bolts.



Screw in the wheel bolts. Use wheel impact socket #17.



35

Lower the car and working in a cross order, tighten the wheel bolts. Use a torque wrench. Tighten it to 120 Nm torque.



36

Remove the jacks and chocks.



#### AUTODOC recommends:

 Important! Replacement: brake discs – Audi A6 4F2. Check the brake fluid level in the reservoir and top up if necessary.



Tighten the brake fluid reservoir cap.

#### Replacement: brake discs – Audi A6 4F2. Tip:

• Without starting the engine, press the brake pedal several times until you feel significant resistance.

38

Close the hood.






**VIEW MORE TUTORIALS** 



#### AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

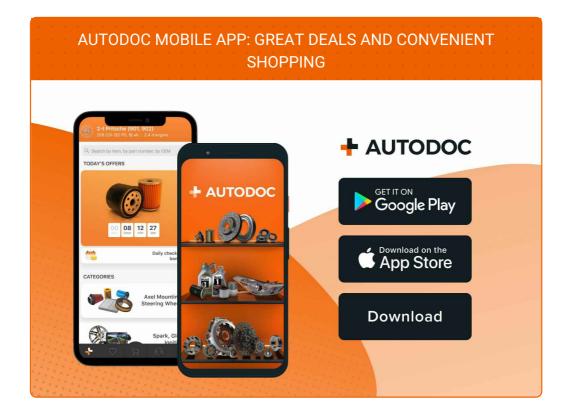

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

#### **BUY SPARE PARTS FOR AUDI**

**BRAKE DISCS: A WIDE SELECTION** 



#### **CHOOSE CAR PARTS FOR AUDI A6 4F2**

#### **BRAKE DISCS FOR AUDI: BUY NOW**

## BRAKE DISCS FOR AUDI A6 4F2: THE BEST DEALS & OFFERS

#### (i) **DISCLAIMER**:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.