



How to change fuel filter
on **Audi A6 4F2** –
replacement guide

VIDEO TUTORIAL

** Important!**

This replacement procedure can be used for:

AUDI A4 Saloon (8EC, B7) 2.0 TDI, AUDI A4 Saloon (8EC, B7) 2.0 TDI 16V, AUDI A4 Avant (8ED, B7) 2.0 TDI 16V, AUDI A6 Avant (4F5, C6) 2.0 TDI, AUDI A6 Saloon (4F2, C6) 2.0 TDI, AUDI A4 Saloon (8EC, B7) 2.0 TDI quattro, AUDI A4 Avant (8ED, B7) 2.0 TDI, AUDI A4 Avant (8ED, B7) 2.0 TDI quattro

The steps may slightly vary depending on the car design.

REPLACEMENT: FUEL FILTER – AUDI A6 4F2. TOOLS
YOU MIGHT NEED:



- All-purpose cleaning spray
- Torx bit T25
- Drive socket # 10
- Flat Screwdriver
- Clic-R collar pliers
- Fender cover

BUY TOOLS

Replacement: fuel filter – Audi A6 4F2. Tip from AUTODOC:

- Ensure adequate ventilation of the workplace. Fuel vapors are poisonous.
- All work should be done with the engine stopped.

REPLACEMENT: FUEL FILTER – AUDI A6 4F2. TAKE THE FOLLOWING STEPS:

1


Open the bonnet.

**2**

Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

**3**

Remove the engine cover.

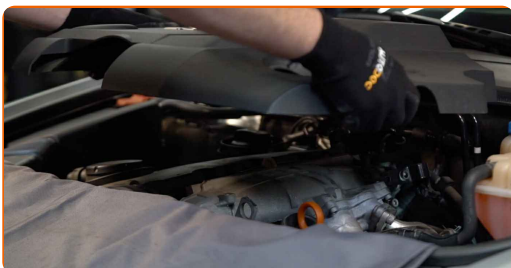

Replacement: fuel filter – Audi A6 4F2. Tip from AUTODOC:

- Raise the engine cover, holding it on two sides simultaneously.

4

Unscrew the fasteners of the coolant reservoir. Use Torx T25.



 
5

Remove the coolant reservoir.



6


Clean the fuel filter. Use all-purpose cleaning spray.



7

Loosen the fastening clamp of the fuel filter pipe. Use clic-R collar pliers.

 
8 Disconnect the pipe from the fuel filter.




Replacement: fuel filter – Audi A6 4F2. Tip from AUTODOC experts:

- Be careful! Fuel may leak from the filter housing and hoses.

 9 Loosen the fuel filter mounting. Use a drive socket #10.



 10 Disconnect the pipe from the fuel filter.




11 Remove the fuel filter. Put the old filter cartridge in the container.




12

 Remove the o-rings. Use a flat screwdriver.



13

 Install new o-rings. Use a flat screwdriver.



14


Install a new fuel filter.




Replacement: fuel filter – Audi A6 4F2. Professionals recommend:

- Make sure that the fuel filter is positioned correctly. Consider the fuel flow direction mark.
- During installation, take care to prevent dust and dirt from getting into the fuel filter housing.
- Audi A6 4F2 – It's important to only use high-quality car parts.

 
15 Attach the pipe to the fuel filter.



16 Attach the pipe to the fuel filter.

 

 
17 Tighten the fuel filter fasteners. Use a drive socket #10.




18 Tighten the fastening clamp of the fuel filter pipe. Use clic-R collar pliers.



 
19 Install the coolant reservoir.



 20 Screw in the coolant reservoir fasteners. Use Torx T25.



 21 Run the engine for a few minutes. This is necessary in order to make sure that the component operates properly.



22 Shut off the engine.



23 Install the engine cover and secure it.



Replacement: fuel filter – Audi A6 4F2. Tip from AUTODOC experts:

- Make sure the engine cover is properly seated. It should not be displaced with respect to the guiding fasteners.
- Do not apply excessive force when installing the part. Otherwise you may damage the fasteners.

24

Remove the fender protection cover.



25

Close the hood.

Replacement: fuel filter – Audi A6 4F2. AUTODOC recommends:

- To protect the environment from pollution, be sure to dispose of the used filters at special collection points.

WELL DONE! 

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR AUDI

FUEL FILTER: A WIDE SELECTION

CHOOSE CAR PARTS FOR AUDI A6 4F2

FUEL FILTER FOR AUDI: BUY NOW

FUEL FILTER FOR AUDI A6 4F2: THE BEST DEALS & OFFERS

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.