



How to change front coil
springs on **CITROËN C4**
CACTUS – replacement
guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle


Important!

This replacement procedure can be used for:
CITROËN C4 CACTUS 1.2 VTi 82, CITROËN C4 CACTUS 1.2 VTi 75

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: PEUGEOT 208 I Hatchback (CA_, CC_) 1.2

**REPLACEMENT: COIL SPRINGS – CITROËN C4 CACTUS.
TOOLS YOU MIGHT NEED:**

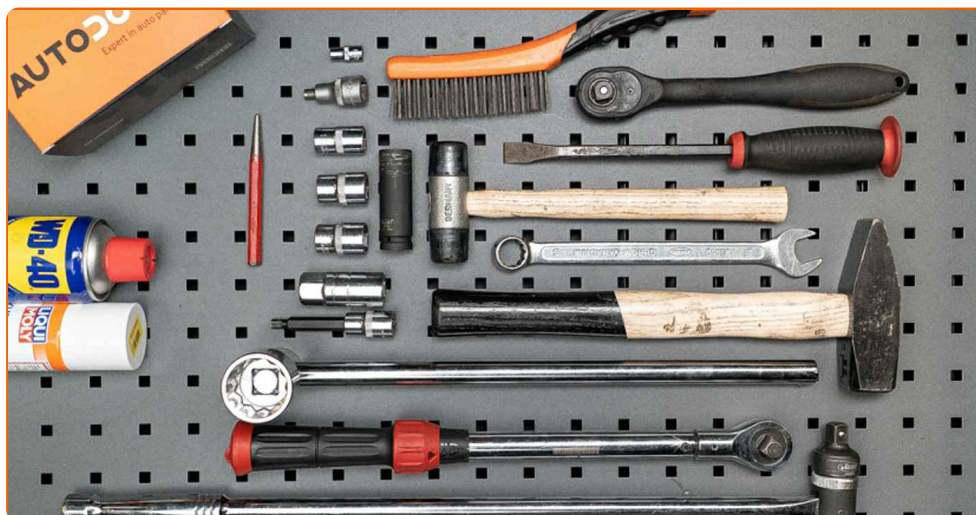

- Wire brush
- WD-40 spray
- Copper grease
- HEX bit No.H7
- Combination spanner #19
- Drive socket # E8
- Drive socket # 16
- Drive socket # 18
- Drive socket # 19
- Drive socket # 32
- Wheel impact socket #17
- Shock absorber socket
- Ratchet wrench
- Torque wrench
- Pin punch
- Hammer
- Tap wrench
- Rubber mallet
- Crow bar
- Hydraulic strut spring compressor
- Hydraulic transmission jack
- Fender cover
- Wheel chock

Buy tools

Replacement: coil springs – CITROËN C4 CACTUS. Professionals recommend:

- Both coil springs of the front suspension should be replaced simultaneously.
- The replacement procedure is identical for the left and right coil springs of the front suspension.
- All work should be done with the engine stopped.

REPLACEMENT: COIL SPRINGS – CITROËN C4 CACTUS. TAKE THE FOLLOWING STEPS:

 
1 Open the bonnet.

2 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

3 Remove the wiper cowl grille located on the right side.



4 Remove the shock strut mount cap.



5

Clean the fasteners of the shock strut upper mount. Use a wire brush. Use WD-40 spray.



6

Loosen the upper fastener of the shock strut mount. Use a drive socket #21. Use HEX No.H7. Use a ratchet wrench.



7

Secure the wheels with chocks.




8

Loosen the wheel mounting bolts. Use wheel impact socket #17.



9

Loosen the fastener of the driveshaft. Use a drive socket #32. Use a tap wrench.

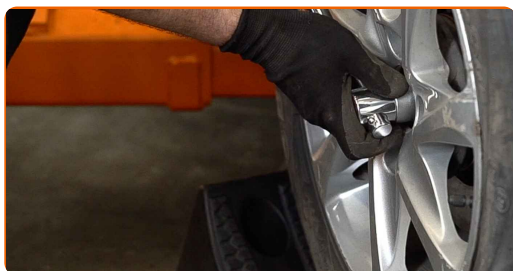

10

Raise the front of the car and secure on supports.

11

Unscrew the wheel bolts.



AUTODOC recommends:


- Important! Hold the wheel while unscrewing the fastening bolts. CITROËN C4 CACTUS

12


Remove the wheel.




13 Disconnect the wiring and the brake hose from the bracket on the shock strut.

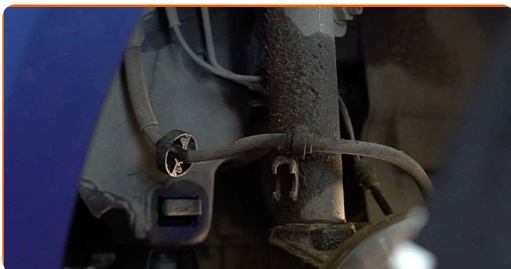

 
14 Clean the shock strut fasteners. Use a wire brush. Use WD-40 spray.



15 Unscrew the nut and remove the stabilizer rod from the shock strut. Use a drive socket #16.

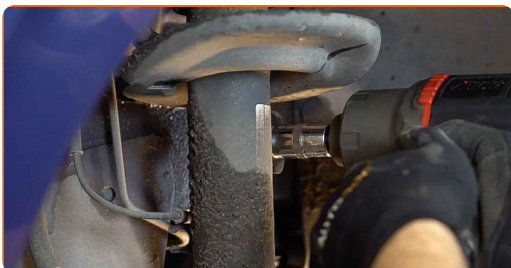

 16 Clean the fasteners connecting the shock strut to the steering knuckle. Use a wire brush. Use WD-40 spray.




17

Unscrew the lower fastener connecting the shock strut to the steering knuckle. Use a drive socket #18.




18

 Prop up the steering knuckle. Use a hydraulic transmission jack.




19

 Take out the fasteners connecting the shock strut to the steering knuckle.




20

 Unscrew the fasteners of the stabilizer bush brackets. Use a drive socket #18. Use a ratchet wrench.




21

Clean the fastener connecting the ball joint to the steering knuckle. Use a wire brush. Use WD-40 spray.

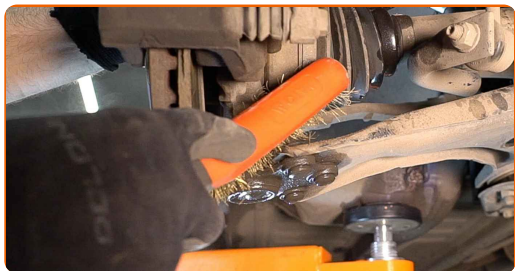


22

Unscrew the ball joint fastening to the steering knuckle. Use a drive socket #E8. Use a drive socket #18. Use a ratchet wrench.

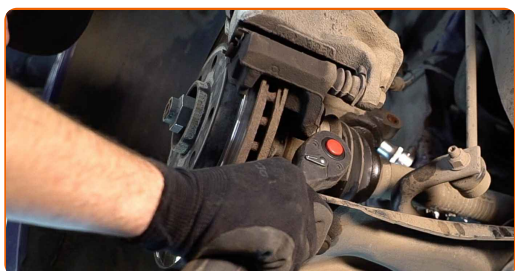

23

Remove the fastening bolt.

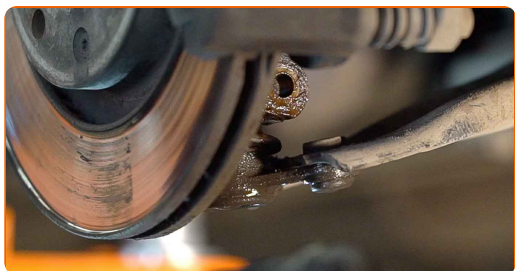


24

Unscrew the fastener connecting the drive shaft to the wheel hub. Use a drive socket #32. Use a tap wrench.




25

Detach the driveshaft from the steering knuckle. Use a pin punch. Use a hammer.

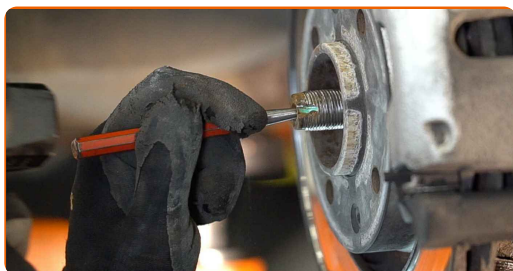

26

Lower the hydraulic transmission jack by 10-15 cm.

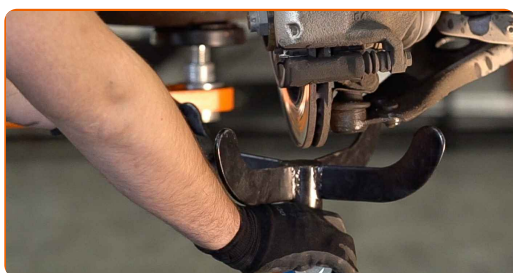


AUTODOC recommends:

- CITROËN C4 CACTUS – Do not lower the transmission jack sharply to avoid damaging components and mechanisms of the car.


27

Disconnect the lower arm from the steering knuckle. Use a crowbar.

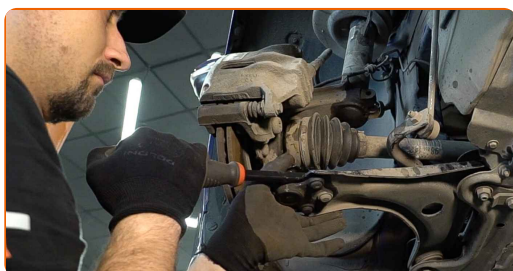


28

Prop up the steering knuckle. Use a hydraulic transmission jack.

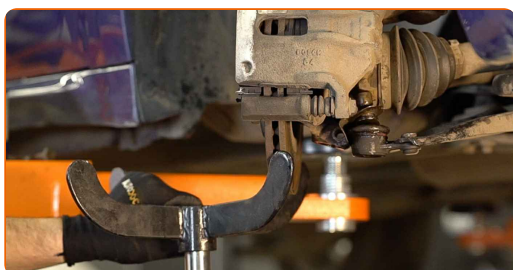

29 Remove the drive shaft.

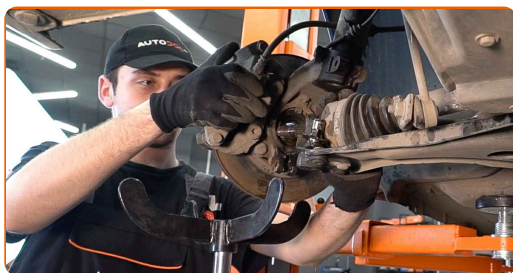

30 Release the lower fastener connecting the shock strut to the steering knuckle. Use a special drive socket to remove the shock absorber. Use a ratchet wrench.



31 Disconnect the steering knuckle from the shock absorber strut. Use a rubber mallet.

32 Unscrew the top fastening of the shock strut mount.

 


AUTODOC recommends:

- CITROËN C4 CACTUS – To avoid injury, hold the suspension strut while unscrewing the fastening bolts.

33

Remove the suspension strut.



34

Set the shock absorber strut on the spring compressor tool.



Replacement: coil springs – CITROËN C4 CACTUS. Tip from AUTODOC experts:

- Note that when using a spring compressor, spring coils need to be securely gripped, compressing the spring on the opposite sides.
- Ensure the correct position of the spring in the retainer.
- Make sure that the spring coils tightly entered the lock handles.

35

 
Compress the spring.




36 Remove the strut piston rod nut. Use a combination spanner #19. Use HEX No.H7. Use a ratchet wrench.




37 Remove the top strut mount.



38 Release the coil spring.

 


39 Remove the spring.

 


AUTODOC recommends:

- Replacement: coil springs – CITROËN C4 CACTUS. Carefully inspect the mount, the boot, and the bump stop of the shock absorber. Replace if necessary.

 40 Install the spring on the shock absorber.



41 Compress the spring.

 

42 Install the upper strut mount and the strut mount bearing.



 
43 Tighten the shock strut piston rod nut. Use a combination spanner #19. Use HEX No.H7. Use a torque wrench. Tighten it to 60 Nm torque.




Replacement: coil springs – CITROËN C4 CACTUS. Tip:

- Check to make sure the spring is positioned correctly. Avoid its misalignment.

44 Decompress the spring.



45 Remove the assembled shock strut.

 

46 Install the shock strut into the wheel arch.



47 Screw the top fastening of the shock strut mount. Do not tighten it.




AUTODOC recommends:

- CITROËN C4 CACTUS – To avoid injury, hold the suspension strut while screwing in the fastening bolts.


48

Treat the shock strut mounting seat on the steering knuckle. Use a wire brush. Use WD-40 spray.

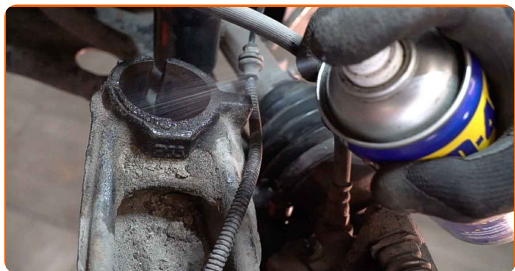


49

Fix the shock absorber strut on the steering knuckle.

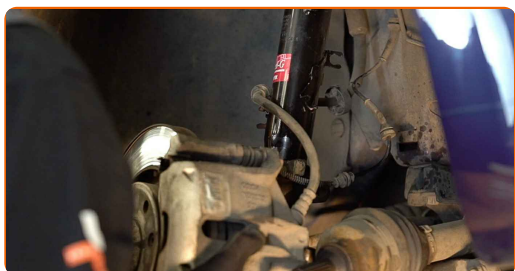


50

Clean the splines of the drive shaft CV joint. Use a wire brush. Use WD-40 spray.

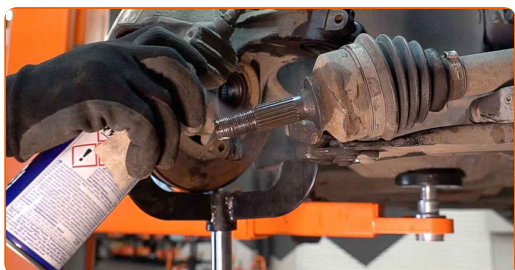


51

Mount the drive shaft into the wheel hub.

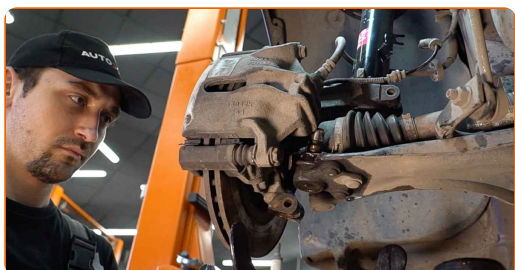


52

Screw the nut of the drive shaft.

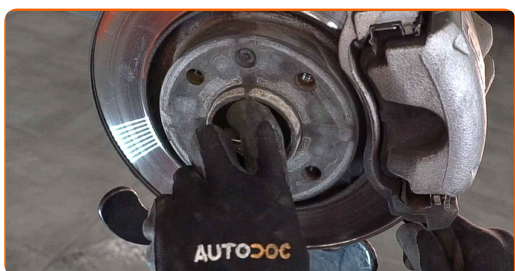

 
53 Remove the support from under the steering knuckle.




AUTODOC recommends:

- Replacement: coil springs – CITROËN C4 CACTUS. Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.

 54 Connect the ball joint to the steering knuckle.



 
55 Support the arm. Use a hydraulic transmission jack.




56 Install the fastening bolt.



 57 Install and tighten a new bolt of the steering knuckle.



 58 Screw the fastener connecting the ball joint to the steering knuckle. Use a drive socket #16. Use a drive socket #18. Use a ratchet wrench.



59 Screw in the fastener that connects the shock strut to the steering knuckle. Use a drive socket #18.



60 Remove the support from under the arm.



AUTODOC recommends:

- CITROËN C4 CACTUS – Do not lower the transmission jack sharply to avoid damaging components and mechanisms of the car.

61

Clean the mounting seats of the stabilizer bushes. Use WD-40 spray.



 
62

Screw the fasteners of the stabilizer bush brackets. Use a drive socket #18. Use a ratchet wrench.




63

Install the transverse stabilizer link. Use a drive socket #16.



64

 Tighten the lower fasteners connecting the shock strut to the steering knuckle. Use a drive socket #18. Use a torque wrench. Tighten it to 55 Nm torque.




65

Tighten the ball joint fastener. Use a drive socket #16. Use a torque wrench. Tighten it to 40 Nm torque.




66

 Tighten the fastener connecting the stabilizer link to the shock strut. Use a drive socket #16. Use a torque wrench. Tighten it to 43 Nm torque.




67

 Fasten the brake hose on the strut. Connect the fastener of the ABS sensor cable to the shock absorber strut.




68

 Treat the shock strut fasteners. Use copper grease.




69

Clean the wheel rim mounting seat. Use a wire brush. Treat the contacting surface. Use copper grease.

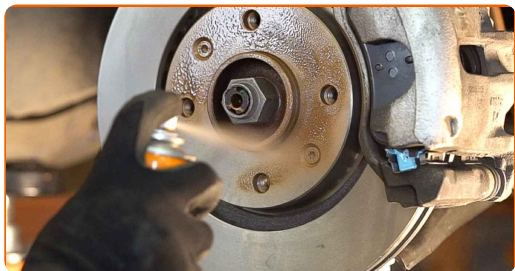

70

Install the wheel.

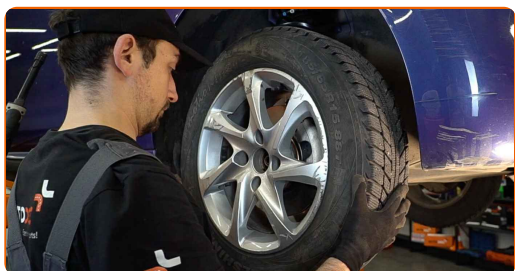

AUTODOC recommends:

- Important! Hold the wheel while screwing in the fastening bolts. CITROËN C4 CACTUS

71

Screw in the wheel bolts. Use wheel impact socket #17.



 
72

Lower the car.


- 73** Tighten the upper fastener of the shock absorber strut mount. Use a drive socket #21. Use HEX No.H7. Use a torque wrench. Tighten it to 60 Nm torque.




- 74** Install the shock strut mount cap.



 - 75** Install and secure the wiper cowl grille located on the right side.



 - 76** Tighten the drive shaft nut. Use a drive socket #32. Use a torque wrench. Tighten it to 245 Nm torque.



77

Tighten the wheel bolts using a criss-cross pattern. Use a torque wrench. Tighten it to 100 Nm torque.

**78**

 
Remove the fender protection cover.

79

Close the hood.

80

Remove the jacks and chocks.



WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

COIL SPRINGS: A WIDE SELECTION

i **DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.