



How to change ignition
coil on **CITROËN C4**
Grand Picasso I (UA_) –
replacement guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!


This replacement procedure can be used for:

CITROËN C4 Grand Picasso I (UA_) 1.6 VTi 120, CITROËN C4 Grand Picasso I (UA_) 1.6 16V

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: PEUGEOT 207 Hatchback 1.6 16V VTi

REPLACEMENT: IGNITION COIL – CITROËN C4 GRAND PICASSO I (UA_). LIST OF THE TOOLS YOU'LL NEED:

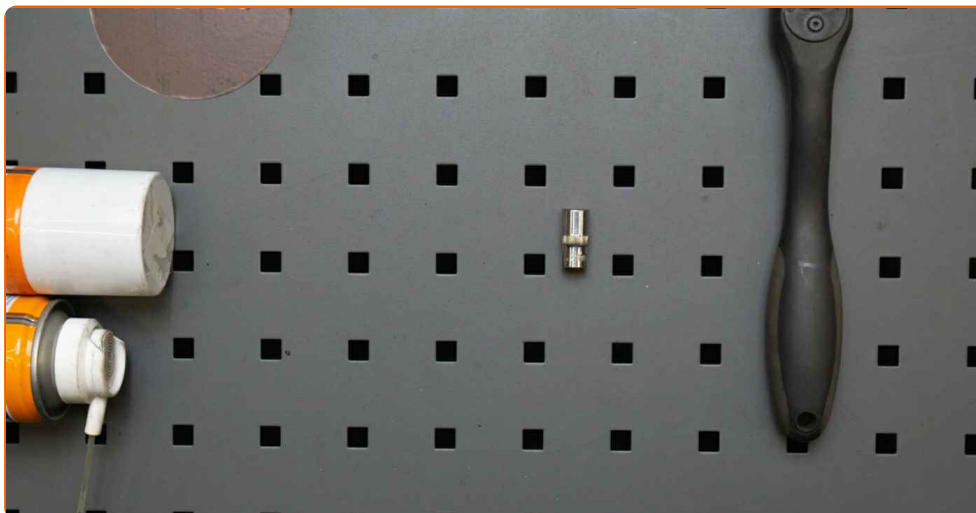

- Electronic spray
- Drive socket # 8
- Ratchet wrench
- Fender cover

Buy tools

Replacement: ignition coil – CITROËN C4 Grand Picasso I (UA_). Tip from AUTODOC experts:

- The replacement procedure is the same for the ignition coils of all cylinders.
- Please note: all work on the car – CITROËN C4 Grand Picasso I (UA_) – should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1 Open the hood.

2 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

3 Unscrew the engine cover fastener. Use a drive socket #8. Use a ratchet wrench.



4 Remove the engine cover.



AUTODOC recommends:

- Replacement: ignition coil – CITROËN C4 Grand Picasso I (UA_). To avoid damaging the part when removing it, do not use excessive force.

5

Detach the connector from the ignition coil.



6

Take out the ignition coil from the spark plug well.



7

Clean dirt, dust and debris from inside the spark plug wells.



8

Install the new ignition coil to the spark plug well. Make sure you hear a click indicating that it is locked in place.



- 9** Treat the ignition coil connector with electronic spray. The spray will protect the electrical contacts from corrosion, oxidation, and will reduce the contact resistance.



- 10** Plug in the ignition coil connector. Make sure you hear a click indicating that it is locked in place.



- 11** Install the engine cover and secure it.



Replacement: ignition coil – CITROËN C4 Grand Picasso I (UA_). Tip:

- Make sure the engine cover is properly seated. It should not be displaced with respect to the guiding fasteners.
- When installing, do not use excessive force to avoid damage to the part.

12

Screw in the engine cover fasteners. Use a drive socket #8. Use a ratchet wrench.



13

Run the engine for a few minutes. This is necessary in order to make sure that the component operates properly.

14

Shut off the engine.

15

Remove the fender protection cover.

16

Close the hood.

WELL DONE! 

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

 Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

IGNITION COIL: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.