



How to change front
lower arm on **CITROËN**
DS3 – replacement guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

i Important!


This replacement procedure can be used for:

CITROËN DS3 1.6 Racing, CITROËN DS3 1.6 THP 150, CITROËN DS3 1.4 HDi 70, CITROËN DS3 1.4 VTi 95, CITROËN DS3 1.6 VTi 120, CITROËN DS3 1.6 THP 155, CITROËN DS3 1.6 HDi 90, CITROËN DS3 1.6 HDi 110, CITROËN DS3 1.6, CITROËN DS3 1.4 VTi 98, CITROËN DS3 1.2 VTi 82, CITROËN DS3 1.4 VTi 95 LPG, CITROËN DS3 1.6 HDi 115, CITROËN DS3 1.6 BlueHDi 120, CITROËN DS3 1.6 BlueHDi 100, (+ 3)

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: PEUGEOT 208 I Hatchback (CA_, CC_) 1.2

**REPLACEMENT: FRONT LOWER ARM – CITROËN DS3.
LIST OF THE TOOLS YOU'LL NEED:**

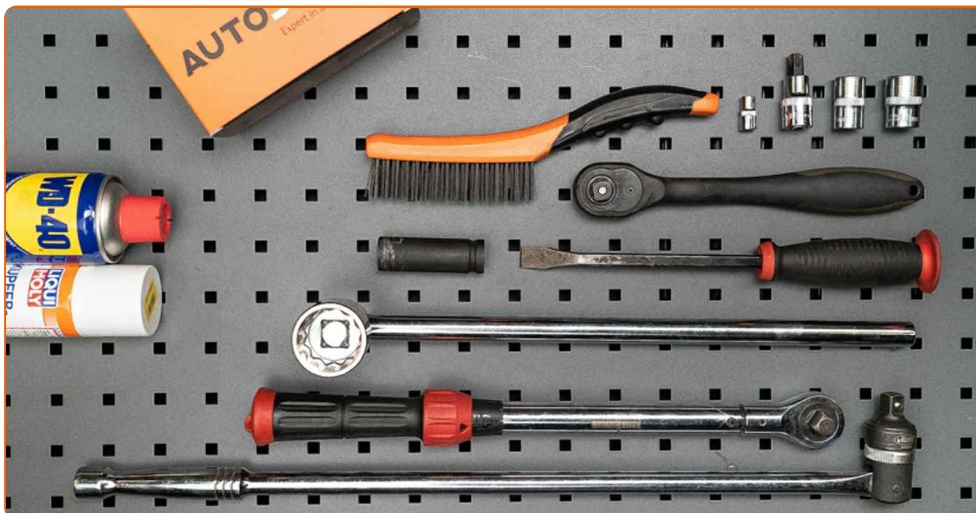

- Wire brush
- WD-40 spray
- Copper grease
- Torx bit T55
- Drive socket # E8
- Drive socket # 16
- Drive socket # 18
- Drive socket # 32
- Wheel impact socket #17
- Ratchet wrench
- Torque wrench
- Tap wrench
- Crow bar
- Hydraulic transmission jack
- Wheel chock

Buy tools

Replacement: front lower arm – CITROËN DS3. Tip:

- The replacement procedure is identical for the left and right lower control arms.
- All work should be done with the engine stopped.

REPLACEMENT: FRONT LOWER ARM – CITROËN DS3. USE THE FOLLOWING PROCEDURE:

 
1 Secure the wheels with chocks.



2 Loosen the wheel mounting bolts. Use wheel impact socket #17.



3 Loosen the fastener of the driveshaft. Use a drive socket #32. Use a tap wrench.



4 Raise the front of the car and secure on supports.

 
5 Unscrew the wheel bolts.




AUTODOC recommends:

- Important! Hold the wheel while unscrewing the fastening bolts. CITROËN DS3

6 Remove the wheel.



 
7 Clean all joints of the arm. Use a wire brush. Use WD-40 spray.




8 Unscrew the ball joint fastening to the steering knuckle. Use a drive socket #E8. Use a drive socket #18. Use a ratchet wrench.



 
9 Remove the fastening bolt.



 
10 Loosen the rear fastener of the control arm. Use a drive socket #18. Use a tap wrench.



 11 Loosen the front fastener of the control arm. Use a drive socket #18. Use a tap wrench.



 
12 Unscrew the rear arm fastener. Use Torx T55. Use a drive socket #18. Use a ratchet wrench.




13 Remove the fastening bolt.



 
14 Disconnect the ball joint from the steering knuckle. Use a crowbar.



 
15 Unscrew the fastener connecting the drive shaft to the wheel hub.



 
16 Detach the driveshaft from the steering knuckle.



 
17 Unscrew the front arm fastener. Use Torx T55. Use a drive socket #18. Use a ratchet wrench.




18 Remove the fastening bolt.

 


19 Remove the arm. Use a crowbar.

 

 20 Clean the mounting seats and the thread of the suspension arm. Use a wire brush. Use WD-40 spray.



21 Install a new arm.

 


Replacement: front lower arm – CITROËN DS3. AUTODOC recommends:

- During the installation process, use only new bolts and nuts.
- Do not damage the ball joint cover.

22

 Install the control arm fasteners.



23

Clean the splines of the drive shaft CV joint. Use WD-40 spray.



 
24

Mount the drive shaft into the wheel hub.



25

Connect the ball joint to the steering knuckle. Use a crowbar.




26 Support the arm. Use a hydraulic transmission jack.




27 Install the fastening bolt.



28 Screw the fastener connecting the ball joint to the steering knuckle. Use a drive socket #16. Use a drive socket #E8. Use a ratchet wrench.

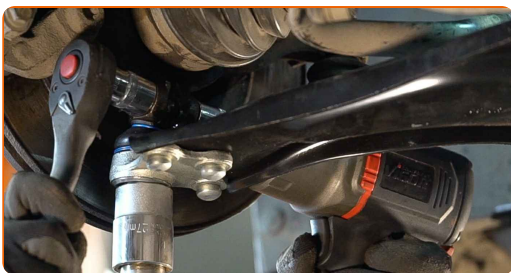

29 Screw the rear arm fastener. Use a drive socket #18.

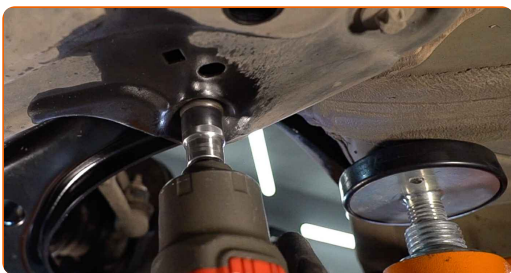


30 Screw the front arm fastener. Use a drive socket #18.




31

 Tighten the ball joint fastener. Use a drive socket #16. Use a torque wrench. Tighten it to 40 Nm torque.




32

 Tighten the front fastener connecting the control arm to the subframe. Use a drive socket #18. Use a torque wrench. Tighten it to 120 Nm torque.




33

Tighten the rear fastener of the control arm. Use a drive socket #18. Use a torque wrench. Tighten it to 120 Nm torque.

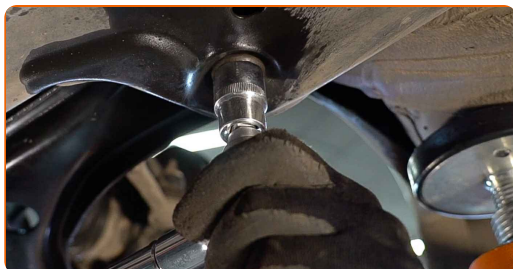

34

 Remove the support from under the arm.




AUTODOC recommends:

- Replacement: front lower arm – CITROËN DS3. Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.


35

 Treat all joints of the arm. Use copper grease.




36

 Screw the nut of the drive shaft.




37

 Clean the wheel rim mounting seat. Use a wire brush. Treat the contacting surface. Use copper grease.



38

 Install the wheel.



Replacement: front lower arm – CITROËN DS3. AUTODOC experts recommend:

- To avoid injury, hold up the wheel when screwing in the fastening bolts.

39

Screw in the wheel bolts. Use wheel impact socket #17.

 


40

Lower the car.


41

Tighten the drive shaft nut. Use a drive socket #32. Use a torque wrench. Tighten it to 245 Nm torque.



42

 Tighten the wheel bolts using a criss-cross pattern. Use a torque wrench. Tighten it to 100 Nm torque.



43

Remove the jacks and chocks.



WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

CONTROL ARM: A WIDE SELECTION

(i) DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.