



# How to change air filter on **Honda CR-V II** – replacement guide

## VIDEO TUTORIAL




### Important!

This replacement procedure can be used for:

HONDA FR-V (BE) 2.2 i CTDi (BE5), HONDA CR-V III (RE) 2.2 i-CTDi 4WD (RE6),  
HONDA CR-V III (RE) 2.2 i-DTEC 4WD (RE6)

The steps may slightly vary depending on the car design.

## REPLACEMENT: AIR FILTER – HONDA CR-V II. TOOLS YOU'LL NEED:

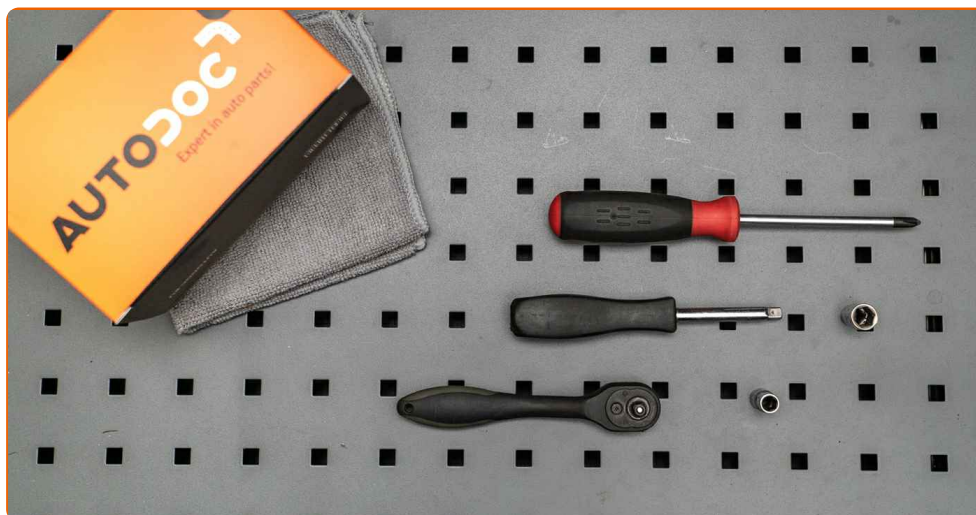

- Drive socket # 5.5
- Drive socket # 8
- Drive socket # 10
- Ratchet wrench
- Flat Screwdriver
- Fender cover

**BUY TOOLS**


### Replacement: air filter – Honda CR-V II. Tip from AUTODOC:

- Follow the terms, recommendations and requirements of the part operation provided by the manufacturer.
- Please note: all work on the car – Honda CR-V II – should be done with the engine switched off.

## CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:


1

Open the bonnet.

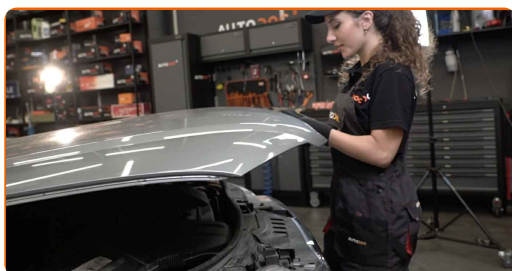


2

Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

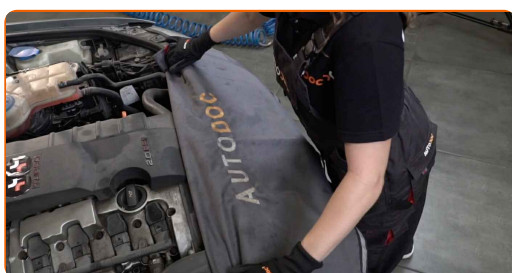


3


Detach the air intake hose clamp. Use a drive socket #5.5. Use a ratchet wrench.

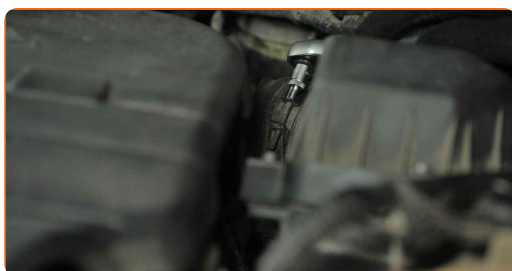


- 4 Disconnect the air intake pipe from the air filter housing.

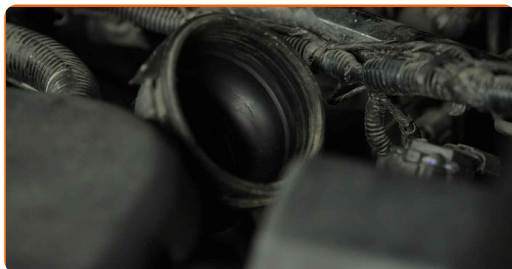


- 5 Unplug the mass air flow sensor connector. Use a flat screwdriver.

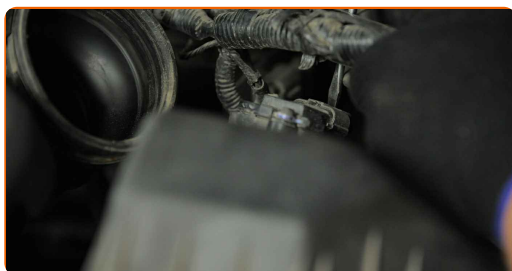

- 6 Unscrew the air filter housing fastener. Use a drive socket #10. Use a ratchet wrench.

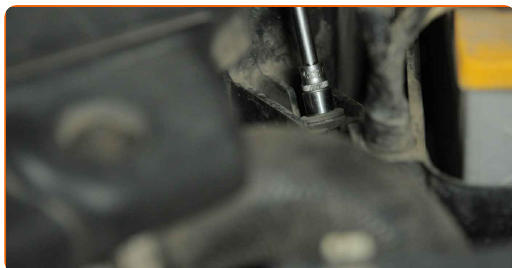


- 7 Unscrew the engine cover fastener. Use a drive socket #10. Use a ratchet wrench.

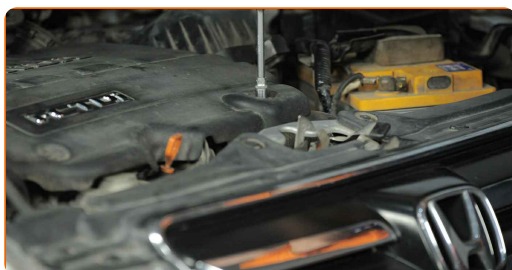

8

Remove the engine cover.

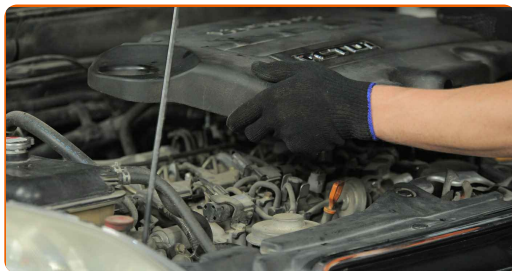


Replacement: air filter – Honda CR-V II. Tip from AUTODOC experts:

- Raise the engine cover, holding it on two sides simultaneously.
- Do not apply excessive force when removing the part. Otherwise you may damage it.

9

Remove the air filter housing.

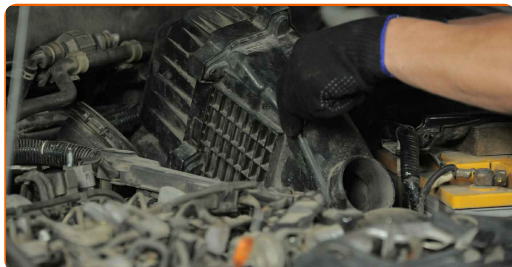

10

Undo the fastening screws of the air filter cover. Use a drive socket #8. Use a ratchet wrench.



11

Take off the filter lid.



### AUTODOC recommends:

- Replacement: air filter – Honda CR-V II. Do not use excessive force when removing the part as this may damage it.

12

Remove the filter element from the filter housing.




13

Clean the air filter cover and housing.

14

Insert a new filter element into the filter housing. Make sure that the filter edge fits tight to the housing.

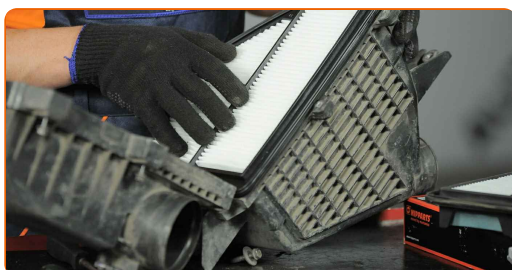



### Replacement: air filter – Honda CR-V II. Professionals recommend:

- Check out the correct location of the filter element. Do not skew.
- Attention! Use quality filters – Honda CR-V II.
- During installation, make sure to prevent dust and dirt from getting into the air filter housing.

15

Reinstall the air filter cover. Fasten it.




### AUTODOC recommends:

- Replacement: air filter – Honda CR-V II. Do not use excessive force when removing the part as this may damage it.

16

Screw in the fastening screws of the air filter cover. Use a drive socket #8. Use a ratchet wrench.

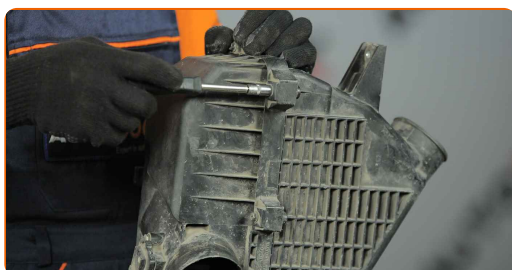




- 17 Reinstall the air filter housing.




- 18 Screw the filter housing fastening bolts. Use a drive socket #10. Use a ratchet wrench.




- 19 Connect the air intake pipe to the air filter housing.

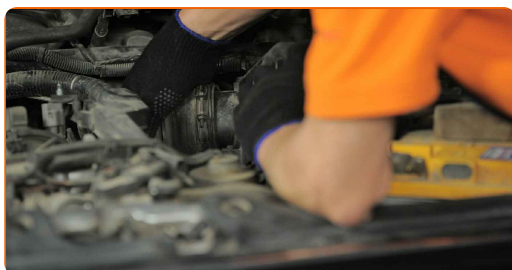

- 20 Fasten the clamp on the air intake hose. Use a drive socket #5.5. Use a ratchet wrench.

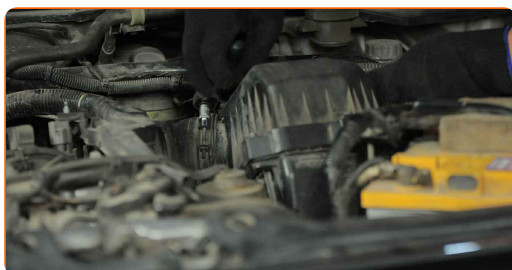

- 21 Plug in the mass air flow sensor connector.

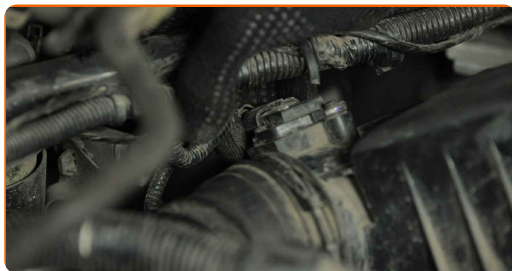


- 22 Install the engine cover and secure it.



### Replacement: air filter – Honda CR-V II. AUTODOC recommends:


- Make sure the engine cover is properly seated. It should not be displaced with respect to the guiding fasteners.
- Replacement: air filter – Honda CR-V II. Do not use excessive force during installation. This may damage the part.

- 23 Screw in the engine cover fasteners. Use a drive socket #10. Use a ratchet wrench.

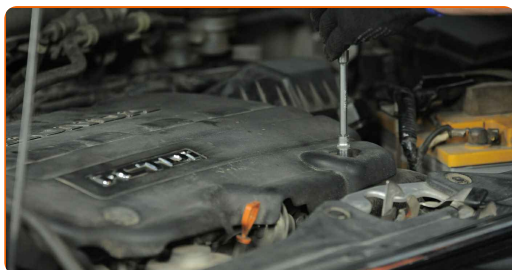


24

 Remove the fender protection cover.



25

 Close the hood.

**WELL DONE!** [VIEW MORE TUTORIALS](#)

## AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

**AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING**



**AUTODOC**

GET IT ON  
**Google Play**

Download on the  
**App Store**

**Download**

**A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR**

**BUY SPARE PARTS FOR HONDA**

**AIR FILTER: A WIDE SELECTION**

[\*\*CHOOSE CAR PARTS FOR HONDA CR-V II\*\*](#)[\*\*AIR FILTER FOR HONDA: BUY NOW\*\*](#)[\*\*AIR FILTER FOR HONDA CR-V II: THE BEST DEALS & OFFERS\*\*](#)

### **DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.