




How to change front
strut mount on **Honda**
CR-V II – replacement
guide

VIDEO TUTORIAL

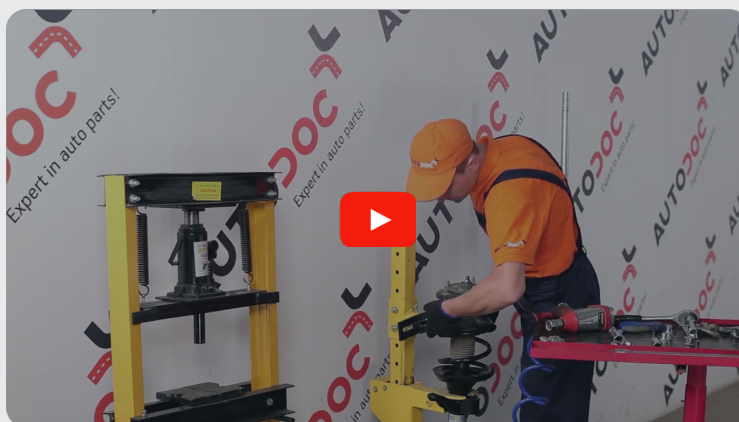

Important!

This replacement procedure can be used for:

HONDA CIVIC VII Hatchback (EU, EP, EV) 1.4 iS, HONDA CIVIC VII Hatchback (EU, EP, EV) 1.6 i, HONDA CIVIC VII Coupe (EM2) 1.6 i, HONDA CIVIC VII Hatchback (EU, EP, EV) 1.4 i, HONDA STREAM (RN) 1.7 16V (RN1), HONDA STREAM (RN) 2.0 16V (RN3), HONDA CIVIC VII Coupe (EM2) 1.7 i, HONDA CIVIC VII Coupe (EM2) 1.7 i VTEC, HONDA CIVIC VII Hatchback (EU, EP, EV) 2.0 Type-R, HONDA CIVIC VII Hatchback (EU, EP, EV) 1.7 CTDi, HONDA CR-V II (RD_) 2.0 (RD4), HONDA CIVIC VII Hatchback (EU, EP, EV) 2.0 i Sport, HONDA Civic VII Saloon (ES, ET) 1.4, HONDA Civic VII Saloon (ES, ET) 1.6, HONDA CR-V II (RD_) 2.4 Vtec 4WD

The steps may slightly vary depending on the car design.

**REPLACEMENT: STRUT MOUNT – HONDA CR-V II.
TOOLS YOU'LL NEED:**



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Drive socket # 10
- Drive socket # 12
- Drive socket # 14
- Drive socket # 22
- Combination spanner #17
- Combination spanner #19
- HEX bit no.H7.
- Wheel impact socket #19
- Ratchet wrench
- Torque wrench
- Hydraulic strut spring compressor
- Ball joint puller
- Nippers
- Fender cover
- Wheel chock

BUY TOOLS


Replacement: strut mount – Honda CR-V II. Tip from AUTODOC:

- The replacement procedure is identical for the mounts of the left and right shock struts of the front suspension.
- All mounts of the front shock struts should be replaced simultaneously.
- Please note: all work on the car – Honda CR-V II – should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:


1

Secure the wheels with chocks.

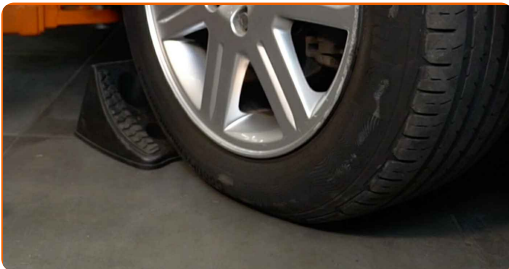

2


Loosen the wheel mounting bolts. Use wheel impact socket #19.

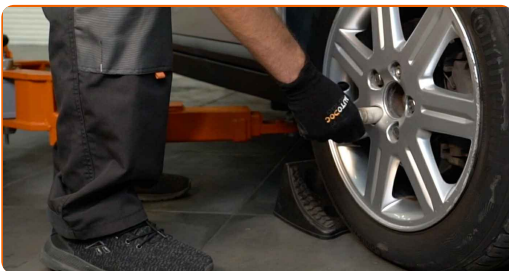

3 Raise the front of the car and secure on supports.



 
4 Unscrew the wheel bolts.




AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts.
Honda CR-V II

 5 Remove the wheel.




6 Remove the cotter pin. Use nippers.

 

7 Clean the fastener connecting the tie rod end to the steering knuckle. Use a wire brush. Use WD-40 spray.



 
8 Unscrew the end fastening nut to the steering knuckle. Use a combination spanner #17.



9 Disconnect the tie rod end from the steering knuckle. Use a ball joint puller.



 10 Unscrew the ABS cable holder. Use a drive socket #10. Use a ratchet wrench.




11 Remove the ABS wiring harness bracket.


12 Unscrew the brake hose fastening bracket from the shock strut. Use a drive socket #12. Use a ratchet wrench.



 
13 Remove the bracket from the shock absorber strut.



 14 Clean the fasteners connecting the shock strut to the steering knuckle. Use a wire brush. Use WD-40 spray.



 15 Unscrew the lower fastener connecting the shock strut to the steering knuckle. Use a combination spanner #19. Use a drive socket #22. Use a ratchet wrench.



16 Remove the fastening bolts (2 pieces).

17


Disconnect the steering knuckle from the shock absorber strut.

**18**


Lower the car.

**19**


Open the bonnet.

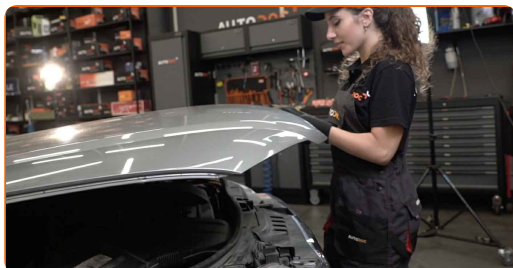**20**

 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.


**21**

 Clean the fasteners of the shock strut upper mount. Use a wire brush. Use WD-40 spray.



22

 Unscrew the top fastening of the shock strut mount. Use a drive socket #14. Use a ratchet wrench.




AUTODOC recommends:

- Honda CR-V II – To avoid injury, hold the suspension strut while unscrewing the fastening bolts.

23

 Remove the suspension strut.



24

Set the shock absorber strut on the spring compressor tool.



Replacement: strut mount – Honda CR-V II. Tip from AUTODOC experts:

- Note that when using a spring compressor, spring coils need to be securely gripped, compressing the spring on the opposite sides.
- Ensure the correct position of the spring in the retainer.
- Make sure that the spring coils tightly entered the lock handles.

25 Compress the spring.



26 Treat the shock strut rod. Use a wire brush. Use WD-40 spray.

 


27 Remove the strut piston rod nut. Use a combination spanner #19. Use HEX No.H7. Use a ratchet wrench.



28 Release the coil spring.

29 Remove the top strut mount.



Replacement: strut mount – Honda CR-V II. AUTODOC recommends:

- Examine the shock absorber dust cap and the bump stop. Replace them if necessary.

30 Install a new top shock strut mount.



31 Compress the spring.



32 Tighten the shock strut piston rod nut. Use a combination spanner #19. Use HEX No.H7. Use a torque wrench. Tighten it to 44 Nm torque.



Replacement: strut mount – Honda CR-V II. Tip:

- Check to make sure the spring is positioned correctly. Avoid its misalignment.

33 Decompress the spring.



34 Treat the shock strut rod. Use copper grease.

35 Remove the assembled shock strut.

36 Install the shock strut into the wheel arch.




37 Screw the top fastening of the shock strut mount.

AUTODOC recommends:


- Honda CR-V II – To avoid injury, hold the suspension strut while screwing in the fastening bolts.

- 38 Tighten the upper fastener of the shock absorber strut mount. Use a drive socket #14. Use a torque wrench. Tighten it to 44 Nm torque.

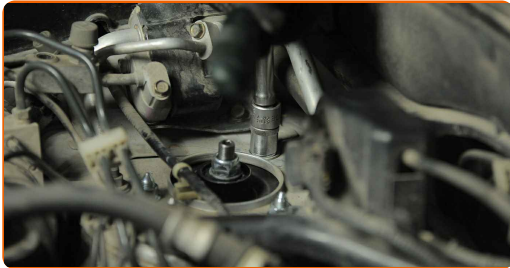


- 39 Treat the fasteners of the shock strut mount. Use copper grease.

- 40 Remove the fender protection cover.

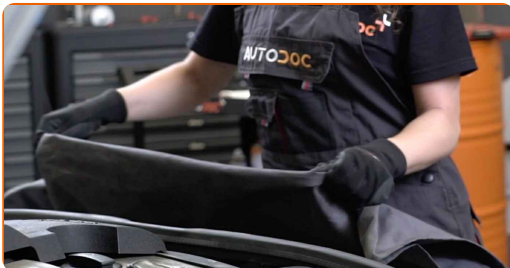

- 41 Close the hood.

 


- 42 Raise the front of the car and secure on supports.




43 Fix the shock absorber strut on the steering knuckle.



 
44 Install the fastening bolts (2 pieces). Use a ratchet wrench.



 
45 Tighten the lower fasteners connecting the shock strut to the steering knuckle. Use a combination spanner #19. Use a drive socket #22. Use a torque wrench. Tighten it to 157 Nm torque.



 46 Install the bracket onto the shock absorber strut.




 47 Tighten the brake hose fastening bracket to the shock strut. Use a drive socket #12. Use a ratchet wrench.




48 Install the ABS wiring harness bracket.


49 Tighten the ABS cable holder. Use a drive socket #10. Use a ratchet wrench.

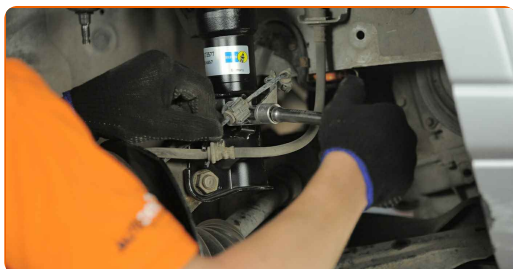

 50 Connect the tie rod end to the steering knuckle.



51 Tighten the fastening nut connecting the tie rod end to the steering knuckle. Use a combination spanner #17. Use a torque wrench. Tighten it to 43 nm torque.

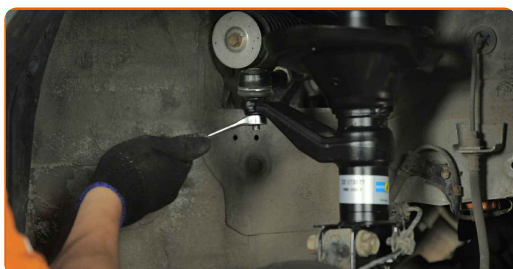

52 Install the cotter pin. Use nippers.




53 Treat the shock strut fasteners. Treat the fastener connecting the tie rod end to the steering knuckle. Use copper grease.

54 Treat the surface where the brake disc contacts the wheel rim. Use copper grease.




55 Clean the brake disk surface. Use a brake cleaner.

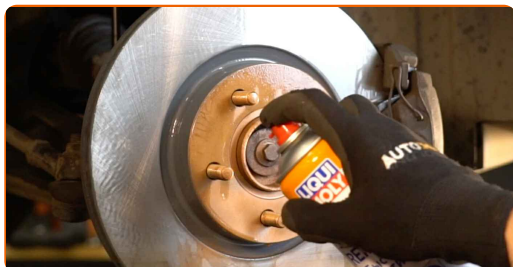

AUTODOC recommends:

- Replacement: strut mount – Honda CR-V II. After applying the spray, wait a few minutes.

 
56 Install the wheel.




AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. Honda CR-V II

57 Screw in the wheel bolts. Use wheel impact socket #19.

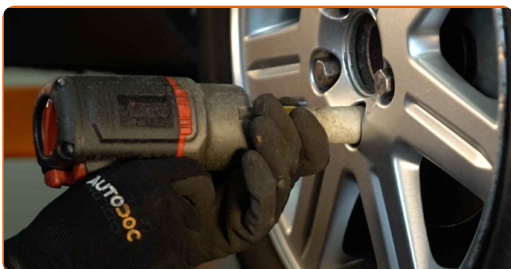


 58 Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #19. Use a torque wrench. Tighten it to 108 nm torque.



59

 Remove the jacks and chocks.



WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON  **Google Play**

 **Download on the App Store**

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR HONDA

STRUT MOUNT: A WIDE SELECTION

CHOOSE CAR PARTS FOR HONDA CR-V II

STRUT MOUNT FOR HONDA: BUY NOW

STRUT MOUNT FOR HONDA CR-V II: THE BEST DEALS & OFFERS

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.