



How to change track rod
end on **Honda CR-V II** –
replacement guide

VIDEO TUTORIAL



i Important!

This replacement procedure can be used for:
HONDA STREAM (RN) 1.7 16V (RN1), HONDA STREAM (RN) 2.0 16V (RN3)

The steps may slightly vary depending on the car design.

REPLACEMENT: TRACK ROD END – HONDA CR-V II. LIST OF THE TOOLS YOU'LL NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Combination spanner #19
- Combination spanner #24
- Drive socket # 19
- Wheel impact socket #19
- Ratchet wrench
- Torque wrench
- Vernier caliper
- Ball joint puller
- Wheel chock

BUY TOOLS

 
Replacement: track rod end – Honda CR-V II. Tip:

- Replace tie rod ends in pairs.
- The replacement procedure is identical for the right and left tie rod ends.
- Please note: all work on the car – Honda CR-V II – should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:


1

Secure the wheels with chocks.



2

Loosen the wheel mounting bolts. Use wheel impact socket #19.

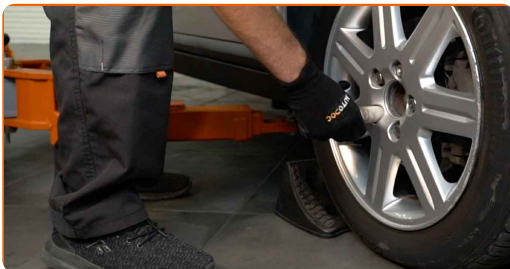


3

Raise the front of the car and secure on supports.



4

 Unscrew the wheel bolts.



AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts.
Honda CR-V II

 
5

Remove the wheel.



6

Clean the fastener connecting the tie rod end to the steering knuckle. Use a wire brush. Use WD-40 spray.



- 7 When deinstalling, mark or measure the precise position of the ball joint on the track rod, or count the number of turns in order to prevent misalignment afterward. Use a vernier caliper.

 


- 8 Unscrew the end fastening nut to the steering knuckle. Use a drive socket #19. Use a ratchet wrench.




- 9 Clean the lock nut that connects the tie rod to the tie rod end. Use a wire brush. Use WD-40 spray.

- 10 Loosen the lock nut securing the tie rod end to the tie rod. Use a combination spanner #19. Use a combination spanner #24.




- 11 Disconnect the tie rod end from the steering knuckle. Use a ball joint puller.

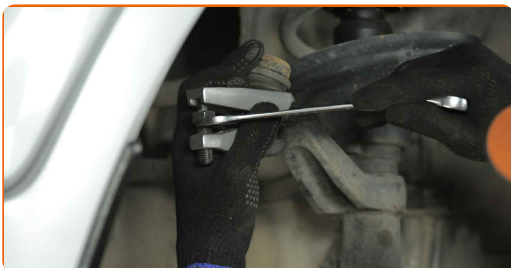


12 Screw the end out of the tie rod.



 13 Clean the mounting seats of the tie rod end. Use a wire brush. Use WD-40 spray.




14 Screw on a new tie rod end.

 


Replacement: track rod end – Honda CR-V II. Tip from AUTODOC experts:

- While installing the steering rod end remember to make the same number of turns or to leave the same length of thread showing as per your measurements.

 
- 15** Connect the tie rod end to the steering knuckle.



 
- 16** Tighten the fastening nut connecting the tie rod end to the steering knuckle. Use a combination spanner #19. Use a torque wrench. Tighten it to 43 nm torque.



- 17** Install the cotter pin.

 

 - 18** Tighten the tie rod end locknut. Use a combination spanner #24. Use a torque wrench. Tighten it to 50 nm torque.



19

Treat the fastener connecting the tie rod end to the steering knuckle. Use copper grease.



 
20

Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



21

Clean the brake disk surface. Use a brake cleaner.



AUTODOC recommends:

- Replacement: track rod end – Honda CR-V II. After applying the spray, wait a few minutes.

22

Install the wheel.



AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. Honda CR-V II

23

Screw in the wheel bolts. Use wheel impact socket #19.



24

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #19. Use a torque wrench. Tighten it to 108 nm torque.




Replacement: track rod end – Honda CR-V II. Professionals recommend:

- Check and adjust wheel alignment if necessary.

25

Remove the jacks and chocks.

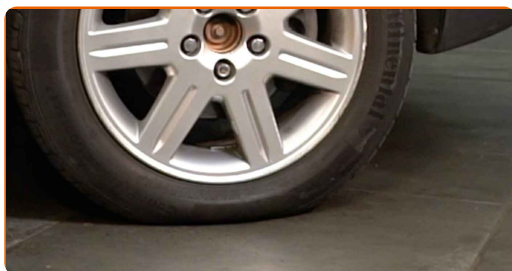

WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR HONDA

TRACK ROD END: A WIDE SELECTION

CHOOSE CAR PARTS FOR HONDA CR-V II

TRACK ROD END FOR HONDA: BUY NOW

TRACK ROD END FOR HONDA CR-V II: THE BEST DEALS & OFFERS

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.