



How to change air filter
on **DACIA LOGAN MCV**
(KS_) – replacement
guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!

This replacement procedure can be used for:

DACIA LOGAN MCV (KS_) 1.6 16V Hi-Flex, DACIA LOGAN MCV (KS_) 1.6 16V (KS0L, KS0M, KS0P, KS1S)

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: RENAULT MEGANE Scenic (JA0/1_) 1.6 16V

REPLACEMENT: AIR FILTER – DACIA LOGAN MCV
(KS_). TOOLS YOU MIGHT NEED:



- All-purpose cleaning spray
- Drive socket # 7
- Torx T20 socket bit
- Ratchet wrench
- Tap wrench
- Fender cover

Buy tools

Replacement: air filter – DACIA LOGAN MCV (KS_). AUTODOC recommends:

 
- Follow the terms, recommendations and requirements of the part operation provided by the manufacturer.
- Please note: all work on the car – DACIA LOGAN MCV (KS_) – should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:


1 Open the bonnet.

2 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

3 Loosen the fastening clamp connecting the air duct to the air filter housing. Use a drive socket #7. Use a ratchet wrench.

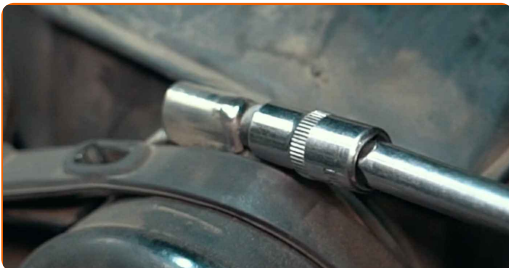

 4 Detach the air duct clamp. Remove the air intake hose.

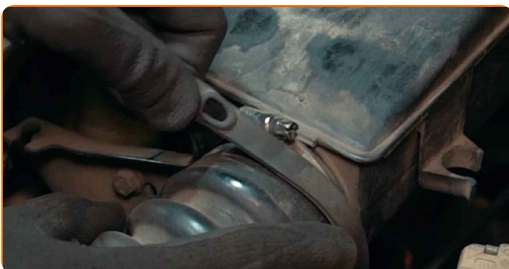

5 Detach the air duct housing from the air filter housing.



6 Detach the vacuum hose connector.



7 Clean the fasteners on the air filter housing. Use all-purpose cleaning spray.



8 Unscrew the filter housing fastening bolts. Use Torx T20. Use a tap wrench.



9 Remove the air filter housing.



10 Remove the filter element from the filter housing.



11 Clean the air filter housing.



12 Insert a new filter element into the filter housing. Make sure that the filter edge fits tight to the housing.



AUTODOC recommends:

- Replacement: air filter – DACIA LOGAN MCV (KS_). Be sure to position the filtering element correctly. Avoid misalignment.
- Take care to only use quality filters.

13 Reinstall the air filter housing.



AUTODOC recommends:

- During installation, make sure to prevent dust and dirt from getting into the air filter housing.


14 Screw the filter housing fastening bolts. Use Torx T20. Use a tap wrench.




15 Attach the vacuum hose connector.



 16 Install the air duct housing.



 17 Install the air intake hose and secure it.

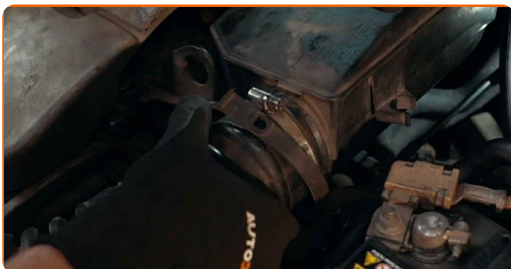

18 Tighten the air duct clamp.



19 Screw the fastening clamp connecting the air duct to the air filter housing. Use a drive socket #7. Use a tap wrench.



20 Remove the fender protection cover.

21 Close the hood.

WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

 Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

AIR FILTER: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.