+ AUTODOC CLUB

How to change air filter on **BMW E46** – replacement guide







VIDEO TUTORIAL



i Important!

This replacement procedure can be used for:

BMW 3 Saloon (E36) 320i 2.0, BMW 3 Coupe (E36) 320i 2.0, BMW 3 Saloon (E36) 325i 2.5, BMW 3 Coupe (E36) 325i 2.5, BMW 3 Convertible (E36) 320i 2.0, BMW 3 Convertible (E36) 325i 2.5, BMW 3 Coupe (E36) M3 3.0, BMW 3 Convertible (E36) M3 3.0, BMW 3 Touring (E36) 320i 2.0, BMW 3 Touring (E36) 328i 2.8, BMW 3 Saloon (E36) 323i 2.5, BMW 3 Coupe (E36) 328i 2.8, BMW 3 Convertible (E36) 328i 2.8, BMW 5 Saloon (E39) 520i 2.0, (+ 67)

The steps may slightly vary depending on the car design.


CLUB.AUTODOC.CO.UK 1-8







REPLACEMENT: AIR FILTER – BMW E46. TOOLS YOU MIGHT NEED:

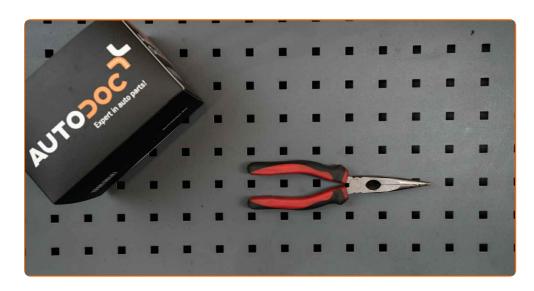

Round-nose pliers

• Fender cover

BUY TOOLS

CLUB.AUTODOC.CO.UK 2-8







Replacement: air filter – BMW E46. AUTODOC recommends:

- Follow the terms, recommendations and requirements of the part operation provided by the manufacturer.
- All work should be done with the engine stopped.

REPLACEMENT: AIR FILTER – BMW E46. USE THE FOLLOWING PROCEDURE:

1

Open the hood.



- Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.
- Remove the fasteners of the air duct housing. Use round-nose pliers.



Detach the air duct housing from the air filter housing.



CLUB.AUTODOC.CO.UK 3-8







5 Slide the filter cover clips.



Take off the filter lid.

8



Remove the filter element from the filter housing.



Clean the air filter cover and housing.

Replacement: air filter – BMW E46. Tip:

• Before cleaning the air filter cover and housing, cover the air duct parts, mass airflow sensor (if available), throttle valve with a clean cloth.

CLUB.AUTODOC.CO.UK 4-8

9

11







Insert a new filter element into the filter housing. Make sure that the filter edge fits tight to the housing.



Replacement: air filter – BMW E46. Professionals recommend:

- Check out the correct location of the filter element. Do not skew.
- Take care to only use quality filters.
- During installation, make sure to prevent dust and dirt from getting into the air filter housing.
- Reinstall the air filter cover. Fasten it.



Lock the retaining clips of the air filter housing cover.



CLUB.AUTODOC.CO.UK 5-8







12 Install the air duct housing.



AUTODOC recommends:

- Be careful not to damage the air flow meter connected to the air filter housing upper cover on BMW E46.
- Install the air duct housing fasteners.



- Remove the fender protection cover.
- Close the hood.





VIEW MORE TUTORIALS

CLUB.AUTODOC.CO.UK 6-8





AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR BMW

AIR FILTER: A WIDE SELECTION

CLUB.AUTODOC.CO.UK 7-8







CHOOSE CAR PARTS FOR BMW E46

AIR FILTER FOR BMW: BUY NOW

AIR FILTER FOR BMW E46: THE BEST DEALS & OFFERS

① DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.

CLUB.AUTODOC.CO.UK 8-8