



How to change front coil
springs on **FIAT PUNTO**
(199) – replacement
guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!


This replacement procedure can be used for:

FIAT PUNTO (199) 1.3 D Multijet

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: FIAT GRANDE PUNTO (199) 1.3 D Multijet

REPLACEMENT: COIL SPRINGS – FIAT PUNTO (199). LIST OF THE TOOLS YOU'LL NEED:

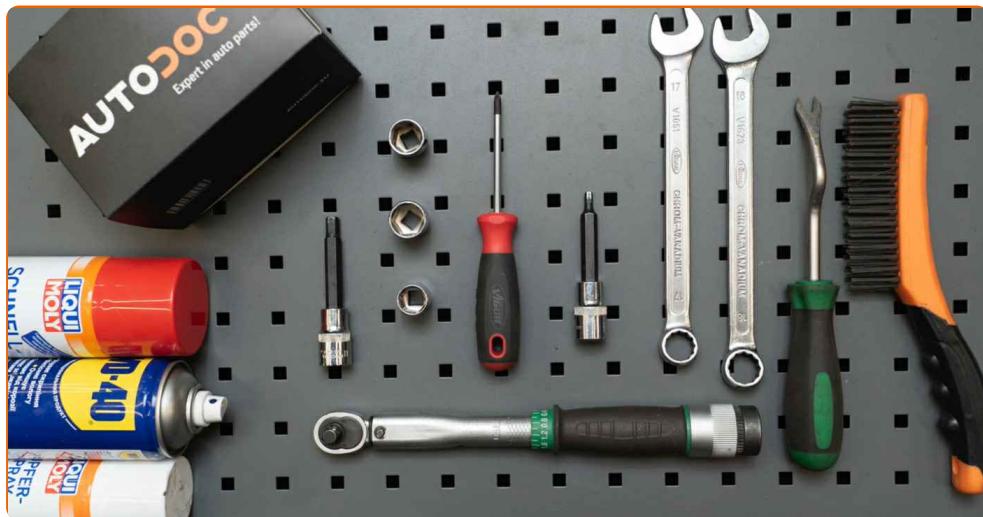

- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Combination spanner #18
- Drive socket # 15
- Drive socket # 17
- Drive socket # 18
- HEX bit no.H6.
- HEX bit no.H8.
- Wheel impact socket #17
- Ratchet wrench
- Torque wrench
- Clip removal tool
- Phillips screwdriver
- Round-nose pliers
- Hydraulic strut spring compressor
- Hydraulic transmission jack
- Fender cover
- Wheel chock

[Buy tools](#)

Replacement: coil springs – FIAT PUNTO (199). Tip from AUTODOC experts:

- Both coil springs of the front suspension should be replaced simultaneously.
- The replacement procedure is identical for the left and right coil springs of the front suspension.
- All work should be done with the engine stopped.

REPLACEMENT: COIL SPRINGS – FIAT PUNTO (199). USE THE FOLLOWING PROCEDURE:

1 Open the bonnet.

2 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

3 Remove the clips of the plastic cowl grille. Use a clip removal tool.



4 Unscrew the fasteners of the cowl grille. Use a Phillips screwdriver.



5

Remove the cowl grille seal.

**6**

Raise the wiper plastic cowl grille.

**7**

Clean the fasteners of the shock strut upper mount. Use a wire brush. Use WD-40 spray.

**8**

Loosen the upper fastener of the shock strut mount. Use a combination spanner #18. Use HEX No.H6. Use a ratchet wrench.

**9**

Secure the wheels with chocks.



10

Loosen the wheel mounting bolts. Use wheel impact socket #17.

**11**

Raise the front of the car and secure on supports.

12

Unscrew the wheel bolts.



Replacement: coil springs – FIAT PUNTO (199). Tip:

- To avoid injury, hold up the wheel when unscrewing the bolts.

13

Remove the wheel.



14

Disconnect the wiring and the brake hose from the bracket on the shock strut. Use round-nose pliers.

**15**


Clean the stabiliser link fasteners. Clean the fasteners connecting the shock strut to the steering knuckle. Use a wire brush. Use WD-40 spray.

**16**

Unscrew the fastener connecting the stabilizer link to the shock strut. Use a drive socket #15. Use a ratchet wrench.

**17**

Remove the stabilizer rod.

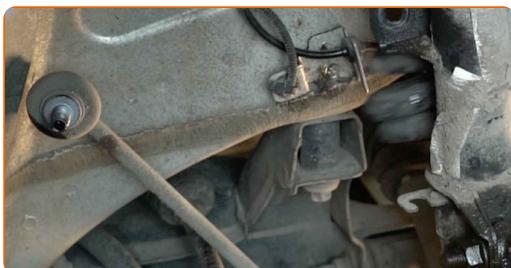

- 18** Unscrew the lower fastener connecting the shock strut to the steering knuckle. Use a combination spanner #18. Use a drive socket #18. Use a ratchet wrench.



- 19** Prop up the steering knuckle. Use a hydraulic transmission jack.




- 20** Remove the fastening bolts.



- 21** Disconnect the steering knuckle from the shock absorber strut.



- 22** Unscrew the top fastening of the shock strut mount.

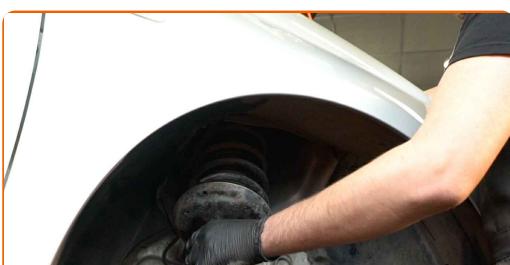


AUTODOC recommends:

- Important! Hold the suspension strut while unscrewing the fastening bolts. FIAT PUNTO (199)

23

Remove the suspension strut.

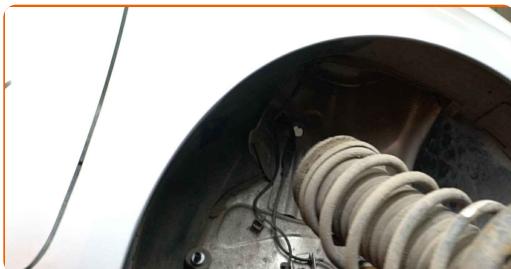

24

Set the shock absorber strut on the spring compressor tool.



Replacement: coil springs – FIAT PUNTO (199). Tip from AUTODOC experts:


- Note that when using a spring compressor, spring coils need to be securely gripped, compressing the spring on the opposite sides.
- Ensure the correct position of the spring in the retainer.
- Make sure that the spring coils tightly entered the lock handles.

25

Compress the spring.

**26**

Treat the shock strut rod. Use a wire brush. Use WD-40 spray.

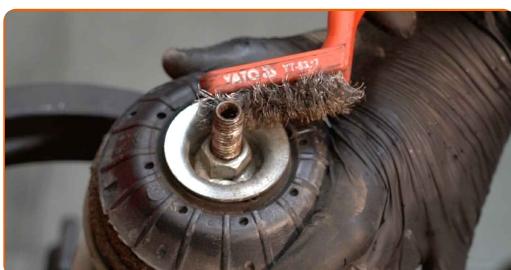**27**

Remove the strut piston rod nut. Use HEX No.H6. Use a drive socket #18. Use a ratchet wrench.

**28**

Remove the top strut mount.

**29**

Release the coil spring.



30

Remove the shock absorber dust cap and the bump stop.




AUTODOC recommends:

- Replacement: coil springs – FIAT PUNTO (199). Carefully inspect the mount, the boot, and the bump stop of the shock absorber. Replace if necessary.

31

Remove the spring.

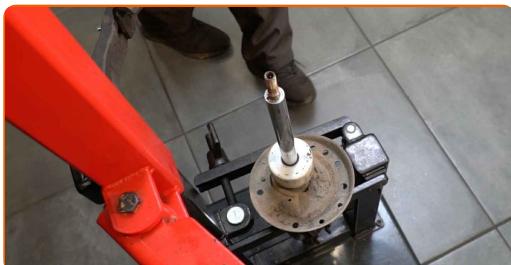**32**

Install the spring on the shock absorber.

**33**

Compress the spring.



34

Install the boot and a bump stop onto the shock absorber.

**35**

Install the upper strut mount and the strut mount bearing.

**36**

Tighten the shock strut piston rod nut. Use HEX No.H8. Use a drive socket #17. Use a torque wrench. Tighten it to 44 Nm torque.



Replacement: coil springs – FIAT PUNTO (199). Professionals recommend:

- Check to make sure the spring is positioned correctly. Avoid its misalignment.

37

Decompress the spring.

**38**

Treat the shock strut rod. Use copper grease.

**39**

Remove the assembled shock strut.

**40**

Install the shock strut into the wheel arch.

**41**


Screw the top fastening of the shock strut mount. Do not tighten it.

Replacement: coil springs – FIAT PUNTO (199). AUTODOC recommends:

- To avoid injuries, hold the shock strut when screwing the fastening bolts in.

42

Treat the shock strut mounting seat on the steering knuckle. Use a wire brush. Use WD-40 spray.

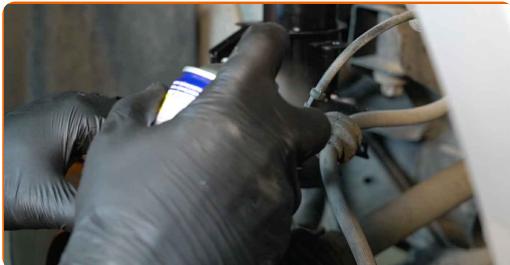

43

Fix the shock absorber strut on the steering knuckle.



44

Install the fastening bolts.



45

Screw in the fastener that connects the shock strut to the steering knuckle. Use a combination spanner #18. Use a drive socket #18. Use a ratchet wrench.



46

Remove the support from under the steering knuckle.



AUTODOC recommends:

- Replacement: coil springs – FIAT PUNTO (199). Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.

47

Connect the fastener of the ABS sensor cable to the shock absorber strut. Fasten the brake hose on the strut. Use round-nose pliers.



48

Tighten the lower fasteners connecting the shock strut to the steering knuckle. Use a combination spanner #18. Use a drive socket #18. Use a torque wrench. Tighten it to 105 Nm torque.+45°



AUTODOC recommends:

- Important! Be sure to use new fasteners.

49

Install the transverse stabilizer link.




50

Tighten the fastener connecting the stabilizer link to the shock strut. Use a drive socket #15. Use a torque wrench. Tighten it to 50 Nm torque.



51

Treat the shock strut fasteners. Use copper grease.

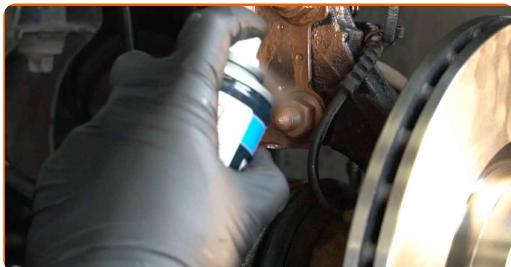

52

Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



53

Clean the brake disk surface. Use a brake cleaner.



Replacement: coil springs – FIAT PUNTO (199). AUTODOC experts recommend:

- After applying the spray, wait a few minutes.

54

Install the wheel.



AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. FIAT PUNTO (199)

55

Screw in the wheel bolts. Use wheel impact socket #17.




56

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 Nm torque.



57

Remove the jacks and chocks.

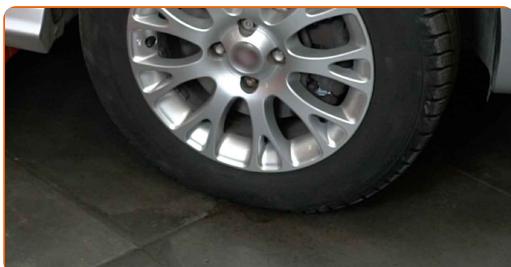

- 58** Tighten the upper fastener of the shock absorber strut mount. Use a combination spanner #18. Use a drive socket #18. Use a torque wrench. Tighten it to 52 nm torque.



- 59** Treat the fasteners of the shock strut mount. Use copper grease.



- 60** Install and secure the cowl grille.



- 61** Tighten the fasteners of the cowl grille. Use a Phillips screwdriver.



62

Install the fasteners of the wiper plastic cowl grille.

**63**

Install the cowl grille seal.

**64**

Remove the fender protection cover.

65

Close the hood.

WELL DONE! 

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



AUTODOC

GET IT ON Google Play

Download on the App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

COIL SPRINGS: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.