- AUTODOC CLUB

How to change fuel filter on **FIAT Stilo Box Body / Estate (192)** – replacement guide



SIMILAR VIDEO TUTORIAL




This video shows the replacement procedure of a similar car part on another vehicle

(i) Important!

This replacement procedure can be used for: FIAT Stilo Box Body / Estate (192) 1.9 JTD (192DXS1A), FIAT Stilo Box Body / Estate (192) 1.9 JTD (192DXT1B)

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: FIAT BRAVO II (198) 1.6 D Multijet

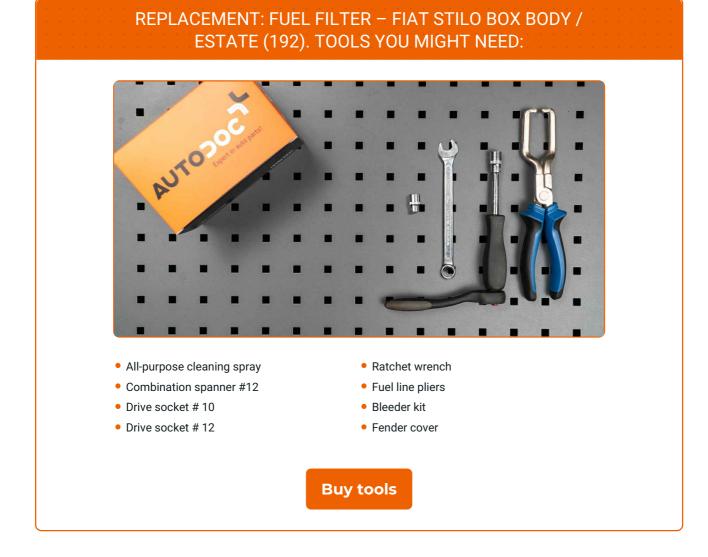

4

O



Replacement: fuel filter - FIAT Stilo Box Body / Estate (192). Professionals recommend:

• Ensure adequate ventilation of the workplace. Fuel vapors are poisonous.

• All work should be done with the engine stopped.

REPLACEMENT: FUEL FILTER – FIAT STILO BOX BODY / ESTATE (192). RECOMMENDED SEQUENCE OF STEPS:



Open the bonnet.



Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.



Clean the fasteners of the fuel supply lines. Use all-purpose cleaning spray.





Squeeze the clips and detach the fuel supply lines from the fuel filter housing. Use fuel line pliers.





Replacement: fuel filter – FIAT Stilo Box Body / Estate (192). Tip from AUTODOC:

• Be careful! Fuel may leak from the filter housing and hoses.

5

Loosen the fuel filter mounting. Use a drive socket #10. Use a ratchet wrench.



6





7

Detach the fuel pressure sensor connector.



8

Attach the fuel pressure sensor connector.







Install a new fuel filter.



10

Tighten the fuel filter fasteners. Use a drive socket #10. Use a ratchet wrench.



Replacement: fuel filter – FIAT Stilo Box Body / Estate (192). Professionals recommend:

- Make sure that the fuel filter is positioned correctly. Consider the fuel flow direction mark.
- During installation, take care to prevent dust and dirt from getting into the fuel filter housing.
- Attention! Use quality filters FIAT Stilo Box Body / Estate (192).
- 11

Connect the fuel lines to the fuel filter and lock the fastening clips.



+ AUTODOC CLUB



12

Connect the bleeder kit to the fuel filter bleeder screw.



13

14

Unscrew the fuel filter bleeder screw. Use a combination spanner #12.



Switch on the ignition. This should be done to activate the fuel pump to make it pump fuel through the fuel system.



15

Remove the bleeder kit.




16

Screw in the fuel filter bleeder screw. Use a drive socket #12. Use a ratchet wrench.





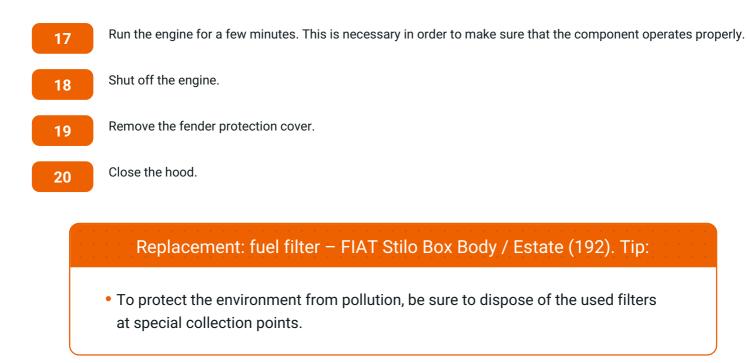



VIEW MORE TUTORIALS



AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

FUEL FILTER: A WIDE SELECTION

(i) **DISCLAIMER**:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.