



How to change brake
drum on **FIAT TIPO (160)**
– replacement guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!


This replacement procedure can be used for:

FIAT TIPO (160) 1.4, FIAT TIPO (160) 1.4 i.e., FIAT TIPO (160) 1.6 i.e., FIAT TIPO (160) 1.6, FIAT TIPO (160) 1.7 D, FIAT TIPO (160) 1.9 D

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: FIAT PUNTO (188) 1.3 JTD 16V

REPLACEMENT: BRAKE DRUM – FIAT TIPO (160). LIST OF THE TOOLS YOU'LL NEED:

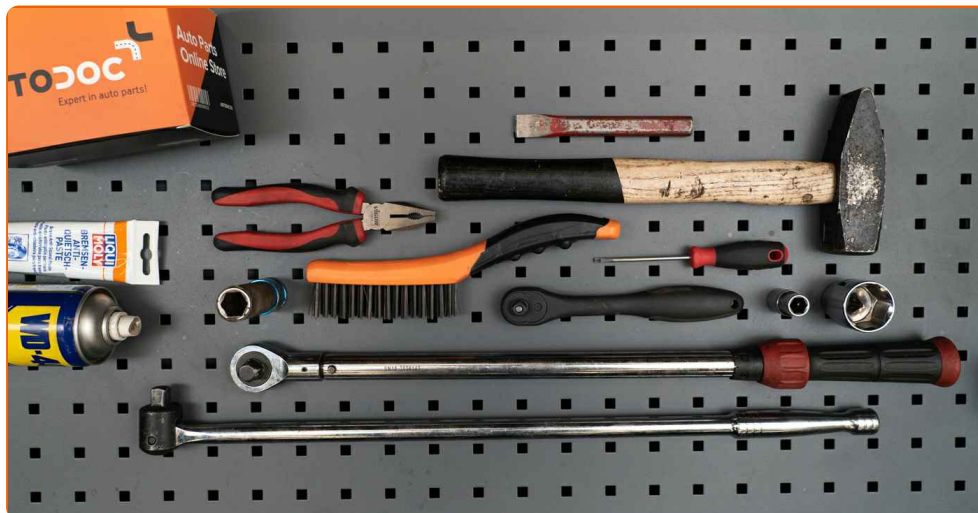

- Wire brush
- Copper grease
- Drive socket # 12
- Wheel impact socket #17
- Ratchet wrench
- Torque wrench
- Hammer
- Flat screwdriver
- Wheel chock

Buy tools

 
Replacement: brake drum – FIAT TIPO (160). AUTODOC experts recommend:

- Replace the brake drums on FIAT TIPO (160) in pair for the rear axle. Disregarding the parts state. It ensures even braking.
- The replacement procedure is identical for the right and left brake drums on the same axle.
- When replacing the brake drums, be sure to also change the brake shoes.
- Warning! Shut down the engine before starting any work – FIAT TIPO (160).

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1 Open the bonnet.


2 Unscrew the brake fluid reservoir cap. Secure the wheels with chocks.



3 Loosen the wheel mounting bolts. Use wheel impact socket #17.

4 Raise the rear of the car and secure on supports.

 5 Unscrew the wheel bolts.



AUTODOC recommends:

 
- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts.
FIAT TIPO (160)

6 Remove the wheel.



7 Fully lower the parking brake lever.

8 Unscrew the brake drum fastening.




9 Use a drive socket #12. Use a ratchet wrench.



10 Remove the brake drum.



 11 Remove the hub bearing protection cap. Use a flat screwdriver. Use a hammer.



Replacement: brake drum – FIAT TIPO (160). AUTODOC recommends:

- Some cars are not equipped with wheel hub caps.

12 Clean the hub. Use a wire brush.

Replacement: brake drum – FIAT TIPO (160). Professionals recommend:

- Examine the brake shoes. Replace them if needed.

13 Install the brake drum and fasten it.



14 Tighten the brake drum fasteners. Use a drive socket #12. Use a torque wrench. Tighten it to 15 Nm torque.

 


15 Clean the wheel rim mounting seat. Use a wire brush.

16 Treat the surface where the wheel rim contacts the brake drum. Use copper grease.



17 Install the wheel.



Replacement: brake drum – FIAT TIPO (160). Tip from AUTODOC:

- To avoid injury, hold up the wheel when screwing in the fastening bolts.

18 Screw in the wheel bolts. Use wheel impact socket #17.



19 Lower the car and working in a cross order, tighten the wheel bolts. Use a torque wrench. Tighten it to 98 nm torque.

20 Remove the jacks and chocks.




AUTODOC recommends:

- Important! Replacement: brake drum – FIAT TIPO (160). Check the brake fluid level in the reservoir and top up if necessary.

21

Tighten the brake fluid reservoir cap. Close the hood.

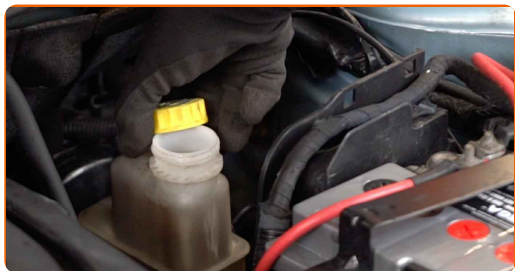

Replacement: brake drum – FIAT TIPO (160). Tip from AUTODOC experts:

- Adjust the gap between the brake shoes and the drum on FIAT TIPO (160), pressing the brake pedal 10-15 times.

WELL DONE! 

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

 Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BRAKE DRUM: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.