



How to change front coil
springs on **Ford Fiesta V**
JH JD – replacement
guide

VIDEO TUTORIAL




ⓘ Important!

This replacement procedure can be used for:

FORD Fiesta Mk5 Hatchback (JH1, JD1, JH3, JD3) 1.3, FORD Fiesta Mk5 Hatchback (JH1, JD1, JH3, JD3) 1.6 16V, FORD Fiesta Mk5 Hatchback (JH1, JD1, JH3, JD3) 1.25 16V, FORD Fiesta Mk5 Van 1.3, FORD Fiesta Mk5 Van 1.4

The steps may slightly vary depending on the car design.

REPLACEMENT: COIL SPRINGS – FORD FIESTA V JH
JD. LIST OF THE TOOLS YOU'LL NEED:

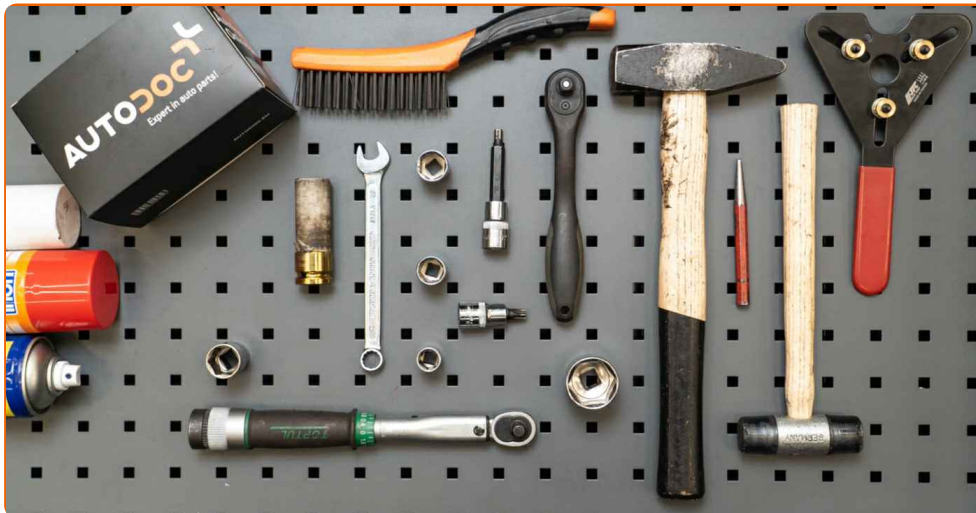

- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Combination spanner #13
- Drive socket # 13
- Drive socket # 15
- Drive socket # 17
- Drive socket # 19
- Drive socket # 32
- HEX bit No.H6.
- Torx bit T50
- Wheel impact socket #19
- Ratchet wrench
- Torque wrench
- Shock absorber socket
- Hammer
- Tap wrench
- Pin punch
- Rubber mallet
- Crow bar
- Hydraulic strut spring compressor
- Hydraulic transmission jack
- Fender cover
- Wheel chock

BUY TOOLS

Replacement: coil springs – Ford Fiesta V JH JD. Professionals recommend:

- Both coil springs of the front suspension should be replaced simultaneously.
- The replacement procedure is identical for the left and right coil springs of the front suspension.
- All work should be done with the engine stopped.

**REPLACEMENT: COIL SPRINGS – FORD FIESTA V JH JD.
RECOMMENDED SEQUENCE OF STEPS:**


1

Open the bonnet.




2

Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

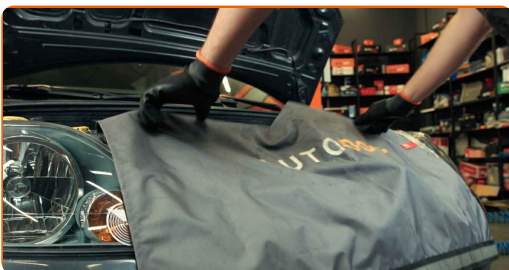


3

Clean the fasteners of the shock strut upper mount. Use a wire brush. Use WD-40 spray.

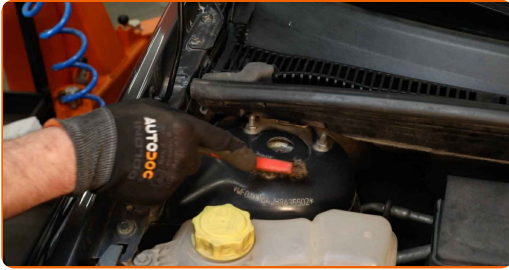

4

Loosen the upper fastener of the shock strut mount. Use a combination spanner #13.

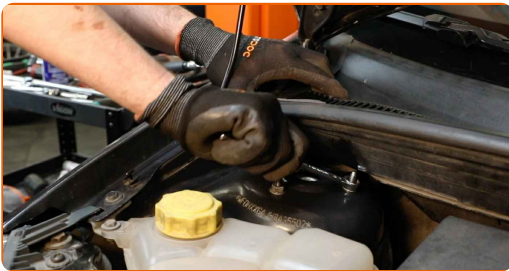


5

Secure the wheels with chocks.



6

Loosen the wheel mounting bolts. Use wheel impact socket #19.

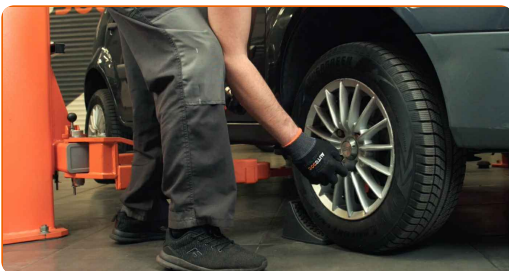


7

Raise the front of the car and secure on supports.



8

 Unscrew the wheel bolts.

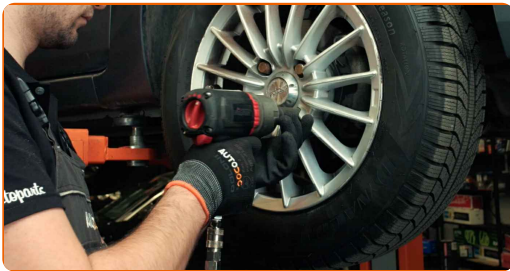

Replacement: coil springs – Ford Fiesta V JH JD. AUTODOC recommends:

- To avoid injury, hold up the wheel when unscrewing the bolts.

 
9

Remove the wheel.



10


Clean the stabiliser link fasteners. Use a wire brush. Use WD-40 spray.

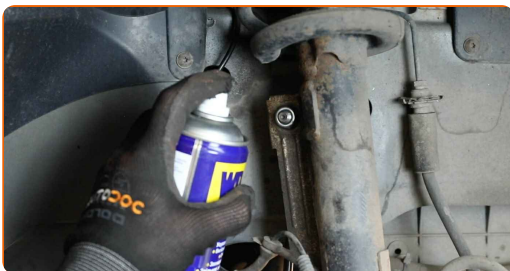


- 11** Unscrew the fastener connecting the stabilizer link to the shock strut. Use a drive socket #17. Use a ratchet wrench.




- 12** Remove the stabilizer rod.

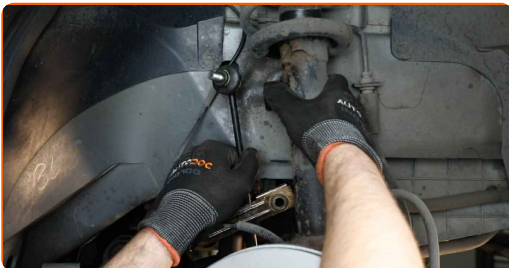


- 13** Remove the brake hose retaining clip. Use a crowbar.

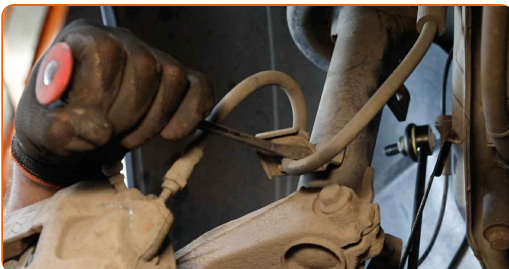

- 14** Detach the brake hose from the shock strut.

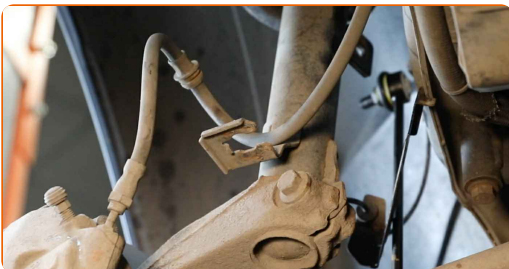


- 15** Clean the fasteners connecting the shock strut to the steering knuckle. Use a wire brush. Use WD-40 spray.

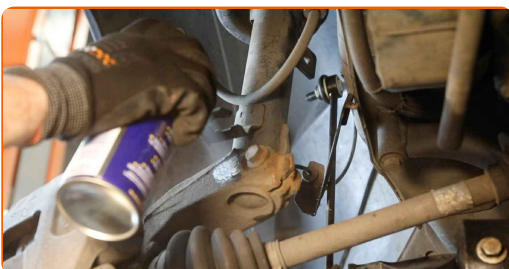


16

 Unscrew the lower fastener connecting the shock strut to the steering knuckle. Use a drive socket #15. Use a tap wrench.

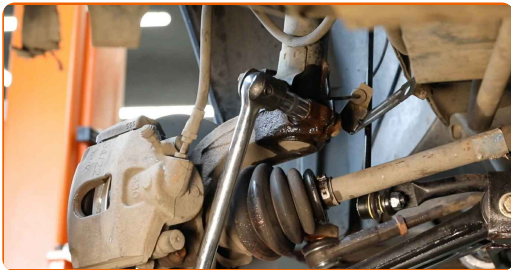


17

 Remove the fastening bolt.

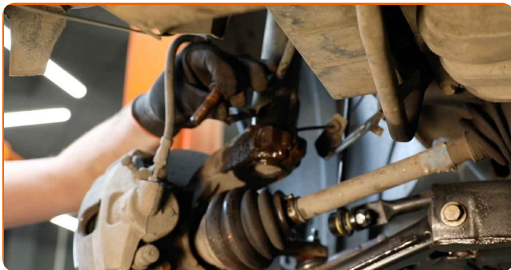

18

 Clean the fastener of the driveshaft. Use a wire brush. Use WD-40 spray.

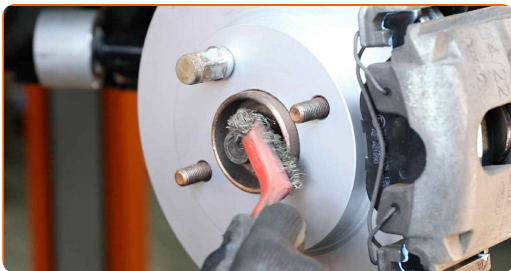

19

Loosen the fastener of the driveshaft. Use a drive socket #32. Use a tap wrench.



 
20 Remove the fastening nut. Use a drive socket #32.




21 Clean the fastener connecting the ball joint to the steering knuckle. Use a wire brush. Use WD-40 spray.




22 Unscrew the ball joint fastening to the steering knuckle. Use a drive socket #15. Use Torx T50. Use a ratchet wrench.

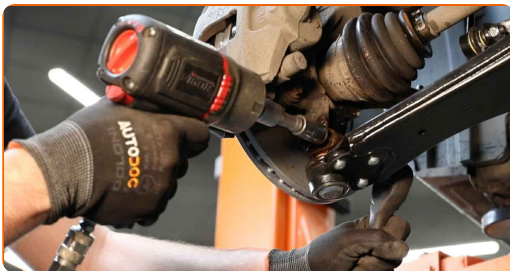


23 Remove the fastening bolt.

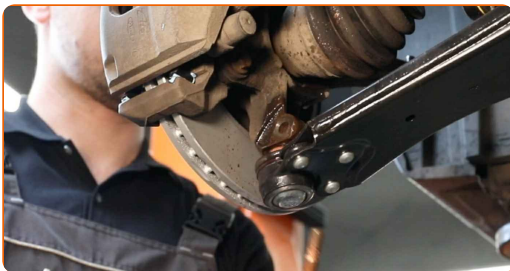 

 24 Remove the drive shaft. Use a pin punch. Use a hammer.

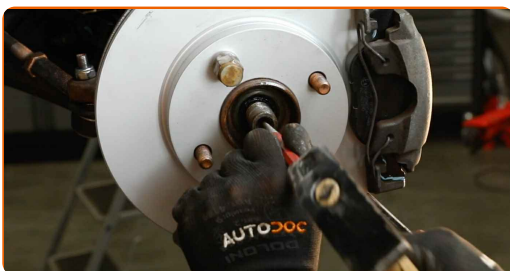

 25 Disconnect the lower arm from the steering knuckle.

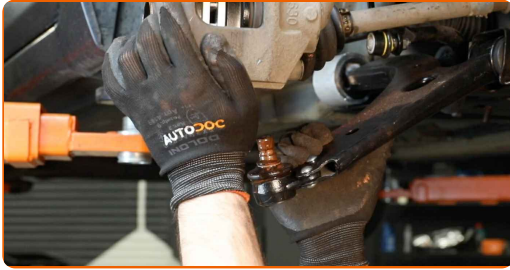


Replacement: coil springs – Ford Fiesta V JH JD. Tip:

- Make sure that the drive shaft is not unloaded (when the car is jacked).


26 Prop up the steering knuckle. Use a hydraulic transmission jack.



 
27 Release the lower fastener connecting the shock strut to the steering knuckle. Use a special drive socket to remove the shock absorber.

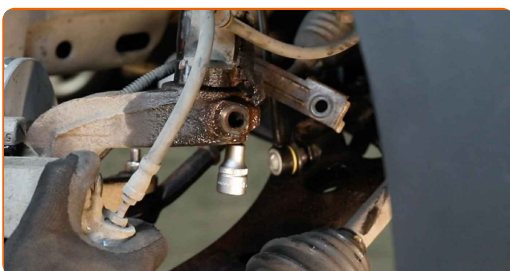

 28 Disconnect the steering knuckle from the shock absorber strut. Use a hammer.

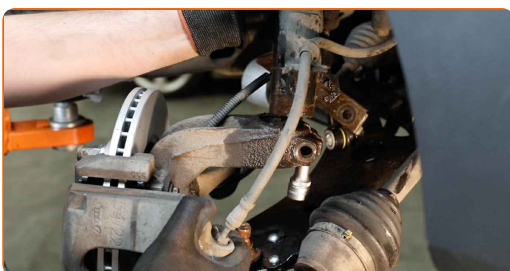

 29 Unscrew the top fastening of the shock strut mount.

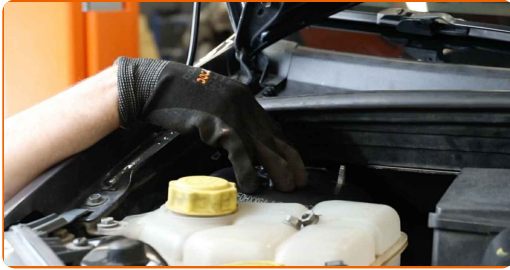


AUTODOC recommends:

- Ford Fiesta V JH JD – To avoid injury, hold the suspension strut while unscrewing the fastening bolts.

30 Remove the suspension strut.



 31 Set the shock absorber strut on the spring compressor tool.

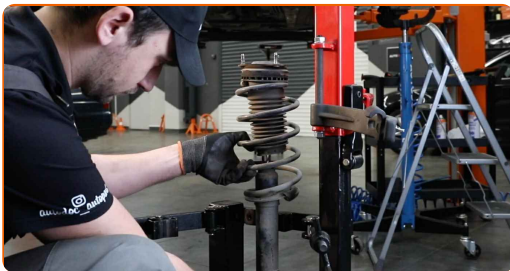

Replacement: coil springs – Ford Fiesta V JH JD. Tip from AUTODOC experts:

- Note that when using a spring compressor, spring coils need to be securely gripped, compressing the spring on the opposite sides.
- Ensure the correct position of the spring in the retainer.
- Make sure that the spring coils tightly entered the lock handles.


32

Compress the spring.




33

Treat the shock strut rod. Use a wire brush. Use WD-40 spray.

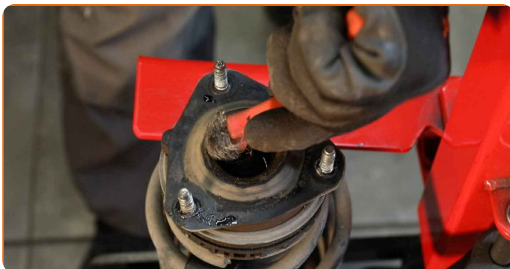

34

 Remove the strut piston rod nut. Use HEX No.H6. Use a drive socket #17. Use a ratchet wrench.

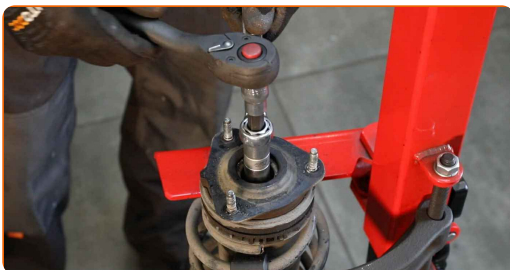


35 Remove the shock absorber mount, boot and bump stop.




AUTODOC recommends:

- Replacement: coil springs – Ford Fiesta V JH JD. Carefully inspect the mount, the boot, and the bump stop of the shock absorber. Replace if necessary.

 
36 Release the coil spring.

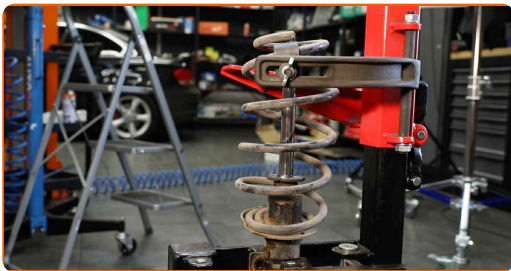


37 Remove the spring.

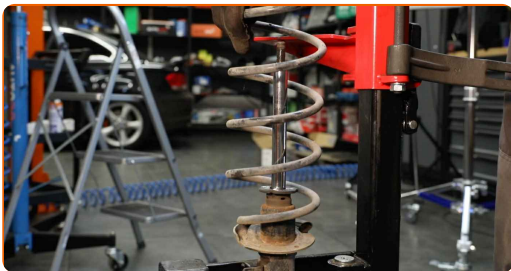 


38 Install the spring on the shock absorber.

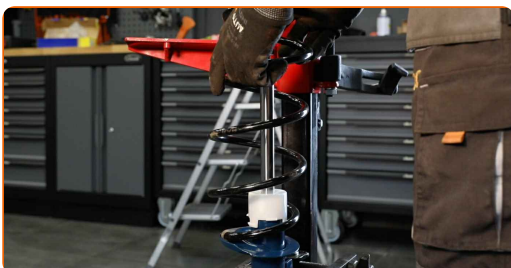


39 Compress the spring.

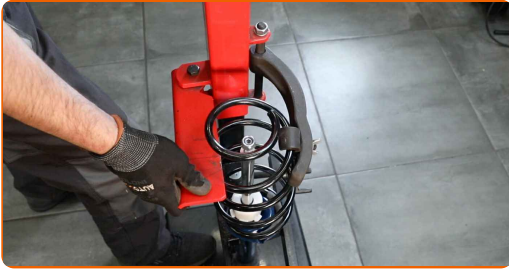

40 Install the mount, boot and bump stop onto a new shock absorber.

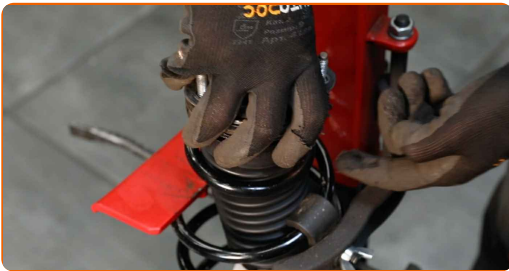


41 Tighten the shock strut piston rod nut. Use a drive socket #19. Use HEX No.H6. Use a torque wrench. Tighten it to 48 Nm torque.

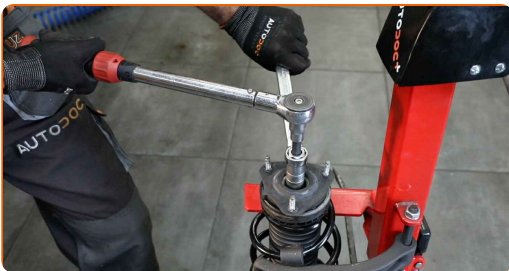

Replacement: coil springs – Ford Fiesta V JH JD. Tip from AUTODOC experts:

- Check to make sure the spring is positioned correctly. Avoid its misalignment.

 
42 Decompress the spring.

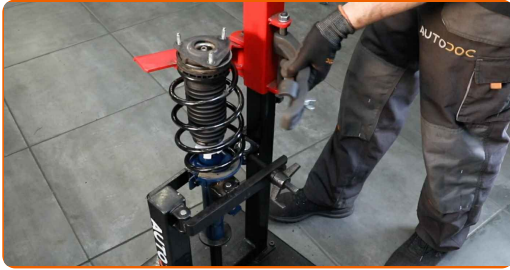


43 Remove the assembled shock strut.



44 Install the shock strut into the wheel arch.

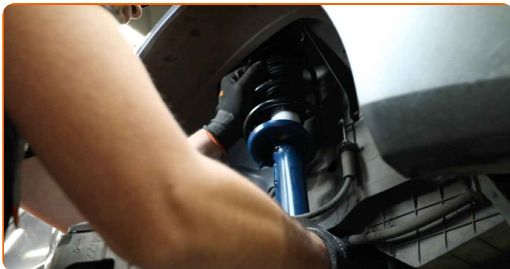

 45 Screw the top fastening of the shock strut mount. Do not tighten it.

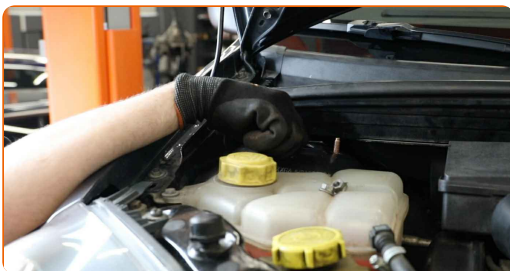


AUTODOC recommends:

- Important! Hold the suspension strut while screwing in the fastening bolts. Ford Fiesta V JH JD

46

 Treat the shock strut mounting seat on the steering knuckle. Use a wire brush. Use WD-40 spray.

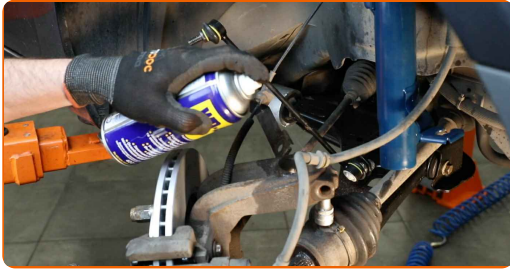


47

Fix the shock absorber strut on the steering knuckle.




48

 Install the fastening bolt.

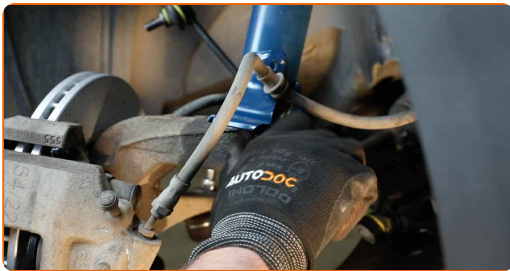

49

 Screw in the fastener that connects the shock strut to the steering knuckle. Use a drive socket #15. Use a ratchet wrench.

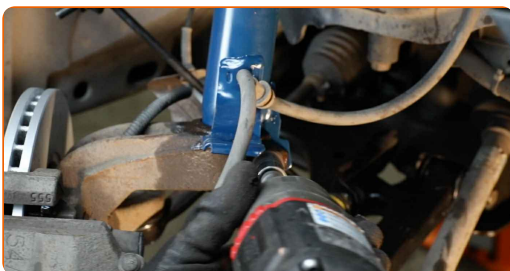


50

Clean the splines of the drive shaft CV joint. Use a wire brush. Use WD-40 spray.




51

Mount the drive shaft into the wheel hub.

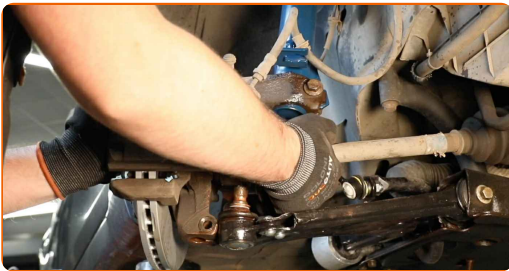

52

Remove the support from under the steering knuckle.

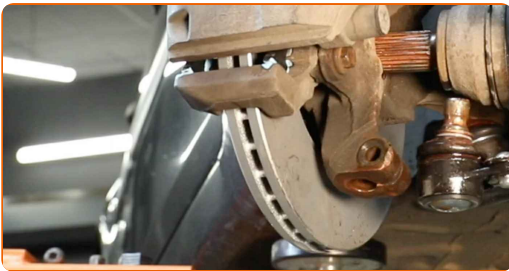


AUTODOC recommends:

- Replacement: coil springs – Ford Fiesta V JH JD. Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.

53

Connect the lower arm to the steering knuckle.

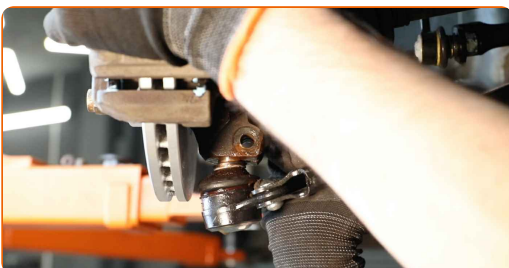


54

Install the fastening bolt.




55

 Screw the fasteners of the ball joint. Use a drive socket #15. Use Torx T50. Use a ratchet wrench.

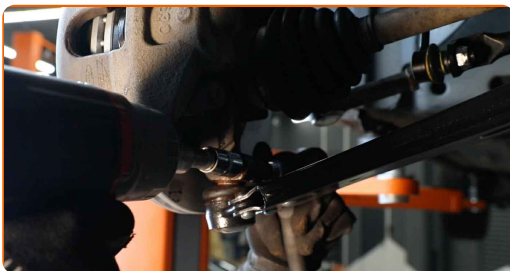


56

 Fasten the brake hose on the strut.

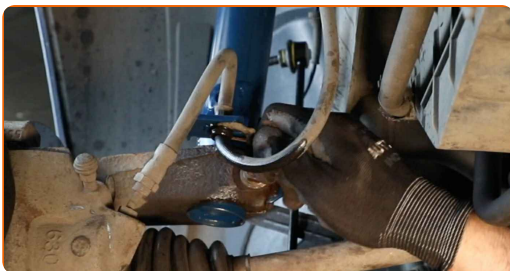


57

 Install the brake hose retaining clip. Use a rubber mallet.

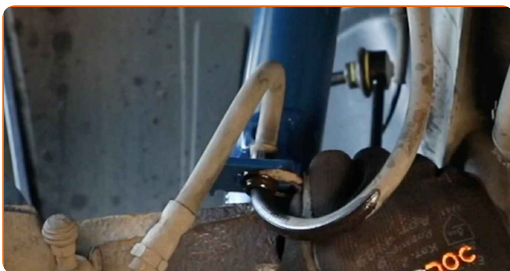

58

 Install the transverse stabilizer link.

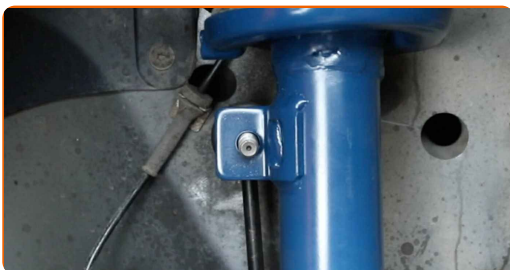

59

Tighten the stabiliser link fastener. Use a drive socket #17. Use a ratchet wrench.



60

Install the fastening nut.



61


Tighten the drive shaft nut. Use a drive socket #32. Use a torque wrench. Tighten it to 290 Nm torque.




AUTODOC recommends:

- Important! Be sure to use new fasteners.

- 62** Tighten the lower fasteners connecting the shock strut to the steering knuckle. Use a drive socket #15. Use a torque wrench. Tighten it to 90 Nm torque.

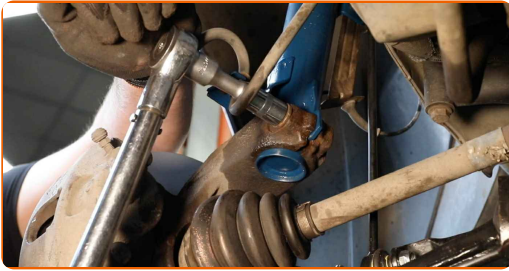


- 63** Tighten the ball joint fastener. Use a drive socket #15. Use a torque wrench. Tighten it to 48 Nm torque.

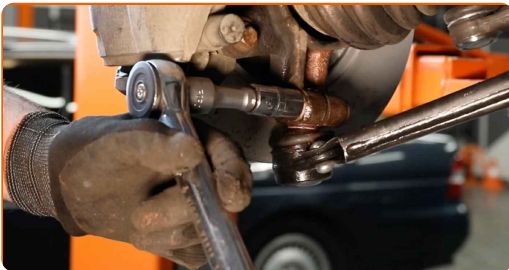

- 64** Tighten the fastener connecting the stabilizer link to the shock strut. Use a drive socket #17. Use a torque wrench. Tighten it to 48 Nm torque.




- 65** Treat the shock strut fasteners. Use copper grease.

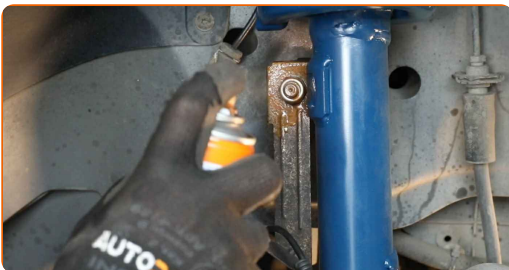


66

 Treat the surface where the brake disc contacts the wheel rim. Use copper grease.

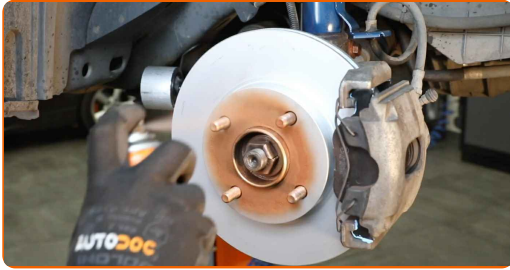

67

 Clean the brake disk surface. Use a brake cleaner.

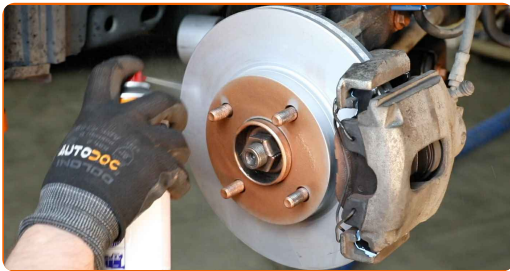


AUTODOC recommends:

- Replacement: coil springs – Ford Fiesta V JH JD. After applying the spray, wait a few minutes.

68

 Install the wheel.

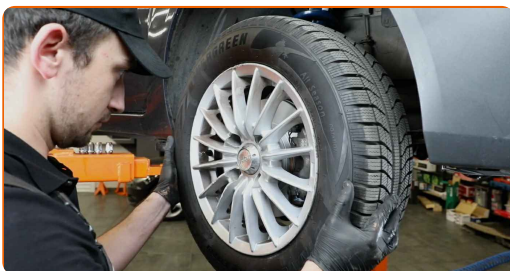

Replacement: coil springs – Ford Fiesta V JH JD. Tip:

- To avoid injury, hold up the wheel when screwing in the fastening bolts.

 
69 Screw in the wheel bolts. Use wheel impact socket #19.




70 Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #19. Use a torque wrench. Tighten it to 95 Nm torque.



71 Remove the jacks and chocks.

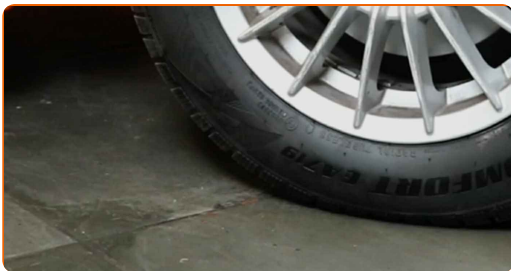

 72 Tighten the upper fastener of the shock absorber strut mount. Use a drive socket #13. Use a torque wrench. Tighten it to 30 nm torque.

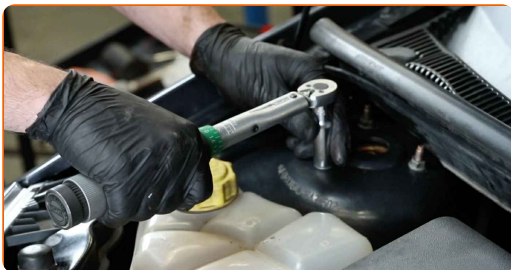

73 Treat the fasteners of the shock strut mount. Use copper grease.

74

Remove the fender protection cover.



75

Close the hood.

**WELL DONE!** [VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR FORD

COIL SPRINGS: A WIDE SELECTION

CHOOSE CAR PARTS FOR FORD FIESTA V JH JD

COIL SPRINGS FOR FORD: BUY NOW

**COIL SPRINGS FOR FORD FIESTA V JH JD: THE BEST DEALS
& OFFERS**

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.