



How to change front
lower arm on **FORD**
Focus Mk2 Estate (DA_,
FFS, DS) – replacement
guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!

This replacement procedure can be used for:

FORD Focus Mk2 Estate (DA_, FFS, DS) 1.6 TDCi, FORD Focus Mk2 Estate (DA_, FFS, DS) 2.0 TDCi, FORD Focus Mk2 Estate (DA_, FFS, DS) 1.4, FORD Focus Mk2 Estate (DA_, FFS, DS) 1.6, FORD Focus Mk2 Estate (DA_, FFS, DS) 1.6 Ti, FORD Focus Mk2 Estate (DA_, FFS, DS) 2.0, FORD Focus Mk2 Estate (DA_, FFS, DS) 1.8 TDCi, FORD Focus Mk2 Estate (DA_, FFS, DS) 1.8 Flexifuel, FORD Focus Mk2 Estate (DA_, FFS, DS) 1.8, FORD Focus Mk2 Estate (DA_, FFS, DS) 2.0 LPG, FORD Focus Mk2 Estate (DA_, FFS, DS) 1.6 LPG

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: FORD Focus Mk2 Estate (DA_, FFS, DS) 1.4

REPLACEMENT: FRONT LOWER ARM – FORD FOCUS MK2 ESTATE (DA_, FFS, DS). TOOLS YOU MIGHT NEED:



- Wire brush
- WD-40 spray
- Copper grease
- Drive socket # 15
- Drive socket # 18
- Combination spanner #22
- Wheel impact socket #19
- Ratchet wrench
- Torque wrench
- Ball joint puller
- Crow bar
- Hydraulic transmission jack
- Wheel chock

[Buy tools](#)


Replacement: front lower arm – FORD Focus Mk2 Estate (DA_, FFS, DS).
AUTODOC recommends:

- The replacement procedure is identical for the left and right lower control arms.
- Replacement of the independent suspension lower arm in some cars requires a part of the outlet piping of the additional heater to be removed.
- Please note: all work on the car – FORD Focus Mk2 Estate (DA_, FFS, DS) – should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:


1

Secure the wheels with chocks.

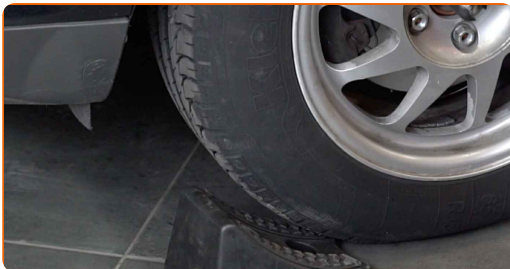

2

Loosen the wheel mounting bolts. Use wheel impact socket #19.

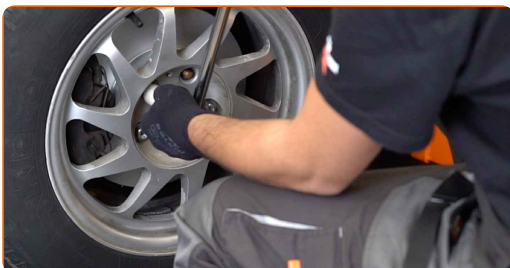

3

Raise the front of the car and secure on supports.

4

Unscrew the wheel bolts.



Replacement: front lower arm – FORD Focus Mk2 Estate (DA_, FFS, DS). Tip:

- To avoid injury, hold up the wheel when unscrewing the bolts.

5

Remove the wheel.



6

Remove the lower sound insulation.

Please note!

- Some cars are not equipped with the lower sound insulation.

7

Clean all joints of the arm. Use a wire brush. Treat all joints of the arm. Use WD-40 spray.



AUTODOC recommends:

- Replacement: front lower arm – FORD Focus Mk2 Estate (DA_, FFS, DS). After applying the spray, wait a few minutes.
- Wear protective goggles.

8

Unscrew the ball joint fastening nut. Use a combination spanner #22.



9

Unscrew the fastening nut, remove the control arm from the steering knuckle, using a ball joint puller.



 
10

Unscrew the front arm fastener. Use a drive socket #18. Use a ratchet wrench.




11

Remove the front fastener of the control arm. Use a crowbar. Use a hammer.




12

 Unscrew the rear arm fastener. Use a drive socket #15. Use a ratchet wrench.




13

 Remove the rear fastener of the control arm.




14 Remove the arm. Use a crowbar.

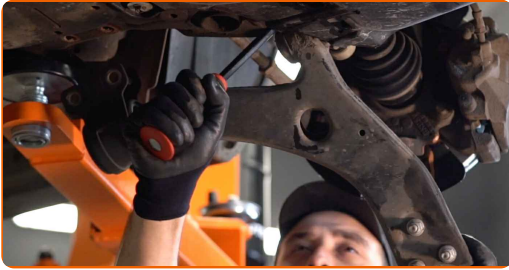

15 Clean the mounting seats and the thread of the suspension arm. Use a wire brush. Use WD-40 spray.




16 Install a new arm.

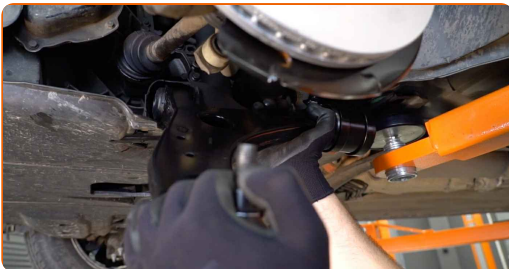

Replacement: front lower arm – FORD Focus Mk2 Estate (DA_, FFS, DS).
AUTODOC experts recommend:

- During the installation process, use only new bolts and nuts.
- Do not damage the ball joint cover.

 
17 Install the front fastener of the arm. Do not tighten it.




18 Connect the ball joint to the steering knuckle.



 19 Support the arm. Use a hydraulic transmission jack.



 20 Install the fastening nut of the ball joint.



21 Install the rear fastener of the arm.

22 Screw the rear arm fastener. Use a drive socket #15. Use a ratchet wrench.



 
23 Screw the front arm fastener. Use a drive socket #18. Use a torque wrench. Tighten it to 175 nm torque.




24 Tighten the rear fastener connecting the arm to the body subframe. Use a drive socket #15. Use a torque wrench. Tighten it to 115 nm torque.



25 Tighten the ball joint fastening nut. Use a combination spanner #22. Use a torque wrench. Tighten it to 70 nm torque.



 
26 Remove the support from under the arm.



AUTODOC recommends:

- Replacement: front lower arm – FORD Focus Mk2 Estate (DA_, FFS, DS). Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.

 27 Clean the wheel rim mounting seat. Use a wire brush. Treat the contacting surface. Use copper grease.



28 Install the wheel.



Replacement: front lower arm – FORD Focus Mk2 Estate (DA_, FFS, DS). Tip from AUTODOC experts:

- To avoid injury, hold up the wheel when screwing in the fastening bolts.

29

Screw in the wheel bolts. Use wheel impact socket #19.



30

Lower the car and working in a cross order, tighten the wheel bolts. Use a torque wrench. Tighten it to 110 nm torque.



31

Remove the jacks and chocks.



WELL DONE! 

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



AUTODOC

GET IT ON
 **Google Play**

Download on the
 **App Store**

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

CONTROL ARM: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.