



How to change air filter
on **FORD FUSION (JU_)** –
replacement guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!


This replacement procedure can be used for:

FORD FUSION (JU_) 1.4, FORD FUSION (JU_) 1.6, FORD FUSION (JU_) 1.25, FORD FUSION (JU_) 1.3, FORD FUSION (JU_) 1.4 LPG

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: FORD Fiesta Mk5 Hatchback (JH1, JD1, JH3, JD3) 1.4 16V

REPLACEMENT: POLLEN FILTER – FORD FUSION (JU_).
TOOLS YOU'LL NEED:

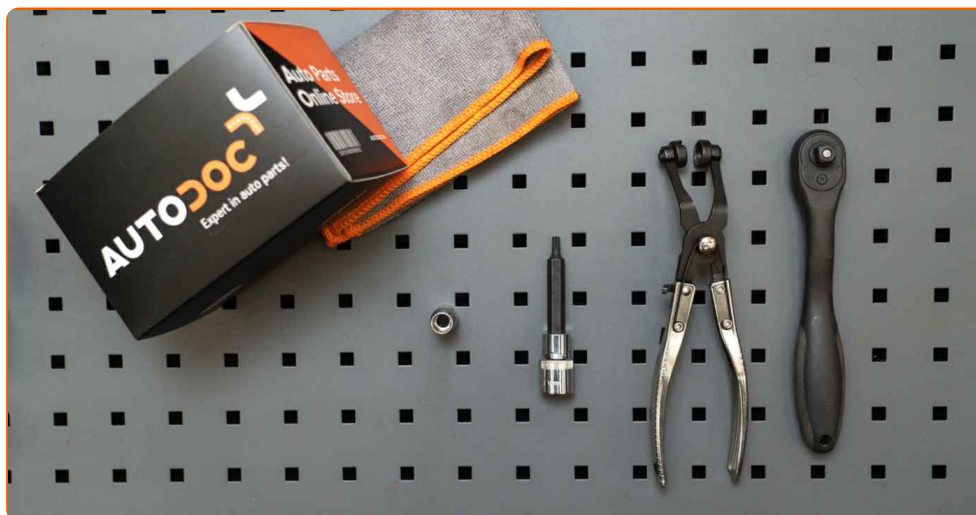

- Drive socket # 10
- Torx bit T27
- Ratchet wrench
- Clic-R collar pliers
- Microfibre towel
- Fender cover

Buy tools

Replacement: air filter – FORD FUSION (JU_). AUTODOC recommends:


- Follow the terms, recommendations and requirements of the part operation provided by the manufacturer.
- Warning! Shut down the engine before starting any work – FORD FUSION (JU_).

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1 Open the bonnet.

2 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

3 Disconnect the air intake pipe from the air filter housing.

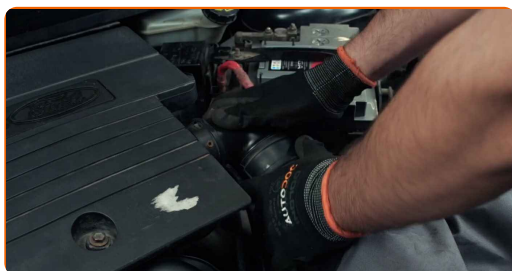


4 Detach the air intake hose clamp. Use clic-R collar pliers.



5 Remove the air intake pipe.



6 Unscrew the filter housing fastening bolts. Use a drive socket #10. Use a ratchet wrench.

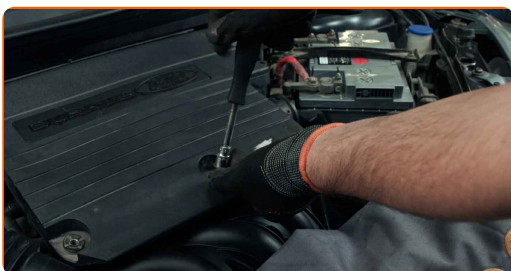

7 Detach the crankcase ventilation hose from the engine cover at the left.



8 Remove the air filter housing.




Please note!

- The air filter housing is integrated into the engine cover.

9 Cover the air intake hose with a microfibre towel to prevent dust and dirt from getting into the system.

10 Undo the fastening screws of the air filter cover. Use Torx T27. Use a ratchet wrench.

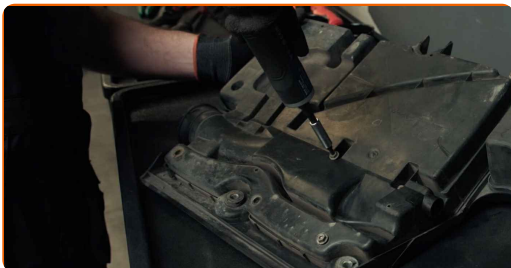


11 Take off the filter lid.



12 Remove the filter element from the filter housing.



13 Clean the air filter cover and housing.

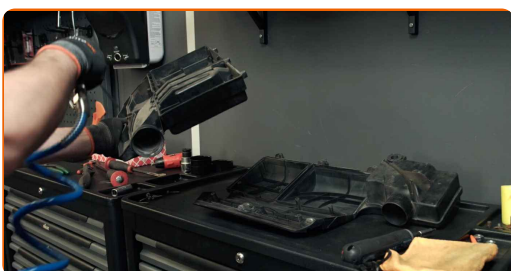

Replacement: air filter – FORD FUSION (JU_). Tip from AUTODOC:

- Before cleaning the air filter cover and housing, cover the air duct parts, mass airflow sensor (if available), throttle valve with a clean cloth.

14

Insert a new filter element into the filter housing. Make sure that the filter edge fits tight to the housing.



Replacement: air filter – FORD FUSION (JU_). Professionals recommend:

- Check out the correct location of the filter element. Do not skew.
- FORD FUSION (JU_) – It's important to only use high-quality filters.
- During installation, make sure to prevent dust and dirt from getting into the air filter housing.

15


Reinstall the air filter cover. Fasten it.



16 Screw in the fastening screws of the air filter cover. Use Torx T27. Use a ratchet wrench.




17 Reinstall the air filter housing.

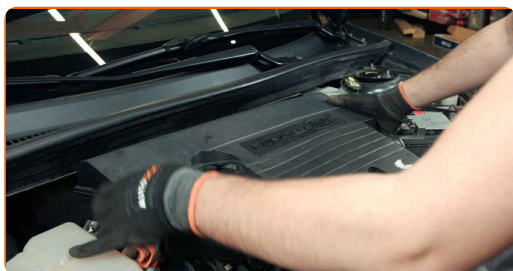


18 Screw the filter housing fastening bolts. Use a drive socket #10. Use a ratchet wrench.




19 Attach the crankcase ventilation hose to the engine cover at the left.

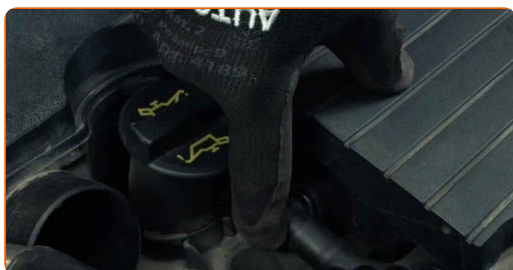

20 Remove the microfibre towel from the air intake hose.

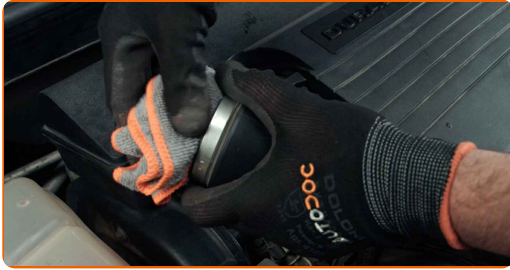


21 Install the air intake pipe and secure it.

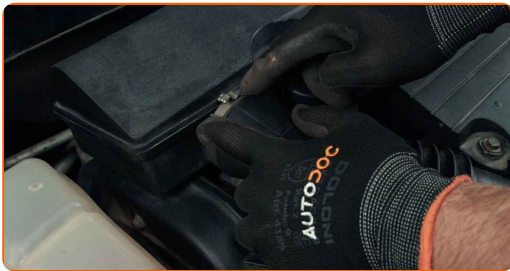

22 Fasten the clamp on the air intake hose. Use clic-R collar pliers.

23 Connect the air intake pipe to the air filter housing.

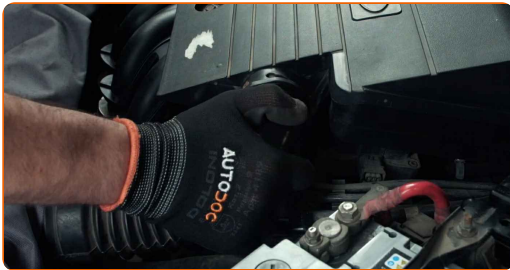

24 Remove the fender protection cover.

25 Close the hood.

WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
 **Google Play**

Download on the
 **App Store**

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

AIR FILTER: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.