



How to change rear light  
on **FORD Transit Mk6**  
**Caja / Chasis (V347,**  
**V348)** – replacement  
guide

## SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

### **Important!**

This replacement procedure can be used for:

FORD Transit Mk6 Platform / Chassis (V347, V348, FM, FN, FF) 2.3 16V RWD, FORD Transit Mk6 Platform / Chassis (V347, V348, FM, FN, FF) 2.2 TDCi, FORD Transit Mk6 Platform / Chassis (V347, V348, FM, FN, FF) 2.4 TDCi RWD, FORD Transit Mk6 Platform / Chassis (V347, V348, FM, FN, FF) 3.2 TDCi RWD, FORD Transit Mk6 Platform / Chassis (V347, V348, FM, FN, FF) 2.4 TDCi 4x4

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: FORD Transit Mk6 Box (V347, V348, FA) 2.2 TDCi

# REPLACEMENT: REAR LIGHT – FORD TRANSIT MK6 CAJA / CHASIS (V347, V348). TOOLS YOU NEED:



- Electronic spray

[Buy tools](#)

Replacement: rear light – FORD Transit Mk6 Caja / Chasis (V347, V348). Tip from AUTODOC experts:

- All the work should be carried out with the ignition switched off.

## CARRY OUT THE REPLACEMENT STEPS AS FOLLOWS:

1

Open the rear door.


2

Unscrew the fasteners connecting the rear light to the car body.

•

3

Remove the rear light.

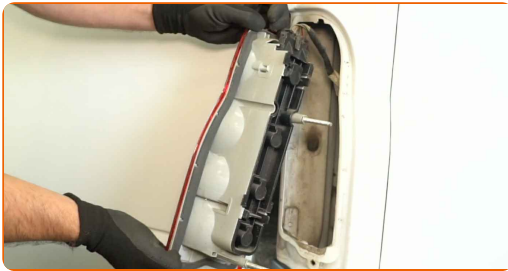


### Important!

- Do not apply excessive force when removing the part. Otherwise you may damage it.

4

 Detach the rear light connector.



5

Remove the bulb holder together with the bulbs.



### Caution!


- Replacement: rear light – FORD Transit Mk6 Caja / Chasis (V347, V348). To avoid damaging the part when removing it, do not use excessive force.
- Avoid touching the bulb glass with bare hands. The finger marks left on it may cause failure.

6


Install the bulb holder together with the bulbs.




- 7 Treat the rear light connector. Use an electronic spray.

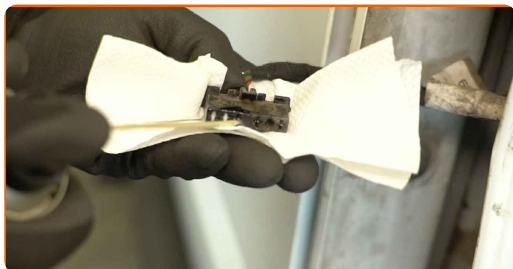


- 8 Attach the rear light connector.

 

- 9 Install the new rear light.

 

 - 10 Tighten the fasteners connecting the rear light to the car body.



- 11 Close the rear door.

12

Check that the new component is working.

**WELL DONE!** 

**VIEW MORE TUTORIALS**

## AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

**AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING**





 GET IT ON  
Google Play

 Download on the  
App Store

Download

**A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR**

**REAR LIGHT: A WIDE SELECTION**

### **DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2024 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.