




How to change the front  
anti-roll bar bushes on  
the **FORD Transit Mk6**  
**Platform / Chassis**  
**(V347, V348)** –  
replacement guide

### SIMILAR VIDEO TUTORIAL

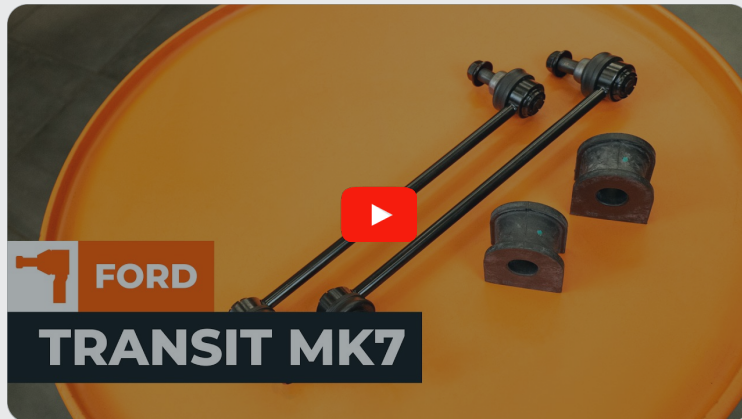

This video shows the replacement procedure of a similar car part on another vehicle

#### **Important!**

This replacement procedure can be used for:

FORD TRANSIT MK-7 Platform/Chassis 2.2 TDCi, FORD TRANSIT MK-7 Platform/Chassis 2.2 TDCi RWD, FORD TRANSIT MK-7 Platform/Chassis 2.3 16V RWD, FORD TRANSIT MK-7 Platform/Chassis 2.4 TDCi RWD, FORD TRANSIT MK-7 Platform/Chassis 2.3 16V LPG RWD, FORD TRANSIT MK-7 Platform/Chassis 2.3 16V CNG RWD

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: FORD TRANSIT MK-7 Box 2.2 TDCi

**REPLACEMENT: ANTI ROLL BAR BUSHES – FORD  
TRANSIT MK6 PLATFORM / CHASSIS (V347, V348).  
TOOLS YOU NEED:**



- Wire brush
- WD-40 spray
- All-purpose cleaning spray
- Ceramic grease
- Torque wrench
- 20 mm combination spanner
- 10 mm socket
- 17 mm socket
- 19 mm socket
- H5 Allen key
- 21 mm wheel impact socket
- Ratchet wrench or power tool for removal/installation of threaded fasteners
- Tommy bar
- Car lift or jack with jack stands, and wheel chocks

**Buy tools**

Replacement: anti roll bar bushes – FORD Transit Mk6 Platform / Chassis (V347, V348). AUTODOC experts recommend:

- Replace the anti-roll bar links and bushes in pairs.
- The replacement procedure is identical for the anti-roll bar links and bushes on both sides of the same axle.
- Please note: all work on the car – FORD Transit Mk6 Platform / Chassis (V347, V348) – should be done with the engine switched off.

**CARRY OUT THE REPLACEMENT STEPS AS FOLLOWS:**

1

Secure the wheels with chocks.



2

Loosen the wheel nuts on the front wheels. Use a 21 mm wheel impact socket. Use a tommy bar.



3

 
Raise the vehicle.

Replacement: anti roll bar bushes – FORD Transit Mk6 Platform / Chassis (V347, V348). AUTODOC recommends:

- If you are using a jack, make sure the car is parked on a hard, flat surface.
- Make sure to additionally secure the car with jack stands.

4

Unscrew the nuts on one of the wheels and remove it.



Caution!

- To avoid injury, hold up the wheel when unscrewing the nuts.

 
5

Remove the other wheel in the same way.



6

Clean the fasteners of one of the anti-roll bar links. Use a wire brush. Use WD-40 spray.




7

Unscrew the fastener connecting the anti-roll bar link to the anti-roll bar. Use a 19 mm combination spanner. Use an H5 Allen key to secure the ball stud. Use a ratchet wrench.



8

Unscrew the fastener connecting the anti-roll bar link to the suspension strut. Use a 19 mm socket. Use a ratchet wrench.

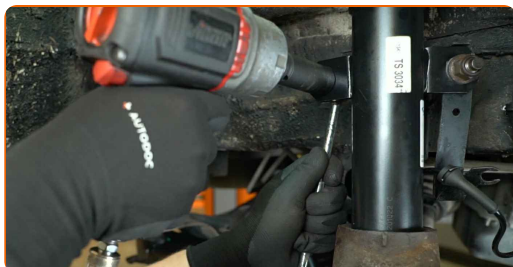


9


Remove the anti-roll bar link.



 **10** Follow the same steps to remove the other anti-roll bar link.



 
**11** Clean the bracket fasteners of one of the anti-roll bar bushes. Use a wire brush. Use WD-40 spray.




**12** Unscrew the fasteners of the anti-roll bar bush bracket. Use a 10 mm socket. Use a ratchet wrench.



 
**13** Remove the fastening bolts.



 
**14** Remove the anti-roll bar bush bracket.




**15** Remove the anti-roll bar bush.

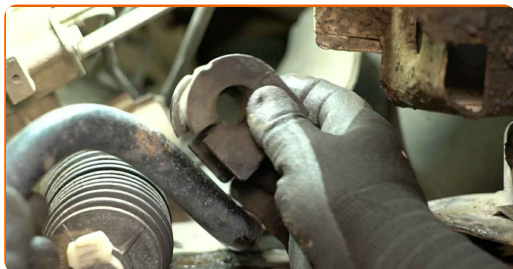

 **16** Follow the same steps to remove the other anti-roll bar bush bracket and the bush.



 
**17** Clean the mounting seats of the anti-roll bar bushes. Use a wire brush. Use an all-purpose cleaning spray.



**18** Install a new anti-roll bar bush on one side of the axle.




 **19** Install the anti-roll bar bush bracket.






 
**20** Install and screw in the fastening bolts.



 
**21** Follow the same steps to install a new anti-roll bar bush and the bracket on the other side.



 **22** Tighten the fasteners on both anti-roll bar bush brackets. Use a 10 mm socket. Use a torque wrench. Tightening torque: 25 N·m.



 **23** Clean the mounting seats of the anti-roll bar link on one side of the axle. Use a wire brush. Use an all-purpose cleaning spray.




24

Install a new anti-roll bar link and its fasteners.



25

 Tighten the fastener connecting the anti-roll bar link to the anti-roll bar. Use a 20 mm combination spanner. Use a 17 mm socket. Use a torque wrench. Tightening torque: 55 N·m.



26

Tighten the fastener connecting the anti-roll bar link to the suspension strut. Use a 20 mm combination spanner. Use a 17 mm socket. Use a torque wrench. Tightening torque: 55 N·m.



27

Follow the same steps to install a new anti-roll bar link on the other side.



 
28

Clean the mounting seat of one of the wheels. Use a wire brush. Use an all-purpose cleaning spray.




29

Treat the wheel hub surface that contacts the wheel rim. Use ceramic grease.



30

 Install the wheel.



Replacement: anti roll bar bushes – FORD Transit Mk6 Platform / Chassis (V347, V348). Professionals recommend:

- To avoid injury, hold up the wheel when screwing on the fastening nuts.

31

Screw on the wheel nuts. Use a 21 mm wheel impact socket. Use a ratchet wrench.



32

Reinstall the other wheel in the same way.

33

Lower the car and tighten the wheel nuts in a criss-cross order. Use a 21 mm wheel impact socket. Use a torque wrench. Tightening torque: 200 N·m.



34

Remove the jack, jack stands, and wheel chocks.



**WELL DONE!** 

**VIEW MORE TUTORIALS**

# AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

**AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING**



**+ AUTODOC**

GET IT ON  
**Google Play**

 Download on the  
**App Store**

**Download**

**A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR**

**ANTI ROLL BAR BUSHES: A WIDE SELECTION**

## **DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2024 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.