



How to change right
engine mounts on **Opel**
Astra G F48 –
replacement guide

VIDEO TUTORIAL



i Important!

This replacement procedure can be used for:

OPEL Astra G CC (T98) 1.2 16V (F08, F48), OPEL Astra G CC (T98) 1.6 (F08, F48), OPEL Astra G CC (T98) 1.8 16V (F08, F48), OPEL Astra G Caravan (T98) 1.2 16V (F35), OPEL Astra G Caravan (T98) 1.6 (F35), OPEL Astra G Caravan (T98) 1.8 16V (F35), OPEL Astra G Coupe (T98) 1.6 16V (F07), OPEL Astra G Saloon (T98) 1.6 (F69), OPEL Astra G Saloon (T98) 1.8 16V (F69), OPEL Astra G Saloon (T98) 1.2 16V (F69), OPEL Zafira A (T98) 1.8 16V (F75), OPEL Astra G Coupe (T98) 1.8 16V (F07), OPEL Astra G Van (F70) 1.6 (F70), OPEL Astra G Convertible (T98) 1.6 16V (F67), OPEL Astra G Convertible (T98) 1.8 16V (F67), (+ 8)

The steps may slightly vary depending on the car design.

REPLACEMENT: ENGINE MOUNTS – OPEL ASTRA G F48. TOOLS YOU NEED:



- Wire brush
- WD-40 spray
- Drive socket # 7
- Drive socket # 12
- Drive socket # E20
- Torx bit T30
- Torx bit T55
- Ratchet wrench
- Torque wrench
- Hydraulic transmission jack
- Jack
- Vice
- Microfibre towel
- Fender cover
- Wheel chock

BUY TOOLS

Replacement: engine mounts – Opel Astra G F48. AUTODOC recommends:

- All work should be done with the engine stopped.

REPLACEMENT: ENGINE MOUNTS – OPEL ASTRA G F48. USE THE FOLLOWING PROCEDURE:


1

Open the bonnet.




2

Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

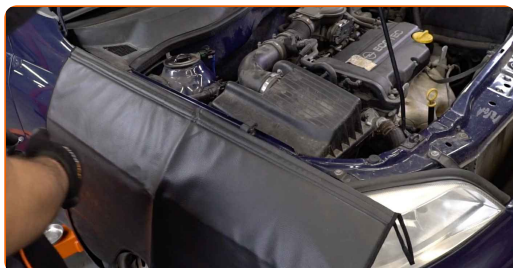


3

 
Detach the air intake hose clamp. Use a drive socket #7. Use a ratchet wrench.



 
- 4 Disconnect the air intake pipe from the air filter housing.



 - 5 Cover the air intake hose with a microfibre towel to prevent dust and dirt from getting into the system.



 - 6 Detach the fasteners connecting the air pipe and the wiring harness to the air filter housing.



- 7 Take off the filter lid. Remove the filter element from the filter housing.



 
8

Unscrew the filter housing fastening bolts. Use Torx T30. Use a ratchet wrench.



9

Remove the air filter housing.




10

Lift the car using a jack or place it over an inspection pit.



11

Support the engine skid plate. Use a hydraulic transmission jack.

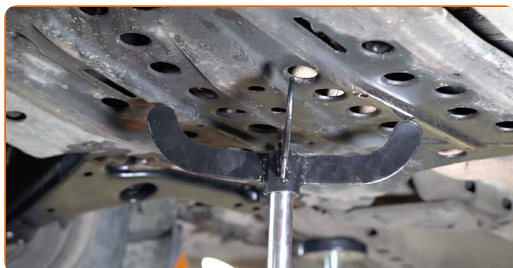

12

Undo the fasteners of the oil pan lower cover. Use a drive socket #12.

 


Replacement: engine mounts – Opel Astra G F48. Tip from AUTODOC experts:

- To avoid injury, hold the engine skid plate cautiously tight when unscrewing the fasteners and when lowering the hydraulic transmission jack.

13

Remove the hydraulic transmission jack. Remove the oil pan cover.



AUTODOC recommends:

- Replacement: engine mounts – Opel Astra G F48. Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.

14

Lower the car.



15

Support the engine in the oil pan area. Use a jack.

 


Replacement: engine mounts – Opel Astra G F48. AUTODOC experts recommend:

- Make sure that the engine is supported.


16

Unscrew the engine mount fasteners (6 pieces). Use a drive socket #E20. Use a ratchet wrench.



17

Remove the engine mount.

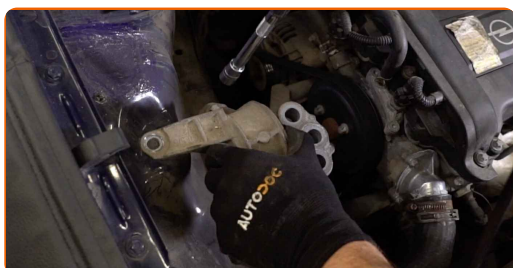

Replacement: engine mounts – Opel Astra G F48. Tip:

- Carefully check the other engine mounts and replace them if necessary.


18

Grip the bracket with the engine mount in a vice.



19

Unscrew the engine mount from the bracket. Use Torx T55. Use a ratchet wrench.

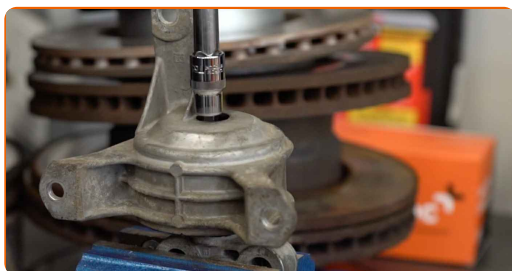


20

Screw the new engine mount to the bracket. Use Torx T55. Use a ratchet wrench.




21


Remove the bracket with the engine mount from the vice.

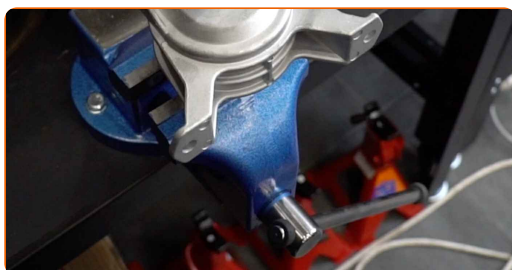

 - 22 Clean the mounting seat of the engine mount. Use WD-40 spray.



 
- 23 Install the engine mount to its mounting seat.



- 24 Screw in the engine mount fasteners (6 pieces). Use a drive socket #E20. Use a torque wrench. Tighten it to 55 Nm torque.



 - 25 Remove the support from under the engine.




- 26 Lift the car and set it on jack stands.




27

 Reinstall the oil pan lower cover.




28

 Support the engine skid plate. Use a hydraulic transmission jack.




29

 Tighten the fasteners of the oil pan lower cover. Use a drive socket #12.



30

 Remove the hydraulic transmission jack.




AUTODOC recommends:

- Opel Astra G F48 – Do not lower the transmission jack sharply to avoid damaging components and mechanisms of the car.


31 Lower the car.



32 Reinstall the air filter housing.

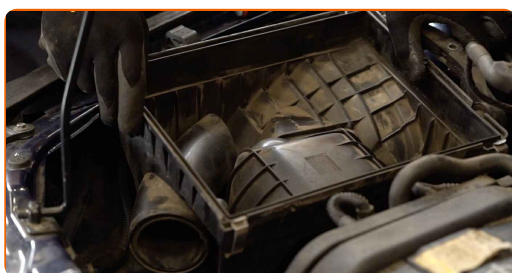

33 Screw the filter housing fastening bolts. Use Torx T30. Use a ratchet wrench.

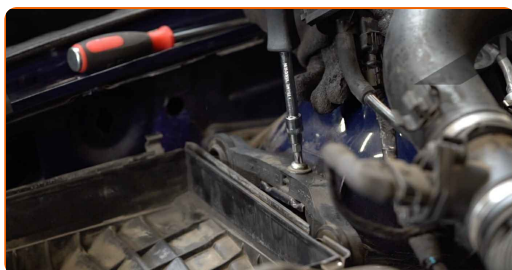

34 Insert the filter cartridge into the filter housing. Make sure that the filter edge fits tight to the housing.




Replacement: engine mounts – Opel Astra G F48. Tip from AUTODOC:

- Check out the correct location of the filter element. Do not skew.
- During installation, make sure to prevent dust and dirt from getting into the air filter housing.


35

Reinstall the air filter cover. Fasten it.

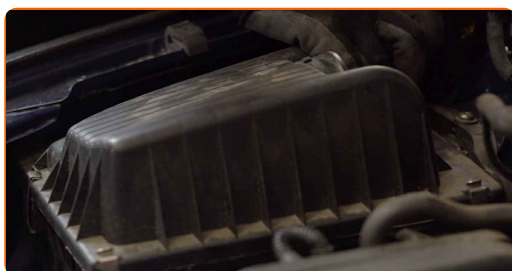


36

Attach the fasteners connecting the air pipe and the wiring harness to the air filter housing.

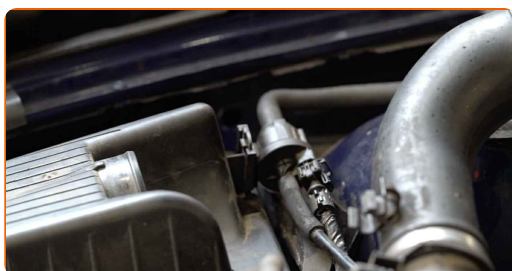

37

Remove the microfibre towel from the air intake hose.

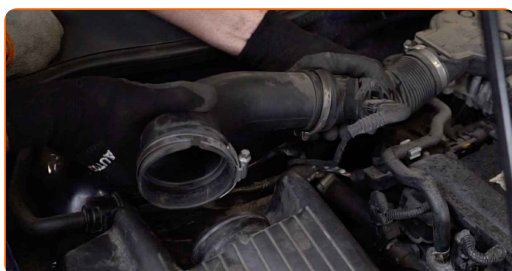


38

Connect the air intake pipe to the air filter housing.




39

 Fasten the clamp on the air intake hose. Use a drive socket #7. Use a ratchet wrench.



40

 Remove the fender protection cover.



41

Close the hood.



WELL DONE! 👍

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR OPEL

ENGINE MOUNTS: A WIDE SELECTION

CHOOSE CAR PARTS FOR OPEL ASTRA G F48

ENGINE MOUNTS FOR OPEL: BUY NOW

**ENGINE MOUNTS FOR OPEL ASTRA G F48: THE BEST
DEALS & OFFERS**

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2021 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.