



How to change rear coil
springs on **VW Golf 5** –
replacement guide

VIDEO TUTORIAL



Important!

This replacement procedure can be used for:

VW Golf VI Hatchback (5K1) 1.6 MultiFuel, VW Golf Plus / Crossgolf (5M1, 521) 1.2 TSI, VW Golf VI Hatchback (5K1) 1.2 TSI, VW Golf V Hatchback (1K1) 1.4 16V, VW Golf V Hatchback (1K1) 2.0 TDI 16V, VW Golf V Hatchback (1K1) 2.0 FSI, VW Golf V Hatchback (1K1) 1.9 TDI, VW Golf V Hatchback (1K1) 1.6 FSI, VW Golf V Hatchback (1K1) 1.4 FSI, VW Golf V Hatchback (1K1) 2.0 SDI, VW Golf Plus / Crossgolf (5M1, 521) 1.4 16V, VW Golf Plus / Crossgolf (5M1, 521) 1.6 FSI, VW Jetta Mk5 (1K) 1.6, VW Jetta Mk5 (1K) 1.6 FSI, VW Golf V Hatchback (1K1) 2.0 TDI, (+ 23)

The steps may slightly vary depending on the car design.

REPLACEMENT: COIL SPRINGS – VW GOLF 5. TOOLS
YOU'LL NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Combination spanner #18
- Drive socket # 18
- Wheel impact socket #17
- Ratchet wrench
- Torque wrench
- Crow bar
- Hydraulic transmission jack
- Wheel chock

BUY TOOLS

Replacement: coil springs – VW Golf 5. Professionals recommend:

 
- Both coil springs of the rear suspension should be replaced simultaneously.
- The replacement procedure is identical for the left and right coil springs of the rear suspension.
- All work should be done with the engine stopped.

REPLACEMENT: COIL SPRINGS – VW GOLF 5. USE THE FOLLOWING PROCEDURE:


1 Secure the wheels with chocks.



2 Loosen the wheel mounting bolts. Use wheel impact socket #17.



 3 Raise the rear of the car and secure on supports.



4

Unscrew the wheel bolts.




Replacement: coil springs – VW Golf 5. AUTODOC recommends:

- To avoid injury, hold up the wheel when unscrewing the bolts.


5

Remove the wheel.

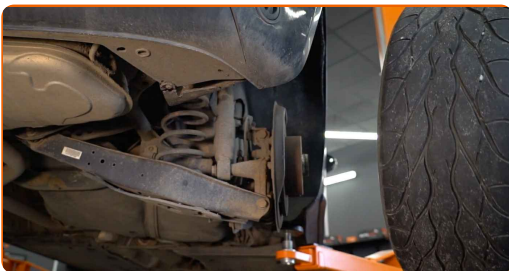

6

Clean all joints of the arm. Use a wire brush. Use WD-40 spray.

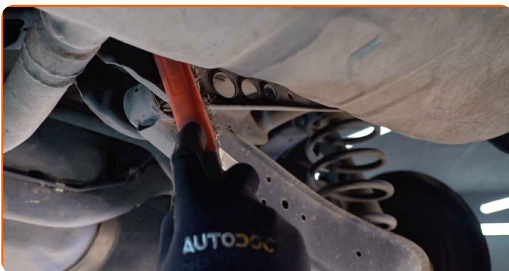

7

Make a mark on the camber adjustment bolt.




- 8 Unscrew the arm fastening to the beam. Use a combination spanner #18. Use a drive socket #18. Use a ratchet wrench.




- 9 Support the arm. Use a hydraulic transmission jack.



- 10 Remove the fastening bolt. Use a crowbar.

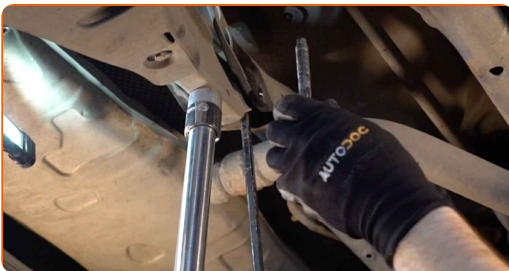

- 11 Remove the support from under the arm.

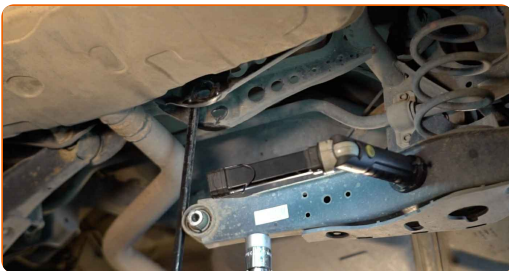


AUTODOC recommends:

- Replacement: coil springs – VW Golf 5. Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.


12 Take out the spring.



 
13 Install the coil spring together with the rubber mounts into the mounting seats. Use a crowbar.



 14 Support the arm. Use a hydraulic transmission jack.




15 Install the fastening bolt.

 

AUTODOC recommends:

- Adjust the position of the alignment bolt according to the mark.

16 Remove the support from under the arm.

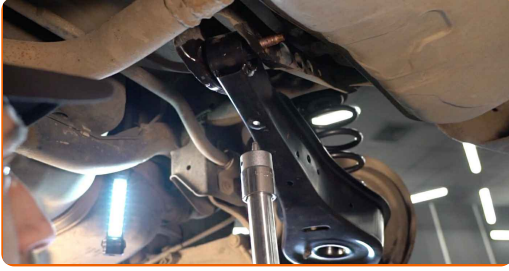


Replacement: coil springs – VW Golf 5. Tip from AUTODOC experts:

- Lower the hydraulic transmission jack smoothly, without jerks, to avoid damaging assemblies and mechanisms.


17 Screw in the fastener connecting the control arm to the rear subframe. Use a combination spanner #18. Use a drive socket #18.




18 Support the arm. Use a hydraulic transmission jack.

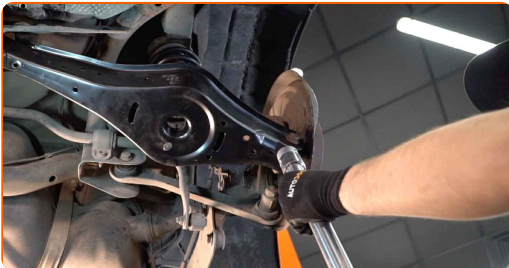

- 19 Tighten the fastener connecting the control arm to the rear subframe. Use a combination spanner #18. Use a drive socket #18. Use a torque wrench. Tighten it to 95 Nm torque.

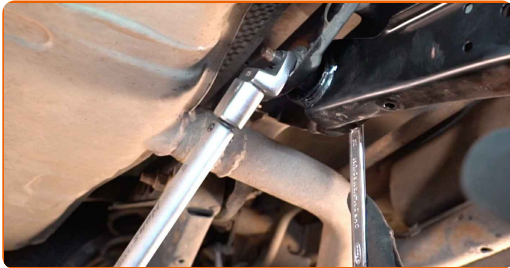

- 20 Remove the support from under the arm.

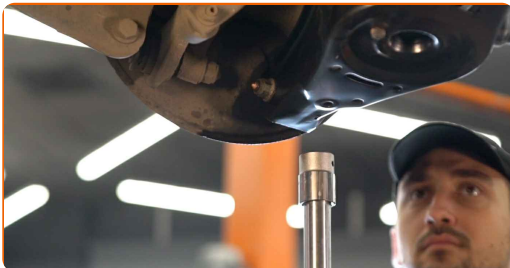

AUTODOC recommends:

- VW Golf 5 – Do not lower the transmission jack sharply to avoid damaging components and mechanisms of the car.

- 21 Treat all joints of the arm. Use copper grease.



22

Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



23

Clean the brake disk surface. Use a brake cleaner.

 


Replacement: coil springs – VW Golf 5. Tip from AUTODOC:

- After applying the spray, wait a few minutes.

24

Install the wheel.




AUTODOC recommends:

- Important! Hold the wheel while screwing in the fastening bolts. VW Golf 5

25

 Screw in the wheel bolts. Use wheel impact socket #17.



26

Lower the car and working in a cross order, tighten the wheel bolts. Use a torque wrench. Tighten it to 120 nm torque.



27

Remove the jacks and chocks.

WELL DONE! 👍

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING

AUTODOC⁺

GET IT ON
 Google Play

Download on the
 App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR VW

COIL SPRINGS: A WIDE SELECTION

CHOOSE CAR PARTS FOR VW GOLF 5

COIL SPRINGS FOR VW: BUY NOW

COIL SPRINGS FOR VW GOLF 5: THE BEST DEALS & OFFERS

ⓘ DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.