



How to change rear
brake discs on **HONDA**
CIVIC VII Saloon (FD,
FA) – replacement guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!

This replacement procedure can be used for:

HONDA CIVIC VIII Saloon (FD, FA) 1.8 EXS Flex, HONDA CIVIC VIII Saloon (FD, FA) 1.3 Hybrid (FD3), HONDA CIVIC VIII Saloon (FD, FA) 1.3 Hybrid (FA3, FD3), HONDA CIVIC VIII Saloon (FD, FA) 1.6, HONDA CIVIC VIII Saloon (FD, FA) 1.8 (FD1, FD7), HONDA CIVIC VIII Saloon (FD, FA) 1.3, HONDA CIVIC VIII Saloon (FD, FA) 2.0 (FD2), HONDA CIVIC VIII Saloon (FD, FA) 1.8, HONDA CIVIC VIII Saloon (FD, FA) 2.0 i-VTEC Type R

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: HONDA CIVIC VIII Hatchback (FN, FK) 1.8 (FN1, FK2)

REPLACEMENT: BRAKE DISCS – HONDA CIVIC VIII SALOON (FD, FA). TOOLS YOU'LL NEED:



- Wire brush
- Nylon cleaning brush
- WD-40 spray
- Brake cleaner
- Anti-squeal paste
- Ceramic grease
- Torque wrench
- Combination spanner #15
- Drive socket # 13
- Drive socket # 14
- Wheel impact socket #19
- Ratchet wrench
- Tap wrench
- Brake caliper wind back tool
- Phillips screwdriver
- Crow bar
- Impact screwdriver
- Hammer
- Wheel chock

Buy tools

Replacement: brake discs – HONDA CIVIC VIII Saloon (FD, FA). AUTODOC experts recommend:

- Replace the brake disks on the car HONDA CIVIC VIII Saloon (FD, FA) in pairs on an axle, regardless of the condition of the components. This will ensure even braking.
- The replacement procedure is identical for both brake disks on the same axle.
- When changing the brake discs, always replace the brake pads.
- Warning! Shut down the engine before starting any work – HONDA CIVIC VIII Saloon (FD, FA).


CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1 Open the bonnet.

2 Remove the cowl grille seal.



3 Remove the plastic panel.

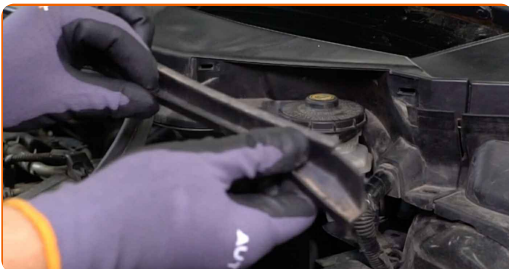

4 Unscrew the brake fluid reservoir cap.



5 Secure the wheels with chocks.

6 Loosen the wheel bolts. Use wheel impact socket #19. Use a tap wrench.



7 Raise the car.

Replacement: brake discs – HONDA CIVIC VIII Saloon (FD, FA). Tip:

- If you are using a jack, make sure it rests on a flat surface without any unevenness.
- Be sure to additionally secure the car with jack stands.

8 Unscrew the wheel bolts.

 


AUTODOC recommends:

- Important! Hold the wheel while unscrewing the fastening bolts. HONDA CIVIC VIII Saloon (FD, FA)

9

Remove the wheel.



10

Spread the brake pads. Use a crowbar.


11

Clean the brake caliper fasteners. Use a wire brush. Use WD-40 spray.



12

Unscrew the brake caliper fasteners. Use a combination spanner #15. Use a drive socket #13. Use a ratchet wrench.

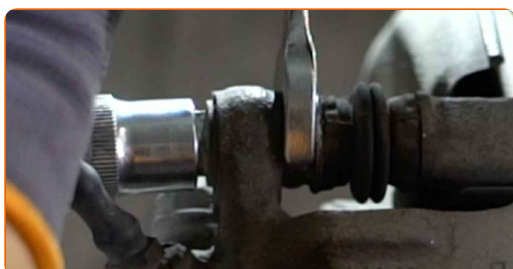


13

Remove the fastening bolts.



14

 Remove the brake caliper.




Replacement: brake discs – HONDA CIVIC VIII Saloon (FD, FA). Tip from AUTODOC experts:


- Tie the caliper to the suspension or to the body with a wire without disconnecting from the brake hose to prevent depressurization of the brake system.
- Make sure that the brake caliper is not hanging on the brake hose.
- Don't press the brake pedal after the brake caliper has been removed. As a result, the piston can fall out from the brake cylinder, and brake fluid leakage and depressurization of the system may occur.

15

 
Remove the brake pads.



 
16 Clean the brake caliper bracket fasteners. Use a wire brush. Use WD-40 spray.



 
17 Unscrew the brake caliper bracket fasteners. Use a drive socket #14. Use a ratchet wrench.



18 Remove the fastening bolts.

 

19 Remove the brake caliper bracket.

 


20


Clean the brake disc fasteners. Use a wire brush. Use WD-40 spray.

**21**

 Unscrew the brake disc fasteners. Use a Phillips screwdriver. Use an impact screwdriver. Use a hammer.

**22**


Remove the fastening bolts.

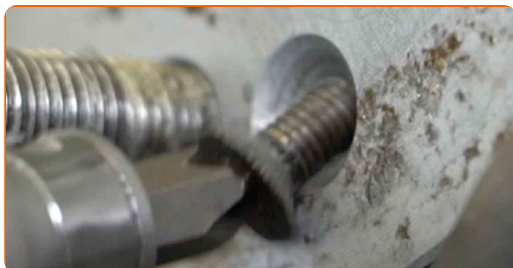**23**

Remove the brake disc.

**24**

 Clean the wheel hub. Use a wire brush.



25 Treat the contacting surface. Use ceramic grease.



26 Clean the brake disk surface. Use a brake cleaner.



27 Install a new brake disc.



28 Install the fastening bolts.



29 Tighten the brake disc fasteners. Use a Phillips screwdriver. Use a torque wrench. Tighten it to 10 Nm torque.



30

Clean the brake caliper bracket of dirt and dust. Use a wire brush. Use a brake cleaner.

 


AUTODOC recommends:

- Check the brake caliper bracket, brake caliper guide pins and boots. Clean them. Replace, if necessary.


31

Install the brake caliper bracket.




32

 Install the fastening bolts.



 - 33** Tighten the brake caliper bracket fasteners. Use a drive socket #14. Use a torque wrench. Tighten it to 55 Nm torque.



- 34** Treat the brake caliper piston. Use a nylon cleaning brush. Use a brake cleaner.



- 35** Press in the brake caliper piston. Use brake caliper wind back tool.



- 36** Treat the brake pads in the area where their surface comes into contact with the brake caliper bracket. Use anti-squeal paste.

 


Replacement: brake discs – HONDA CIVIC VIII Saloon (FD, FA). AUTODOC recommends:

- Make sure the disc surface is clean before installing the pads.


37

Install the brake pads.




38

 Install the brake caliper and fasten it.



39

 Install the fastening bolts.



40

Tighten the brake caliper fasteners. Use a combination spanner #15. Use a drive socket #13. Use a torque wrench. Tighten it to 35 Nm torque.



 
41

Treat the surface where the brake disc contacts the wheel rim. Use ceramic grease.




42

Clean the brake disk surface. Use a brake cleaner.



43

 Install the wheel.



Replacement: brake discs – HONDA CIVIC VIII Saloon (FD, FA). Professionals recommend:

- To avoid injury, hold up the wheel when screwing in the fastening bolts.

44

Screw in the wheel bolts. Use wheel impact socket #19. Use a ratchet wrench.



 
45

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #19. Use a torque wrench. Tighten it to 108 Nm torque.



46


Remove the jacks and chocks.



AUTODOC recommends:

- HONDA CIVIC VIII Saloon (FD, FA) – Without starting the engine, press the brake pedal several times until it feels firm.
- Check the brake fluid level in the expansion tank and top up if necessary.

47 Tighten the brake fluid reservoir cap.

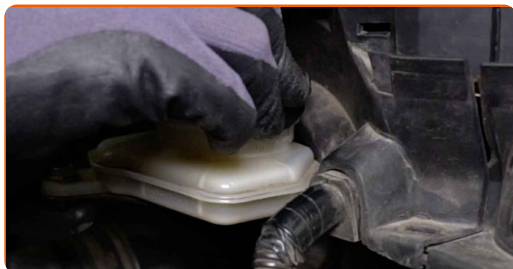

48 Install the plastic panel.



49 Install the cowl grille seal.



50 Close the bonnet.

WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

 Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BRAKE DISCS: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.