



How to change air filter
on **Seat Ibiza 6L1** –
replacement guide

VIDEO TUTORIAL

** Important!**

This replacement procedure can be used for:

SEAT Leon Hatchback (1M1) 1.6 16 V, SEAT Toledo II Saloon (1M2) 1.6 16V, SEAT Ibiza III Hatchback (6L) 1.4 16V, SEAT Cordoba Saloon (6L2) 1.4 16V, SEAT Ibiza III Hatchback (6L) 1.6, SEAT Cordoba Saloon (6L2) 1.6

The steps may slightly vary depending on the car design.

REPLACEMENT: AIR FILTER – SEAT IBIZA 6L1. TOOLS
YOU MIGHT NEED:



- Phillips screwdriver
- Microfibre towel
- Fender cover

BUY TOOLS

Replacement: air filter – Seat Ibiza 6L1. AUTODOC experts recommend:

 
- Follow the terms, recommendations and requirements of the part operation provided by the manufacturer.
- Please note: all work on the car – Seat Ibiza 6L1 – should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:


1 Open the bonnet.



2 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.



 3 On the right side, detach the PCV valve hose from the engine cover.



4

Remove the engine cover The air filter housing is integrated into the engine cover.

 


AUTODOC recommends:

- Replacement: air filter – Seat Ibiza 6L1. To avoid damaging the part when removing it, do not use excessive force.


5

Cover the throttle body with a microfibre towel to prevent dust and dirt from getting into the system.



6

 Undo the fastening screws of the air filter cover. Use a Phillips screwdriver.



7 Take off the filter lid.



8 Remove the filter element from the filter housing.



9 Clean the air filter cover and housing.



Replacement: air filter – Seat Ibiza 6L1. Tip:

- Before cleaning the air filter cover and housing, cover the air duct parts, mass airflow sensor (if available), throttle valve with a clean cloth.

10

Insert a new filter element into the filter housing. Make sure that the filter edge fits tight to the housing.

 


AUTODOC recommends:

- Replacement: air filter – Seat Ibiza 6L1. Be sure to position the filtering element correctly. Avoid misalignment.
- Take care to only use quality filters.
- During installation, make sure to prevent dust and dirt from getting into the air filter housing.


11

Reinstall the air filter cover. Fasten it.




12

 
Screw in the fastening screws of the air filter cover. Use a Phillips screwdriver.



 13 Remove the microfibre towel from the throttle body.



 
14 Install the engine cover and secure it. Make sure you hear a click indicating that it is locked in place.



Replacement: air filter – Seat Ibiza 6L1. AUTODOC recommends:


- Do not apply excessive force when installing the part. Otherwise you may damage the fasteners.
- Make sure the engine cover is properly seated. It should not be displaced with respect to the guiding fasteners and the throttle body air intake hose.

 15 On the right side, attach the PCV valve hose to the engine cover.




16

 Remove the fender protection cover.



17

 Close the hood.



WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR SEAT

AIR FILTER: A WIDE SELECTION

CHOOSE CAR PARTS FOR SEAT IBIZA 6L1

AIR FILTER FOR SEAT: BUY NOW

AIR FILTER FOR SEAT IBIZA 6L1: THE BEST DEALS & OFFERS

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.