



How to change rear coil  
springs on **Seat Ibiza 6L1**  
– replacement guide

## VIDEO TUTORIAL



### **ⓘ Important!**

This replacement procedure can be used for:

SEAT Ibiza III Hatchback (6L) 1.2, SEAT Ibiza III Hatchback (6L) 1.4 16V, SEAT Ibiza III Hatchback (6L) 1.9 TDI, SEAT Ibiza III Hatchback (6L) 1.9 SDI, SEAT Ibiza III Hatchback (6L) 1.4 TDI, SEAT Córdoba II Saloon (6L2) 1.2, SEAT Córdoba II Saloon (6L2) 1.4 16V, SEAT Córdoba II Saloon (6L2) 1.9 TDI, SEAT Córdoba II Saloon (6L2) 1.9 SDI, SEAT Córdoba II Saloon (6L2) 1.4 TDI, SEAT Ibiza III Hatchback (6L) 1.8 T Cupra R, SEAT Ibiza III Hatchback (6L) 1.6, SEAT Córdoba II Saloon (6L2) 1.6, SEAT Ibiza III Hatchback (6L) 1.9 TDI Cupra R, SEAT Córdoba II Saloon (6L2) 2.0, (+ 11)

The steps may slightly vary depending on the car design.

## REPLACEMENT: COIL SPRINGS – SEAT IBIZA 6L1. TOOLS YOU'LL NEED:



- Wire brush
- WD-40 spray
- Copper grease
- Torque wrench
- Combination spanner #16
- Drive socket # 16
- Wheel impact socket #17
- Ratchet wrench
- Crow bar
- Hydraulic transmission jack
- Wheel chock

[BUY TOOLS](#)

Replacement: coil springs – Seat Ibiza 6L1. AUTODOC experts recommend:

- Both coil springs of the rear suspension should be replaced simultaneously.
- The replacement procedure is identical for the left and right coil springs of the rear suspension.
- All work should be done with the engine stopped.

## REPLACEMENT: COIL SPRINGS – SEAT IBIZA 6L1. USE THE FOLLOWING PROCEDURE:

1

Secure the wheels with chocks.



 
2

Loosen the wheel mounting bolts. Use wheel impact socket #17.



3

Raise the rear of the car and secure on supports.



4

Unscrew the wheel bolts.




### AUTODOC recommends:

- Important! Hold the wheel while unscrewing the fastening bolts. Seat Ibiza 6L1


5

Remove the wheel.

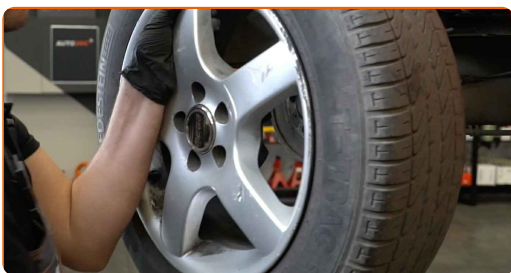


6

 Clean the shock absorber fasteners. Use a wire brush. Use WD-40 spray.




7

 Support the rear suspension beam. Use a hydraulic transmission jack.




8

 Unscrew the lower fastener of the shock absorber. Use a combination spanner #16. Use a drive socket #16. Use a ratchet wrench.




9

 Remove the fastening bolt.



10

 
Remove the mounting from under the rear axle beam.




Replacement: coil springs – Seat Ibiza 6L1. Tip:

- Lower the hydraulic transmission jack smoothly, without jerks, to avoid damaging assemblies and mechanisms.

 
- 11 Support the rear suspension beam. Use a hydraulic transmission jack.



 
- 12 Unscrew the lower fastener of the shock absorber. Use a combination spanner #16. Use a drive socket #16. Use a ratchet wrench.



- 13 Remove the fastening bolt.

 

 - 14 Remove the mounting from under the rear axle beam.




### AUTODOC recommends:

- Seat Ibiza 6L1 – Do not lower the transmission jack sharply to avoid damaging components and mechanisms of the car.



 
15 Remove the spring. Use a crowbar.




### AUTODOC recommends:

- Inspect the rubber mounts of the suspension spring. Replace if necessary.

 
16 Clean the coil spring mounting seats. Use a wire brush. Use WD-40 spray.



 17 Install the coil spring together with the rubber mounts into the mounting seats.



 18 Support the rear suspension beam. Use a hydraulic transmission jack.





19

Install the fastening bolt.



20

Tighten the lower fastener of the shock absorber. Use a combination spanner #16. Use a drive socket #16. Use a torque wrench. Tighten it to 40 Nm torque. +90°



### AUTODOC recommends:

- Important! Be sure to use new fasteners.

21

Remove the mounting from under the rear axle beam.

### Replacement: coil springs – Seat Ibiza 6L1. Tip from AUTODOC:

- Lower the hydraulic transmission jack smoothly, without jerks, to avoid damaging assemblies and mechanisms.

 
22

Support the rear suspension beam. Use a hydraulic transmission jack.




23

Install the fastening bolt.



24

 Tighten the lower fastener of the shock absorber. Use a combination spanner #16. Use a drive socket #16. Use a torque wrench. Tighten it to 40 Nm torque.+90°




AUTODOC recommends:

- Important! Be sure to use new fasteners.

25

 Remove the mounting from under the rear axle beam.




### AUTODOC recommends:

- Seat Ibiza 6L1 – Do not lower the transmission jack sharply to avoid damaging components and mechanisms of the car.


26

 Treat the shock absorber fasteners. Use copper grease.




27

 Clean the wheel rim mounting seat. Use a wire brush.



28

 Treat the surface where the wheel rim contacts the brake drum. Use copper grease.



29

Install the wheel.



Replacement: coil springs – Seat Ibiza 6L1. Tip from AUTODOC experts:

- To avoid injury, hold up the wheel when screwing in the fastening bolts.

30

Screw in the wheel bolts. Use wheel impact socket #17.



 
31

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 Nm torque.



32

Remove the jacks and chocks.



**WELL DONE!**

[VIEW MORE TUTORIALS](#)

## AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

**AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING**



**+ AUTODOC**

GET IT ON  
**Google Play**

Download on the  
**App Store**

**Download**

**A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR**

**BUY SPARE PARTS FOR SEAT**

**COIL SPRINGS: A WIDE SELECTION**

**CHOOSE CAR PARTS FOR SEAT IBIZA 6L1**

**COIL SPRINGS FOR SEAT: BUY NOW**

**COIL SPRINGS FOR SEAT IBIZA 6L1: THE BEST DEALS & OFFERS**

### **DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.