



How to change rear
brake shoes on **Fiat**
Panda 169 – replacement
guide

VIDEO TUTORIAL


** Important!**

This replacement procedure can be used for:

FIAT PANDA (169) 1.2, FIAT 500 C Convertible (312) 0.9, FIAT PANDA (169) 1.1, FIAT PANDA (169) 1.3 D Multijet, FIAT 500 Hatchback (312) 1.2, FIAT 500 Hatchback (312) 1.3 D Multijet, FIAT 500 C Convertible (312) 1.2, FIAT 500 C Convertible (312) 1.3 D Multijet

The steps may slightly vary depending on the car design.

**REPLACEMENT: BRAKE SHOES – FIAT PANDA 169.
LIST OF THE TOOLS YOU'LL NEED:**

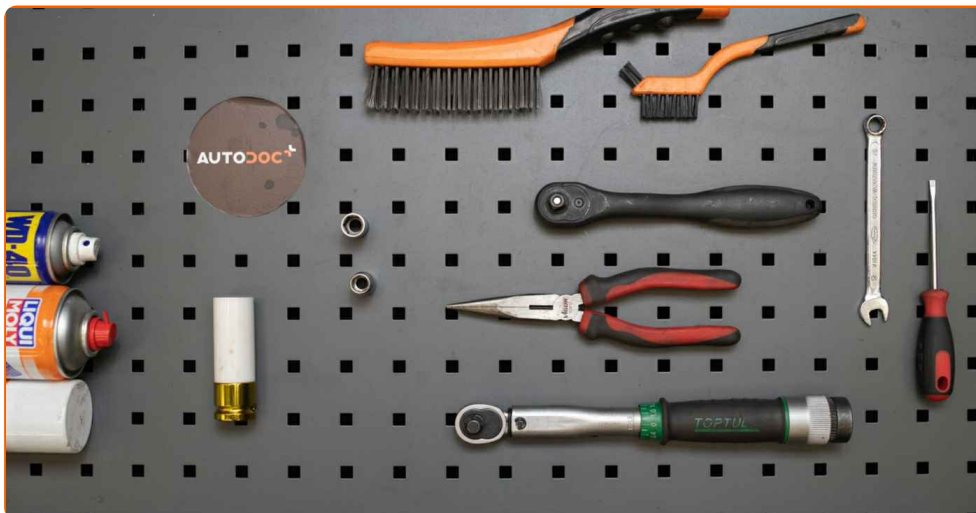

- Wire brush
- WD-40 spray
- All-purpose cleaning spray
- Copper grease
- Torque wrench
- Drive socket # 10
- Drive socket # 12
- Combination spanner #10
- Wheel impact socket #17
- Ratchet wrench
- Flat Screwdriver
- Crow bar
- Round-nose pliers
- Wheel chock

 
BUY TOOLS

Replacement: brake shoes – Fiat Panda 169. AUTODOC experts recommend:

- Replace brake shoes as a set on an axle. This will ensure efficient braking.
- The replacement procedure is identical for brake shoes on the same axle.
- Please note: all work on the car – Fiat Panda 169 – should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1 Open the bonnet. Unscrew the brake fluid reservoir cap.




2 Secure the wheels with chocks.


3 Loosen the wheel mounting bolts. Use wheel impact socket #17.



 4 Raise the rear of the car and secure on supports.




5 Unscrew the wheel bolts.

 


AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts.
Fiat Panda 169

 6 Remove the wheel.



 
7 Clean the brake drum fasteners. Use a wire brush. Use WD-40 spray.




8 Unscrew the brake drum fastening. Use a drive socket #12. Use a ratchet wrench.



 
9 Remove the protective cover of the lower centre console. Use a flat screwdriver.




10 Unscrew the front fasteners of the lower centre console. Use a drive socket #10. Use a ratchet wrench.

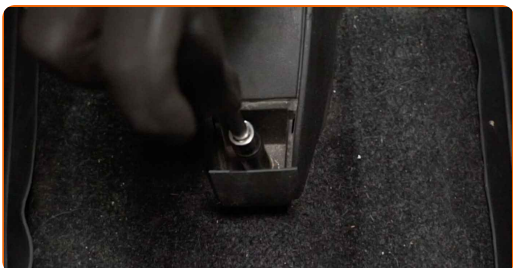


11 Remove the lower centre console.

 

 
12 Loosen the parking brake cable. Use a combination spanner #10.




13 Remove the brake drum.

 

 
14 Clean the fasteners of the brake shoes. Use a wire brush. Use WD-40 spray.



 
15 Remove the lower return spring of brake shoes. Use a crowbar.



 
16 Remove the hold-down pins of the brake shoes. Use round-nose pliers.



 - 17** Pull both brake shoes with the adjuster from the working brake cylinder, avoiding damage to the boots. Use a flat screwdriver.



 
- 18** Remove both shoes from the mounting bracket.




Replacement: brake shoes – Fiat Panda 169. Tip from AUTODOC:

- Don't press the brake pedal after removing the rear brake drum shoes. This will cause the piston to fall out of the brake cylinder, leakage of brake fluid and depressurization of the system.

 - 19** Disconnect the parking brake cable.




20 Perform further demounting of the upper retaining spring and the adjuster mechanism.

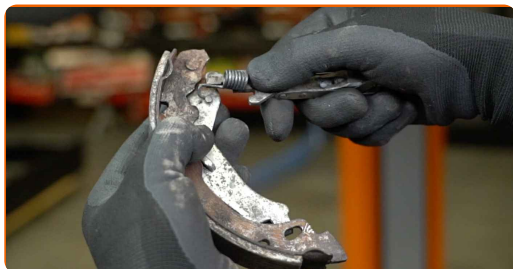


21 Clean the mounting seats of the brake shoes. Use a wire brush. Use all-purpose cleaning spray.



 
22 Install the upper retaining springs and adjustment mechanism on new brake shoes.



 
23 Connect the parking brake cable to the parking brake lever.



 
24 Install the brake shoes on the working brake cylinder on the bracket and on the brake-support plate bracket.



 25 Reinstall the hold-down pins of the brake shoes. Use round-nose pliers.



 
26 Install the lower return spring. Use a crowbar. Use a flat screwdriver.




27 Clean the hub. Use a wire brush. Treat the contacting surface. Use copper grease.



 28 Install a brake drum.



29 Adjust the parking brake cable tension. Use a combination spanner #10.

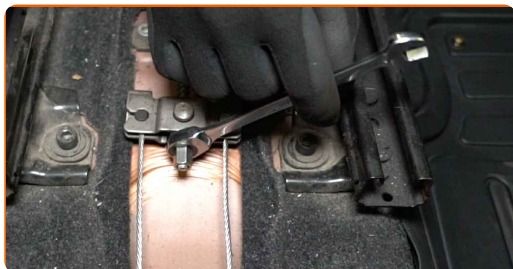


30 Remove the brake drum.



31 Move the parking brake shoes against the drum. Use a flat screwdriver.



 
32 Install a brake drum.




33 Screw in the brake drum fastener. Use a drive socket #12. Use a ratchet wrench.



 
34 Reinstall the lower centre console.



 35 Screw in the front fasteners of the lower centre console. Use a drive socket #10. Use a ratchet wrench.



 
36 Reinstall the protective cover of the lower centre console.



37 Tighten the brake drum fasteners. Use a drive socket #12. Use a torque wrench. Tighten it to 10 Nm torque.




 38 Clean the wheel rim mounting seat. Use a wire brush.



39

 Treat the surface where the wheel rim contacts the brake drum. Use copper grease.



40

Install the wheel.

 


AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. Fiat Panda 169

41


Screw in the wheel bolts. Use wheel impact socket #17.



- 42** Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 98 Nm torque.



 - 43** Remove the jacks and chocks.



- 44** Tighten the brake fluid reservoir cap. Close the hood.



Replacement: brake shoes – Fiat Panda 169. AUTODOC experts recommend:

- Slow down gently for the first 150–200 km after replacing the brake shoes. Avoid excessive and abrupt braking during that time.

WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON **Google Play**

Download on the **App Store**

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR FIAT

BRAKE SHOES: A WIDE SELECTION

CHOOSE CAR PARTS FOR FIAT PANDA 169

BRAKE SHOES FOR FIAT: BUY NOW

BRAKE SHOES FOR FIAT PANDA 169: THE BEST DEALS & OFFERS

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.