




How to change rear
wheel bearing on **Fiat**
Panda 169 – replacement
guide

VIDEO TUTORIAL

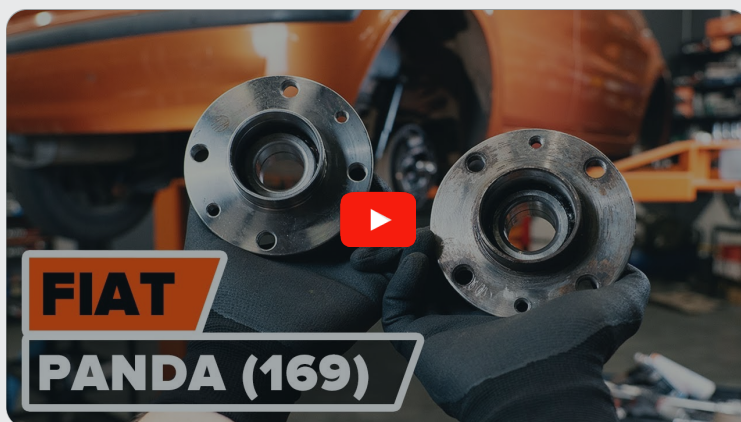

Important!

This replacement procedure can be used for:

FIAT TIPO (160) 1.4, FIAT TIPO (160) 1.4 i.e., FIAT TIPO (160) 1.6 i.e., FIAT TIPO (160) 1.8 i.e., FIAT TIPO (160) 2.0 i.e., FIAT TIPO (160) 2.0 16V, FIAT TEMPRA (159) 1.9 TD, FIAT TEMPRA (159) 1.4 i.e., FIAT TEMPRA (159) 1.6 i.e., FIAT TEMPRA (159) 2.0 i.e., FIAT TEMPRA S.W. (159) 1.9 TD, FIAT TEMPRA S.W. (159) 1.4 i.e., FIAT TEMPRA S.W. (159) 1.6 i.e., FIAT TEMPRA S.W. (159) 1.8 i.e., FIAT PUNTO (176) 1.2 60, (+ 106)

The steps may slightly vary depending on the car design.

REPLACEMENT: WHEEL BEARING – FIAT PANDA 169.
TOOLS YOU MIGHT NEED:



- Wire brush
- WD-40 spray
- Copper grease
- All-purpose cleaning spray
- Torque wrench
- Drive socket # 12
- Drive socket # 32
- Wheel impact socket #17
- Ratchet wrench
- Tap wrench
- Hammer
- Crow bar
- Rubber mallet
- Wheel chock

BUY TOOLS


Replacement: wheel bearing – Fiat Panda 169. AUTODOC recommends:

- Do not re-use the bearing assembly of your Fiat Panda 169 car.
- The wheel hub bearing replacement procedure is identical for both wheels on the same axle.
- All work should be done with the engine stopped.


**REPLACEMENT: WHEEL BEARING – FIAT PANDA 169.
RECOMMENDED SEQUENCE OF STEPS:**

1 Secure the wheels with chocks.

2 Loosen the wheel mounting bolts. Use wheel impact socket #17.

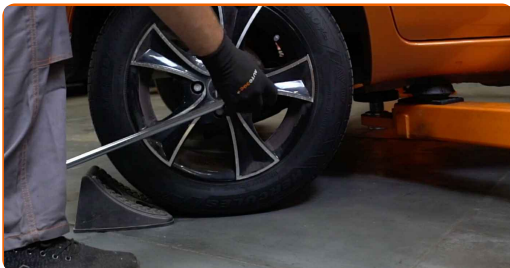

 3 Raise the rear of the car and secure on supports.



4

Unscrew the wheel bolts.



AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts.
Fiat Panda 169

5

Remove the wheel.



 
6

Clean the brake drum fasteners. Use a wire brush. Use WD-40 spray.




7

Unscrew the brake drum fastening. Use a drive socket #12. Use a ratchet wrench.



8

Remove the brake drum.

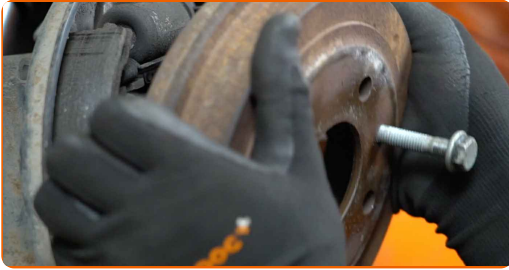


Replacement: wheel bearing – Fiat Panda 169. Professionals recommend:

- Examine the brake drum. Replace it if necessary.

9

Remove the wheel hub nut cap. Use a crowbar. Use a hammer.

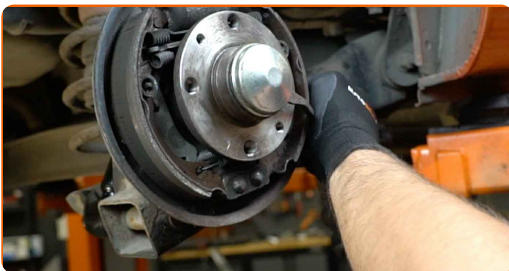


Replacement: wheel bearing – Fiat Panda 169. Tip from AUTODOC experts:

- In some cars, the wheel hub nut is not protected with a cap.

10

 Unscrew the hub nut. Use a drive socket #32. Use a tap wrench.




11

Remove the hub and the bearing together, since they are a sealed unit.




12

 Clean the wheel hub mounting seat. Use a wire brush. Use all-purpose cleaning spray. Use WD-40 spray.




13

 Install the new wheel hub with a bearing.



14

 Tighten the wheel hub nut. Use a drive socket #32. Use a torque wrench. Tighten it to 280 nm torque.



Replacement: wheel bearing – Fiat Panda 169. Tip from AUTODOC:

- The wheel bearing unit must not tilt on the axle pin.

15

Install the cap of the hub nut. Use a rubber mallet. Use a crowbar.



16

 
Clean the hub. Use a wire brush.

17

Treat the wheel hub in the area where it contacts the brake drum. Use copper grease.



18 Install a brake drum.



19 Tighten the brake drum fasteners. Use a drive socket #12. Use a torque wrench. Tighten it to 10 Nm torque.



 
20 Clean the wheel rim mounting seat. Use a wire brush.



21 Treat the surface where the wheel rim contacts the brake drum. Use copper grease.



22 Install the wheel.



AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. Fiat Panda 169

23

Screw in the wheel bolts. Use wheel impact socket #17.



24

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 98 nm torque.



25

Remove the jacks and chocks.



WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON  **Google Play**

 **Download on the App Store**

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR FIAT

WHEEL BEARING: A WIDE SELECTION

CHOOSE CAR PARTS FOR FIAT PANDA 169

WHEEL BEARING FOR FIAT: BUY NOW

WHEEL BEARING FOR FIAT PANDA 169: THE BEST DEALS & OFFERS

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.