- AUTODOC CLUB

How to change rear shock absorbers on **Seat Leon 1M1** – replacement guide



VIDEO TUTORIAL



(i) Important!

This replacement procedure can be used for:

SEAT Toledo II Saloon (1M2) 1.6, SEAT Toledo II Saloon (1M2) 1.8 20V, SEAT Toledo II Saloon (1M2) 2.3 V5, SEAT Toledo II Saloon (1M2) 1.9 TDI, SEAT Leon Hatchback (1M1) 1.6, SEAT Leon Hatchback (1M1) 1.8 20V, SEAT Leon Hatchback (1M1) 1.9 TDI, SEAT Leon Hatchback (1M1) 1.4 16V, SEAT Leon Hatchback (1M1) 1.8 20V T, SEAT Leon Hatchback (1M1) 1.9 SDI, SEAT Toledo II Saloon (1M2) 1.4 16V, SEAT Leon Hatchback (1M1) 1.6 16 V, SEAT Toledo II Saloon (1M2) 1.6 16V, SEAT Toledo II Saloon (1M2) 2.3 V5 20V, SEAT Toledo II Saloon (1M2) 1.8 20VT, (+ 1)

The steps may slightly vary depending on the car design.



REPLACEMENT: SHOCK ABSORBERS – SEAT LEON 1M1. TOOLS YOU MIGHT NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Ceramic grease
- Copper grease
- Torque wrench
- Combination spanner #16
- Drive socket # 16

- Drive socket # 17
- Shock absorber socket #DD5.2
- Wheel impact socket #17
- Ratchet wrench
- Tap wrench
- Crow bar
- Hydraulic transmission jack
- Wheel chock

BUY TOOLS



Replacement: shock absorbers – Seat Leon 1M1. Professionals recommend:

- Both shock absorbers of the rear suspension should be replaced simultaneously.
- The replacement procedure is identical for the left and right shock absorbers of the rear suspension.
- All work should be done with the engine stopped.

REPLACEMENT: SHOCK ABSORBERS – SEAT LEON 1M1. USE THE FOLLOWING PROCEDURE:



Secure the wheels with chocks.

2

Loosen the wheel bolts. Use wheel impact socket #17. Use a tap wrench.



3

Raise the car.





AUTODOC recommends:

- If you are using a jack, make sure it rests on a flat surface without any unevenness.
- Be sure to additionally secure the car with jack stands.

Unscrew the wheel bolts.



Replacement: shock absorbers – Seat Leon 1M1. AUTODOC recommends:

• To avoid injury, hold up the wheel when unscrewing the bolts.



4

Remove the wheel.





Clean the lower shock absorber fastener. Use a wire brush. Use WD-40 spray.



7

Support the rear axle beam. Use a hydraulic transmission jack.



8

Unscrew the lower fasteners of the shock absorber. Use a combination spanner #16. Use a drive socket #16. Use a ratchet wrench.



9

Remove the fastening bolt.





Clean the fasteners of the shock absorber upper mount. Use a wire brush. Use WD-40 spray.



11

Unscrew the shock absorber mount fasteners. Use a drive socket #16. Use a ratchet wrench.



AUTODOC recommends:

 Important! Hold the shock absorber while unscrewing the fastening bolts. Seat Leon 1M1

12

Remove the fastening bolts.



13

Remove the shock absorber.





Clean the shock absorber mounting seats. Use a wire brush. Use WD-40 spray.



15

Grip the shock absorber in a vice.



16

Remove the shock absorber mount cap. Use a crowbar.



17

Clean the shock absorber rod fastener. Use a wire brush. Use WD-40 spray.





Unscrew the fastener of the shock absorber piston rod. Use a drive socket #17. Use a shock absorber socket #DD5.2. Use a ratchet wrench.



19

Remove the shock absorber mount, dust boot, and bump stop.



Replacement: shock absorbers – Seat Leon 1M1. Tip:

 Examine the shock absorber dust boot and bump stop. Replace them if necessary.

20

Install the mount, dust boot, and bump stop on a new shock absorber.



AUTODOC recommends:

• Before installing a new shock absorber you should pump it 3–5 times by hand.



Tighten the shock absorber rod nut. Use a drive socket #17. Use a shock absorber socket #DD5.2. Use a torque wrench. Tighten it to 25 Nm torque.



22

Treat the shock absorber rod fastener. Use copper grease.



Install the shock absorber mount cap.



24

Release the vice and take out the shock absorber.





Place the shock absorber in the wheel arch and secure it.







Install the fastening bolts.



27

Screw in the shock absorber mount fasteners. Use a drive socket #16. Use a ratchet wrench.



28

Install the fastening bolt.



29

Screw in the lower fastener of the shock absorber. Use a combination spanner #16 (2 pieces). Use a ratchet wrench.



30

For tightening the fasteners correctly, you have to jack up the suspension components to their working position. Use a hydraulic transmission jack.



Tighten the lower fastener of the shock absorber. Use a combination spanner #16. Use a drive socket #16. Use a torque wrench. Tighten it to 45 Nm torque.+90°



Replacement: shock absorbers – Seat Leon 1M1. AUTODOC recommends:

• Important! Be sure to use new fasteners.

32

Tighten the shock absorber mount fasteners. Use a drive socket #16. Use a torque wrench. Tighten it to 30 Nm torque.+90°



AUTODOC recommends:

• Important! Be sure to use new fasteners.

33

Treat the shock absorber fasteners. Use copper grease.

34

Remove the support from under the rear axle beam.



AUTODOC recommends:

 Seat Leon 1M1 – Do not lower the transmission jack sharply to avoid damaging components and mechanisms of the car.



Clean the wheel rim mounting seat. Use a wire brush.



36

Treat the surface where the brake disc contacts the wheel rim. Use ceramic grease.



37

Clean the brake disk surface. Use a brake cleaner.



38

Install the wheel.





Replacement: shock absorbers - Seat Leon 1M1. Tip from AUTODOC experts:

• To avoid injury, hold up the wheel when screwing in the fastening bolts.

39

Screw in the wheel bolts. Use wheel impact socket #17. Use a ratchet wrench.



40

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 Nm torque.



41

Remove the jacks and chocks.





VIEW MORE TUTORIALS



AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR SEAT

SHOCK ABSORBERS: A WIDE SELECTION



CHOOSE CAR PARTS FOR SEAT LEON 1M1

SHOCK ABSORBERS FOR SEAT: BUY NOW

SHOCK ABSORBERS FOR SEAT LEON 1M1: THE BEST DEALS & OFFERS

(i) **DISCLAIMER**:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.