



How to change air filter
on **Seat Leon 1P1** –
replacement guide

VIDEO TUTORIAL


** Important!**

This replacement procedure can be used for:

SEAT Altea (5P1) 1.6, SEAT Altea (5P1) 2.0 FSI, SEAT Toledo III (5P2) 1.6, SEAT Toledo III (5P2) 2.0 FSI, SEAT Leon Hatchback (1P1) 1.6, SEAT Leon Hatchback (1P1) 2.0 FSI, SEAT Altea XL (5P5, 5P8) 1.6, SEAT Altea XL (5P5, 5P8) 2.0 FSI, SEAT Leon Hatchback (1P1) 1.6 MultiFuel, SEAT Altea XL (5P5, 5P8) 1.6 Multifuel, SEAT Leon Hatchback (1P1) 1.6 LPG, SEAT Altea (5P1) 1.6 LPG, SEAT Altea XL (5P5, 5P8) 1.6 LPG, SEAT Altea XL (5P5, 5P8) 2.0 TFSI 4x4, SEAT Altea XL (5P5, 5P8) 2.0 TFSI

The steps may slightly vary depending on the car design.

REPLACEMENT: AIR FILTER – SEAT LEON 1P1. TOOLS
YOU MIGHT NEED:

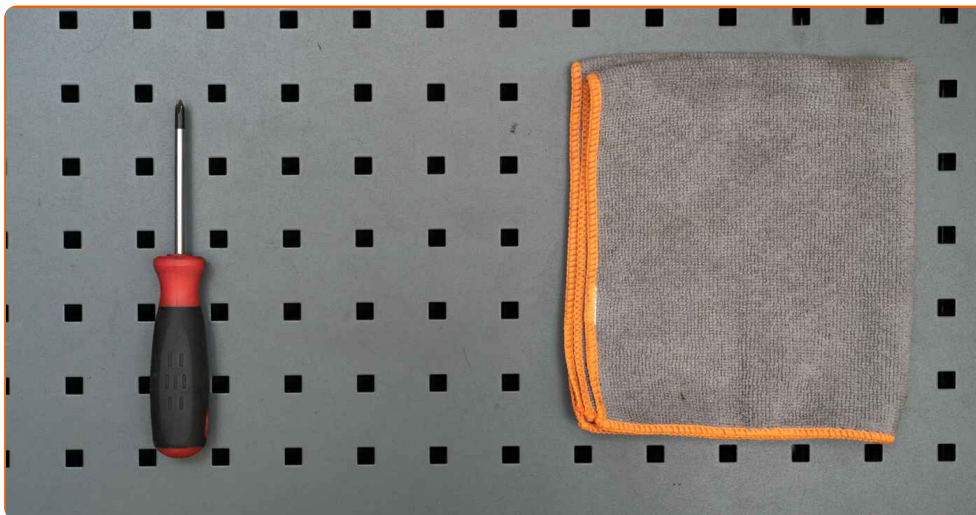

- Phillips screwdriver
- Microfibre towel
- Fender cover

 
BUY TOOLS

Replacement: air filter – Seat Leon 1P1. AUTODOC experts recommend:


- Follow the terms, recommendations and requirements of the part operation provided by the manufacturer.
- Please note: all work on the car – Seat Leon 1P1 – should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:


1 Open the bonnet.



 2 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.



 
3 Undo the fastening screws of the air filter cover. Use a Phillips screwdriver.




4 Take off the filter lid.



 
5 Unscrew the filter element fastener. Use a Phillips screwdriver.



 
6 Remove the filter element from the filter housing.



 
7 Cover the air intake hose with a microfibre towel to prevent dust and dirt from getting into the system.



 8 Clean the air filter cover and housing.



 9 Remove the microfibre towel from the air intake hose.



10 Insert a new filter element into the filter housing.



AUTODOC recommends:

- Attention! Use quality filters – Seat Leon 1P1.
- During installation, make sure to prevent dust and dirt from getting into the air filter housing.

11 Screw in the filter element fastener. Use a Phillips screwdriver.



12 Reinstall the air filter cover. Fasten it.



 
AUTODOC recommends:

- Caution! Do not use excessive force during installation. This may damage the fasteners of the car. Seat Leon 1P1

13 Screw in the fastening screws of the air filter cover. Use a Phillips screwdriver.



14 Remove the fender protection cover.



15

Close the hood.



WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON  **Google Play**

 **Download on the App Store**

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR SEAT

AIR FILTER: A WIDE SELECTION

CHOOSE CAR PARTS FOR SEAT LEON 1PI

AIR FILTER FOR SEAT: BUY NOW

AIR FILTER FOR SEAT LEON 1PI: THE BEST DEALS & OFFERS

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.