+ AUTODOC CLUB

How to change engine oil and filter on **VW Lupo 6X1 diesel** – replacement guide







VIDEO TUTORIAL



important!

This replacement procedure can be used for:

VW Caddy III Van (2KA, 2KH, 2CA, 2CH) 1.9 TDI 4motion, VW Passat Variant (3C5) 2.0 TDI, VW Jetta IV (162, 163, AV3, AV2) 2.0 TDI, VW Passat Saloon (362) 3.6 FSI 4motion, VW Passat Variant (365) 3.6 FSI 4motion, VW Golf IV Hatchback (1J1) 2.3 V5, VW TIGUAN (5N_) 2.0 TDI 4motion, VW SHARAN (7M8, 7M9, 7M6) 2.0 TDI, VW Bora Saloon (1J2) 2.3 V5, VW Lupo (6X1, 6E1) 1.2 TDI 3L, VW Golf IV Hatchback (1J1) 2.8 V6 4motion, VW Passat CC (357) 2.0 TDI, VW Bora Variant (1J6) 2.3 V5, VW Bora Saloon (1J2) 2.8 V6 4motion, VW Golf IV Hatchback (1J1) 2.3 V5 4motion, (+100)

The steps may slightly vary depending on the car design.

CLUB.AUTODOC.CO.UK 1–13







REPLACEMENT: ENGINE OIL AND FILTER – VW LUPO 6X1. TOOLS YOU'LL NEED:



- All-purpose cleaning spray
- Drive socket # 19
- Drive socket #36
- Ratchet wrench
- Torque wrench

- Flat Screwdriver
- Funnel
- Oil drain pan
- Fender cover

BUY TOOLS

CLUB.AUTODOC.CO.UK 2-13







Replacement: engine oil and filter – VW Lupo 6X1. AUTODOC recommends:

- Replace the oil filter every time when changing motor oil.
- · Wear gloves to prevent contact with hot liquid.
- Use only new O-rings during installation.
- Warning! Shut down the engine before starting any work VW Lupo 6X1.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1

Lift the car using a jack or place it over an inspection pit.



Replacement: engine oil and filter – VW Lupo 6X1. Tip:

- The vehicle must be on even keel, and if it is at an angle, the drain plug must be at the lowest point.
- All work should be done with the engine stopped.

CLUB.AUTODOC.CO.UK 3-13







Put a waste oil container with at least 4 l capacity under the drainage hole.



Unscrew the drain plug. Use a drive socket #19. Use a ratchet wrench.



Drain the used oil.



AUTODOC recommends:

- Caution! The oil may be hot.
- Wait until the oil has completely drained from the drainage hole.

CLUB.AUTODOC.CO.UK 4-13







Clean the area of the oil pan drainage hole.



Screw in the new drainage plug and tighten it. Use a drive socket #19. Use a torque wrench. Tighten it to 28 nm torque.



Clean the area of the oil pan drainage hole. Use all-purpose cleaning spray.



8 Lower the car.



9 Open the hood.



CLUB.AUTODOC.CO.UK 5-13







- Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.
- Remove the engine cover.



Replacement: engine oil and filter – VW Lupo 6X1. Tip from AUTODOC experts:

- Raise the engine cover, holding it on two sides simultaneously.
- Do not apply excessive force when removing the part. Otherwise you may damage it.
- Unscrew the filter housing cap together with the old filter element. Use a drive socket #36. Use a ratchet wrench.



- Prepare a container for the old oil filter.
- Put the old oil filter in the container.



CLUB.AUTODOC.CO.UK 6-13

 






Replacement: engine oil and filter – VW Lupo 6X1. Professionals recommend:

• Move up the container. The oil starts to drain out of the drainage hole immediately after you have removed the oil filter.





Remove the oil filter cover O-ring. Use a flat screwdriver.



Install a new O-ring to its mounting seat on the filter cover. Use a flat screwdriver.



Install the new oil filter to the mounting seat on the filter cover.



18

CLUB.AUTODOC.CO.UK 7-13







Please note!

- Make sure to install the filter correctly. Don't mix up the sides of the part.
- Lubricate the rubber seal of the new filter with a little amount of fresh oil.



- Clean the oil filter seat.
- Install a new oil filter housing cover and tighten it. Use a drive socket #36. Use a torque wrench. Tighten it to 25 Nm torque.



Unscrew the oil filler plug.



- Remove the oil filler cap.
- 24. Insert the funnel.

CLUB.AUTODOC.CO.UK 8-13







Pour oil into the engine through the filler. Required amount of oil: 3.8 L.



Replacement: engine oil and filter – VW Lupo 6X1. AUTODOC experts recommend:

- Use the oil recommended by the manufacturer.
- Check the oil level using the dipstick. Top up oil if necessary.



Please note!

- The oil level should be between the Min and Max marks.
- 27 Install the oil filler cap.



CLUB.AUTODOC.CO.UK 9-13







- Tighten the oil filler cap.
- Run the engine for a few minutes. After the oil pressure warning light goes out, stop the engine.



Check the oil level 5 minutes after the stop of the engine operation using a dipstick and add oil if necessary.



Please note!

- The oil level should be between the Min and Max marks.
- Make sure that the oil filler cap is properly tightened.
- Check the threaded plug of the drainage hole and the oil filter seal for tightness.
 If necessary, carefully tighten them up.

Install the engine cover and secure it.



CLUB.AUTODOC.CO.UK 10-13









Replacement: engine oil and filter – VW Lupo 6X1. AUTODOC recommends:

- Make sure the engine cover is properly seated. It should not be displaced with respect to the guiding fasteners.
- Do not apply excessive force when installing the part. Otherwise you may damage the fasteners.

32

Remove the fender protection cover. Close the hood.



Replacement: engine oil and filter – VW Lupo 6X1. Tip from AUTODOC:

- Note that oil pressure warning light, which indicates insufficient pressure in the lubrication system, may be on for a longer time than usual. After a few seconds, the oil will fill all the channels, and the light will go out.
- To protect the environment from pollution, be sure to dispose of the used filters at special collection points.




VIEW MORE TUTORIALS

CLUB.AUTODOC.CO.UK 11-13





AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

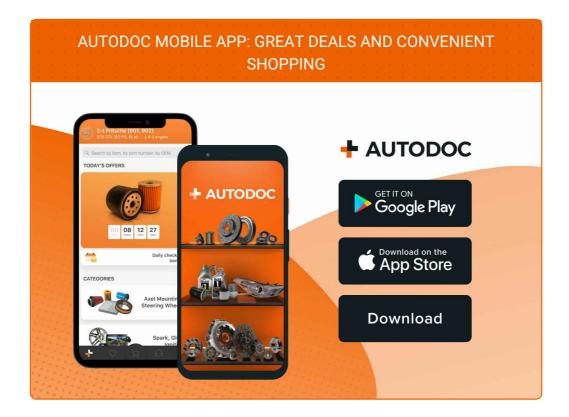

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR VW

OIL FILTER: A WIDE SELECTION

CLUB.AUTODOC.CO.UK 12-13







CHOOSE CAR PARTS FOR VW LUPO 6X1

OIL FILTER FOR VW: BUY NOW

OIL FILTER FOR VW LUPO 6X1: THE BEST DEALS & OFFERS

① DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AutoDoc shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AutoDoc shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AutoDoc shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AutoDoc strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by Autodoc GmbH.

CLUB.AUTODOC.CO.UK 13-13