



How to change front ball
joint on **MERCEDES-
BENZ CLK Convertible
(A208)** – replacement
guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

ⓘ Important!

This replacement procedure can be used for:

MERCEDES-BENZ CLK Convertible (A208) 200 2.0 Kompressor (208.445),
 MERCEDES-BENZ CLK Convertible (A208) 200 2.0 (208.435), MERCEDES-BENZ CLK
 Convertible (A208) 230 2.3 Kompressor (208.447), MERCEDES-BENZ CLK Convertible
 (A208) 320 3.2 (208.465), MERCEDES-BENZ CLK Convertible (A208) 430 4.3
 (208.470), MERCEDES-BENZ CLK Convertible (A208) 55 AMG 5.4 (208.474),
 MERCEDES-BENZ CLK Convertible (A208) 200 2.0 Kompressor (208.444),
 MERCEDES-BENZ CLK Convertible (A208) 230 2.3 Kompressor (208.448)

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part
 on: MERCEDES-BENZ E-Class Saloon (W210) E 270 CDI (210.016)

REPLACEMENT: BALL JOINT – MERCEDES-BENZ CLK CONVERTIBLE (A208). TOOLS YOU MIGHT NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Ceramic grease
- Torque wrench
- Combination spanner #22
- Drive socket # 21
- Drive socket # 22
- Wheel impact socket #17
- Ratchet wrench
- Tap wrench
- Ball joint puller
- Hydraulic transmission jack
- Wheel chock

Buy tools

Replacement: ball joint – MERCEDES-BENZ CLK Convertible (A208). Tip from AUTODOC:

- The replacement procedure is identical for the left and right ball joints.
- All work should be done with the engine stopped.

REPLACEMENT: BALL JOINT – MERCEDES-BENZ CLK CONVERTIBLE (A208). RECOMMENDED SEQUENCE OF STEPS:

1 Secure the wheels with chocks.

2 Loosen the wheel bolts. Use wheel impact socket #17. Use a tap wrench.



3 Raise the car.

AUTODOC recommends:

- If you are using a jack, make sure it rests on a flat surface without any unevenness.
- Be sure to additionally secure the car with jack stands.

4

Unscrew the wheel bolts.

 


Replacement: ball joint – MERCEDES-BENZ CLK Convertible (A208). Tip:

- To avoid injury, hold up the wheel when unscrewing the bolts.

5

Remove the wheel.




6


Clean the ball joint fasteners. Use a wire brush. Use WD-40 spray.



 7 Unscrew the fastener connecting the ball joint to the steering knuckle. Use a combination spanner #22.



 
8 Unscrew the fastener connecting the ball joint to the suspension control arm. Use a drive socket #22. Use a ratchet wrench.



9 Disconnect the ball joint from the control arm. Use a ball joint puller.



 10 Disconnect the ball joint from the steering knuckle. Use a ball joint puller.



11 Remove the ball joint.



12 Support the steering knuckle. Use a hydraulic transmission jack.

13 Clean the ball joint mounting seat. Use a wire brush.


14 Install a new ball joint.




15 Attach the ball joint to the control arm.



 16 Connect the ball joint to the steering knuckle.



 
17 Remove the support from under the steering knuckle.




AUTODOC recommends:

- Replacement: ball joint – MERCEDES-BENZ CLK Convertible (A208). Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.

 
18 Tighten the ball joint fastener. Use a combination spanner #22. Use a torque wrench. Tighten it to 105 Nm torque.



 
19 Tighten the fastener connecting the ball joint to the steering knuckle. Use a drive socket #21. Use a torque wrench. Tighten it to 105 Nm torque.



 
20 Clean the wheel rim mounting seat. Use a wire brush.



 
21 Treat the surface where the brake disc contacts the wheel rim. Use ceramic grease.



 22 Clean the brake disk surface. Use a brake cleaner.



23 Install the wheel.

 


Replacement: ball joint – MERCEDES-BENZ CLK Convertible (A208). Tip from AUTODOC experts:

- To avoid injury, hold up the wheel when screwing in the fastening bolts.

24

 Screw in the wheel bolts. Use wheel impact socket #17. Use a ratchet wrench.



25

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 110 Nm torque.



26

Remove the jacks and chocks.



WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

 Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BALL JOINT: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.