- AUTODOC CLUB

How to change glow plugs on MERCEDES-BENZ E-Class Platform / Chassis (VF210) – replacement guide



SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

(i) Important!


This replacement procedure can be used for: MERCEDES-BENZ E-Class Platform / Chassis (VF210) E 270 CDI (210.616)

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: MERCEDES-BENZ E-Class Saloon (W210) E 270 CDI (210.016)





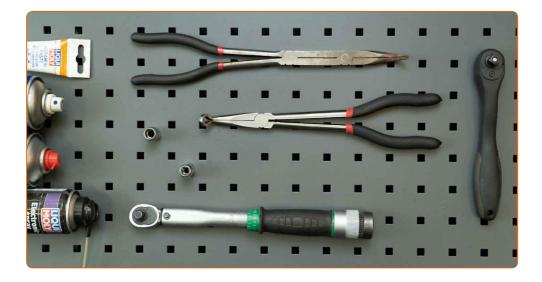

- WD-40 spray
- All-purpose cleaning spray
- Dielectric grease
- High-temperature ceramic grease
- Torque wrench

- Spark plug socket # 10
- Drive socket # E11
- Ratchet wrench
- Needle nose pliers
- Fender cover

Buy tools





- The replacement procedure is identical for all glow plugs.
- Wear gloves to protect your hands from hot surfaces.
- Warning! Shut down the engine before starting any work MERCEDES-BENZ E-Class Platform / Chassis (VF210).

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

Open the bonnet.

2

1

Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

3

Clean dirt, dust and debris from inside the spark plug wells.



4

Treat the glow plugs. Use WD-40 spray.





5

If the glow plugs are difficult to unscrew, start the engine and let it warm up to operating temperature. This will make them easier to remove.



Replacement: glow plugs – MERCEDES-BENZ E-Class Platform / Chassis (VF210). Tip:

• Wear gloves to protect your hands from hot surfaces.

6

Shut off the engine.


7

Unscrew the fuel hose fastener. Use a drive socket #E11. Use a ratchet wrench.



8

Disconnect the fuel return line hose.

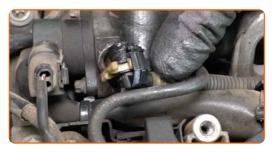



9

Blank off the fuel return line.



10

Detach the glow plug wiring connectors. Use needle nose pliers.



11

Clean dirt, dust and debris from inside the spark plug wells.



12

Unscrew the glow plugs. Use the spark plug socket #10. Use a torque wrench.







- The glow plugs can get stuck over time and break apart when removed.
- Use a torque wrench to loosen the parts to avoid exceeding the breakaway torque specified by the car manufacturer.
- If you have reached the breakaway torque but the glow plugs still won't unscrew, you need to consult a professional: breakage of the parts can result in costly engine repairs.



Remove the glow plugs. Use needle nose pliers.



14

Treat the glow plugs. Use high-temperature ceramic grease.



15

Install new glow plugs to their mounting seats. Use needle nose pliers.





16

Tighten the glow plugs. Use the spark plug socket #10. Use a torque wrench. Tighten it to 20 nm torque.



AUTODOC recommends:

• Don't tighten the plugs with excessive force. Exceeding tightening torque can damage the thread connection.



Treat the glow plug connectors. Use dielectric grease.



18

Attach the glow plug wiring connectors. Use needle nose pliers.



19

Clean the fuel return line. Use all-purpose cleaning spray.



+ AUTODOC CLUB



20

Unstop the fuel return line.



21

Connect the fuel return line hose.



22

Tighten the fuel hose fastener. Use a drive socket #E11. Use a torque wrench. Tighten it to 8 nm torque.





Run the engine for a few minutes. This is necessary in order to make sure that the component operates properly.

Shut off the engine.

Remove the fender protection cover.



Close the hood.



VIEW MORE TUTORIALS

f

Ø



AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

GLOW PLUGS: A WIDE SELECTION

i DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.