



How to change rear  
wheel bearing on  
**MERCEDES-BENZ E-  
Class T-modell (S211)** –  
replacement guide

### SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

### **Important!**

This replacement procedure can be used for:

MERCEDES-BENZ E-Class T-modell (S211) E 240 T (211.261), MERCEDES-BENZ E-Class T-modell (S211) E 320 T (211.265), MERCEDES-BENZ E-Class T-modell (S211) E 200 T Kompressor (211.242), MERCEDES-BENZ E-Class T-modell (S211) E 220 T CDI (211.206, 211.606), MERCEDES-BENZ E-Class T-modell (S211) E 270 T CDI (211.216), MERCEDES-BENZ E-Class T-modell (S211) E 320 T CDI (211.226), MERCEDES-BENZ E-Class T-modell (S211) E 240 T 4-matic (211.280), MERCEDES-BENZ E-Class T-modell (S211) E 320 T 4-matic (211.282), MERCEDES-BENZ E-Class T-modell (S211) E 55 T AMG Kompressor (211.276), MERCEDES-BENZ E-Class T-modell (S211) E 500 T (211.270), MERCEDES-BENZ E-Class T-modell (S211) E 500 T 4-matic (211.283), MERCEDES-BENZ E-Class T-modell (S211) E 280 T CDI (211.223), MERCEDES-BENZ E-Class T-modell (S211) E 320 T CDI (211.222), MERCEDES-BENZ E-Class T-modell (S211) E 280 T CDI (211.220), MERCEDES-BENZ E-Class T-modell (S211) E 280 T (211.254), (+ 15)

The steps may slightly vary depending on the car design.

Please note that this tutorial was created based on the replacement procedure for this car part on a car with a similar design.

This tutorial was created based on the replacement procedure for a similar car part on: MERCEDES-BENZ E-Class Saloon (W211) E 220 CDI (211.006)

**REPLACEMENT: WHEEL BEARING – MERCEDES-BENZ  
E-CLASS T-MODELL (S211). LIST OF THE TOOLS YOU'LL  
NEED:**



- Wire brush
- All-purpose cleaning spray
- WD-40 spray
- Brake cleaner
- Copper grease
- Combination spanner #16
- Combination spanner #18
- Combination spanner #21
- Drive socket # 8
- Drive socket # E12
- Drive socket # 16
- Drive socket # 18
- Drive socket # E18
- Drive socket # 32
- HEX bit no.H10.
- Torx bit M12
- Torx bit T30
- Wheel impact socket #17
- Ratchet wrench
- Torque wrench
- Hammer
- Flat chisel
- Pin punch
- Pliers
- Round-nose pliers
- Flat Screwdriver
- Bush and bearing driver set
- Crow bar
- Hydraulic transmission jack
- Wheel chock

**Buy tools**

Replacement: wheel bearing – MERCEDES-BENZ E-Class T-modell (S211).  
AUTODOC experts recommend:

- Do not re-use the bearing assembly of your MERCEDES-BENZ E-Class T-modell (S211) car.
- The wheel hub bearing replacement procedure is identical for both wheels on the same axle.
- All work should be done with the engine stopped.

**REPLACEMENT: WHEEL BEARING – MERCEDES-BENZ E-CLASS T-MODELL (S211). USE THE FOLLOWING PROCEDURE:**

- 1 Secure the wheels with chocks.
- 2 Loosen the wheel mounting bolts. Use wheel impact socket #17.
- 3 Raise the rear of the car and secure on supports.
- 4 Unscrew the wheel bolts.



AUTODOC recommends:

- Important! Hold the wheel while unscrewing the fastening bolts. MERCEDES-BENZ E-Class T-modell (S211)

**5** Remove the wheel.



**6** Clean the brake caliper bracket fasteners. Use a wire brush. Use WD-40 spray.



**7** Unscrew the caliper bracket fastening. Use a combination spanner #18. Use a drive socket #18. Use a ratchet wrench.



**8** Remove the fastening bolts (2 pieces).

**9** Remove the brake caliper together with its bracket.



Replacement: wheel bearing – MERCEDES-BENZ E-Class T-modell (S211). Tip:

- Tie the caliper to the suspension or to the body with a wire without disconnecting from the brake hose to prevent depressurization of the brake system.
- Make sure that the brake caliper is not hanging on the brake hose.
- Don't press the brake pedal after the brake caliper has been removed. As a result, the piston can fall out from the brake cylinder, and brake fluid leakage and depressurization of the system may occur.
- Check the brake caliper bracket, brake caliper guide pins and boots. Clean them. Replace, if necessary.

 
10

Clean the brake disc fasteners. Use a wire brush. Use WD-40 spray.



11


Unscrew the brake disc fastening. Use Torx T30. Use a ratchet wrench.




**12** Remove the brake disc.



 **13** Unstake the wheel hub retaining nut. Use a flat metal-working chisel. Use a hammer.




 **14** Unscrew the wheel hub axle nut. Use a drive socket #32. Use a ratchet wrench.




**15** Remove the fastening nut.

 **16** Remove the brake shoe adjuster. Use pliers. Use round-nose pliers. Use a flat screwdriver.






 **17** Dismantle the hand brake shoes together with the lower spring.




 **18** Disconnect the parking brake cable. Use a flat screwdriver.



**19** Clean the control arm fasteners. Use a wire brush. Use WD-40 spray.

**20** Unscrew the fastener connecting the control arm to the rear knuckle. Use a combination spanner #18. Use HEX No.H10. Use a ratchet wrench.

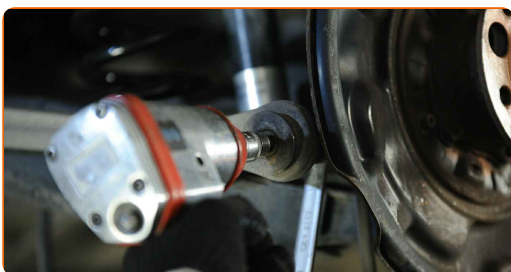


**21** Remove the fastening bolt.

**22** Detach the control arm.



**23** Clean the stabiliser link fasteners. Use a wire brush. Use WD-40 spray.

**24** Unscrew the stabilizer rod fasteners. Use a combination spanner #16. Use a drive socket #16. Use a ratchet wrench.

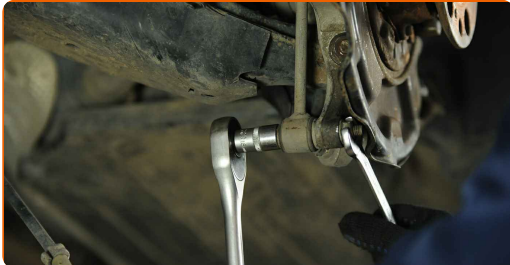


**25** Remove the fastening bolt.




**26** Remove the stabilizer rod.

**27** Unscrew the fastener connecting the control arm to the rear knuckle. Use a combination spanner #18. Use Torx M12. Use a ratchet wrench.

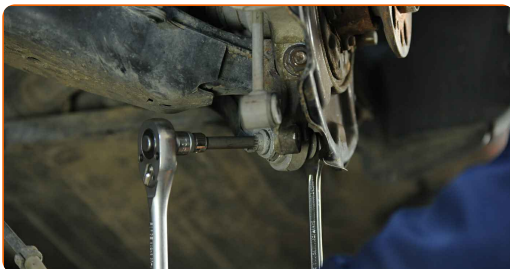

**28** Remove the fastening bolt. Use Torx M12. Use a ratchet wrench.

**29** Unscrew the upper control arm fasteners. Use a combination spanner #18. Use a drive socket #E18. Use a ratchet wrench.

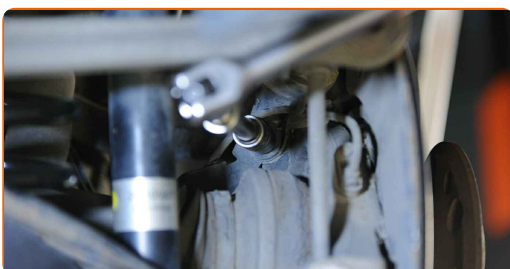

**30** Remove the fastening bolt. Use a pin punch. Use a hammer.



**31** Detach the ABS wiring harness bracket.

**32** Detach the control arm.



**33** Unscrew the upper control arm fasteners. Use a combination spanner #18. Use a drive socket #E18. Use a ratchet wrench.



**34** Remove the fastening bolt.


**35** Detach the control arm.

**36** Unscrew the fastener connecting the control arm to the rear knuckle. Use a combination spanner #21. Use HEX No.H10. Use a ratchet wrench.



**37** Detach the control arm.

**38** Unscrew the ABS sensor fastening from the steering knuckle. Use a drive socket #8. Use a ratchet wrench.

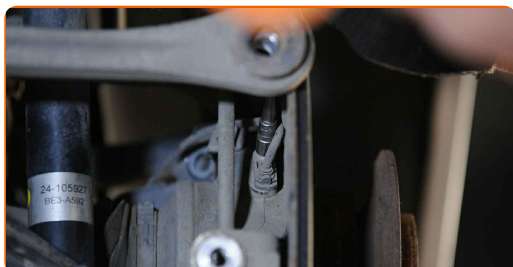

**39** Disconnect the ABS sensor.



**40** Remove the fastening bolt. Use a pin punch. Use a hammer.

**41** Detach the driveshaft from the steering knuckle.



Replacement: wheel bearing – MERCEDES-BENZ E-Class T-modell (S211).  
AUTODOC recommends:

- Make sure that the drive shaft is not unloaded (when the car is jacked).

**42** Remove the steering knuckle together with the hub.

**43** Remove the wheel hub from the steering knuckle. Use a bush and bearing driver set. Use a hammer.



**44** Unscrew the hub bearing mounting. Use a drive socket #E12. Use a ratchet wrench.



**45** Remove the hub bearing mounting. Use a hammer.



**46** Clean the hub bearing mounting seat. Use a wire brush. Use WD-40 spray.

**47** Install a new hub bearing and secure it.



- 48 Tighten the fastener of the wheel hub bearing. Use a drive socket #E12. Use a torque wrench. Tighten it to 80 Nm torque.




- 49 Treat the fasteners of the wheel hub bearing. Use copper grease.

- 50 Install the wheel hub on the steering knuckle. Use a bush and bearing driver set.



- 51 Clean the splines of the drive shaft CV joint. Use a wire brush. Use WD-40 spray.

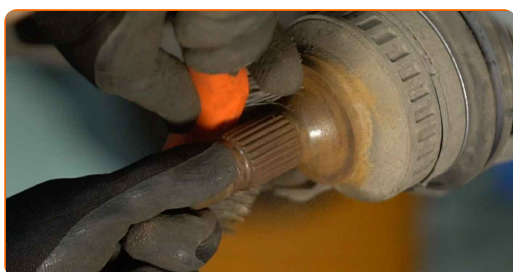

- 52 Install the steering knuckle with a hub in assembly.



**53** Mount the drive shaft into the wheel hub.

**54** Install the fastening bolt. Use a hammer.



**55** Attach the control arm.



**56** Install the fastening bolt.

**57** Tighten the upper control arm fasteners. Use a combination spanner #18. Use a drive socket #E18. Use a torque wrench. Tighten it to 80 Nm torque. +90°



**AUTODOC recommends:**

- Important! Be sure to use new fasteners.

**58**

Fasten the ABS wiring harness bracket.

**59**

Attach the control arm.

**60**

Tighten the upper control arm fasteners. Use a combination spanner #18. Use a drive socket #E18. Use a torque wrench. Tighten it to 80 Nm torque.+90°



**AUTODOC recommends:**

- Important! Be sure to use new fasteners.

**61**

Tighten the fasteners connecting the control arm to the rear knuckle. Use a combination spanner #21. Use HEX No.H10. Use a torque wrench. Tighten it to 80 Nm torque.+90°



**AUTODOC recommends:**

- Important! Be sure to use new fasteners.



**62** Attach the control arm. Use a crowbar.



**63** Install the fastening bolt.

**64** Screw in the fasteners connecting the control arm to the rear knuckle. Use Torx M12. Use a ratchet wrench.



 
**65** Attach the control arm.

**66** Install the fastening bolt.

**67** Screw in the fasteners connecting the control arm to the rear knuckle. Use HEX No.H10. Use a ratchet wrench.



**68** Prop up the steering knuckle. Use a hydraulic transmission jack.




- 69** Tighten the fasteners connecting the control arm to the rear knuckle. Use a combination spanner #18. Use HEX No.H10. Use a torque wrench. Tighten it to 80 Nm torque.+90°




**AUTODOC recommends:**

 - Important! Be sure to use new fasteners.

- 70** Tighten the fasteners connecting the control arm to the rear knuckle. Use a combination spanner #18. Use Torx M12. Use a torque wrench. Observe the recommended tightening torque.



 - 71** Remove the support from under the steering knuckle.




**AUTODOC recommends:**

- Replacement: wheel bearing – MERCEDES-BENZ E-Class T-modell (S211). Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.

**72** Install the fastening bolt.

**73** Connect the ABS sensor.

 **74** Screw in the fastener that connects the ABS sensor to the rear knuckle. Use a drive socket #8. Use a ratchet wrench.



**75** Install the transverse stabilizer link.

**76** Install the fastening bolt.

 


**77** Tighten the stabiliser link fastener. Use a combination spanner #16. Use a drive socket #16. Use a torque wrench. Tighten it to 50 Nm torque.




78

Secure the parking brake cable.




79

 Install the hand brake shoes together with the lower spring.




80

 Insert the brake shoes adjusting mechanism. Use pliers. Use round-nose pliers. Use a flat screwdriver.




81

 Install the fastening nut.



82

 Tighten the hub. Use a drive socket #32. Use a torque wrench. Tighten it to 170 Nm torque.+45°



AUTODOC recommends:

- Important! Be sure to use new fasteners.

83

Restake the wheel hub retaining nut. Use a flat metal-working chisel. Use a hammer.



 
84

Install the brake disc.



85

Tighten the brake disc fastening. Use Torx T30. Use a torque wrench. Tighten it to 9 Nm torque.



86

Install the brake caliper together with its bracket.



**87** Install the fastening bolts (2 pieces).

**88** Tighten the brake caliper bracket. Use a combination spanner #18. Use a drive socket #18. Use a torque wrench. Tighten it to 115 Nm torque.



**89** Treat all joints of the arm. Treat all joints of the stabiliser link. Use copper grease.

**90** Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



**91** Clean the brake disk surface. Use a brake cleaner.

Replacement: wheel bearing – MERCEDES-BENZ E-Class T-modell (S211). Tip from AUTODOC:

- After applying the spray, wait a few minutes.

**92** Install the wheel.



**AUTODOC recommends:**

- Important! Hold the wheel while screwing in the fastening bolts. MERCEDES-BENZ E-Class T-modell (S211)

**93**

Screw in the wheel bolts. Use wheel impact socket #17.




**94**

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 nm torque.



**95**

Remove the jacks and chocks.

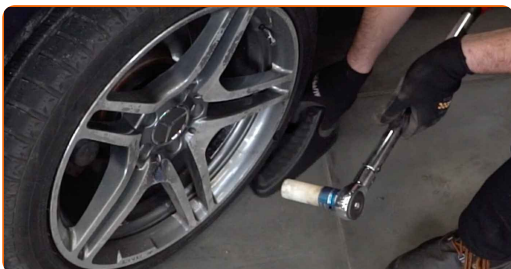

**WELL DONE!** 

**VIEW MORE TUTORIALS**

# AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

**AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING**



**+ AUTODOC**

GET IT ON  
**Google Play**

Download on the  
**App Store**

**Download**

**A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR**

**WHEEL BEARING: A WIDE SELECTION**

## **DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.