



How to change front
lower arm on
MERCEDES-BENZ SLC
(R172) – replacement
guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!

This replacement procedure can be used for:

MERCEDES-BENZ SLC (R172) 250 d 2.1 (172.404), MERCEDES-BENZ SLC (R172) 180 1.6 (172.431), MERCEDES-BENZ SLC (R172) 200 2.0 (172.434), MERCEDES-BENZ SLC (R172) 300 2.0 (172.438), MERCEDES-BENZ SLC (R172) AMG SLC 43 (172.466), MERCEDES-BENZ SLC (R172) AMG SLC 43 3.0 (172.466)

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: MERCEDES-BENZ C-Class Saloon (W204) C 220 CDI (204.008)

REPLACEMENT: FRONT LOWER ARM – MERCEDES-BENZ SLC (R172). LIST OF THE TOOLS YOU'LL NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Ceramic grease
- Copper grease
- Torque wrench
- Combination spanner #21
- Combination spanner #22
- Torx bit E20
- Wheel impact socket #17
- Ratchet wrench
- Ball joint puller
- Hydraulic transmission jack
- Wheel chock

Buy tools

 
Replacement: front lower arm – MERCEDES-BENZ SLC (R172). Tip from AUTODOC experts:

- The replacement procedure is identical for the left and right lower control arms.
- Please note: all work on the car – MERCEDES-BENZ SLC (R172) – should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1 Secure the wheels with chocks.

2 Loosen the wheel mounting bolts. Use wheel impact socket #17.



3 Raise the car.

Replacement: front lower arm – MERCEDES-BENZ SLC (R172). AUTODOC recommends:

- If you are using a jack, make sure it rests on a flat surface without any unevenness.
- Be sure to additionally secure the car with jack stands.

4

Unscrew the wheel bolts.



AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts.
MERCEDES-BENZ SLC (R172)

5

Remove the wheel.



6

 
Clean all joints of the arm. Use a wire brush. Use WD-40 spray.




- 7** Unscrew the fastener connecting the control arm to the subframe. Use a combination spanner #21. Use Torx E20. Use a ratchet wrench.




- 8** Unscrew the ball joint fastening to the steering knuckle. Use a combination spanner #21.



 - 9** Prop up the steering knuckle. Use a hydraulic transmission jack.



 - 10** Disconnect the ball joint from the steering knuckle. Use a ball joint puller.



11

Remove the support from under the steering knuckle.

 


AUTODOC recommends:

- Replacement: front lower arm – MERCEDES-BENZ SLC (R172). Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.


12

Remove the fastening bolt.




13

 Remove the arm.



14

 Clean the suspension arm mounting seats. Use a wire brush. Use WD-40 spray.



15

Install a new arm.



Replacement: front lower arm – MERCEDES-BENZ SLC (R172). Tip from AUTODOC:

- During the installation process, use only new bolts and nuts.

16

Install the fastening bolt.



 
17

Connect the ball joint to the steering knuckle.



18

Prop up the steering knuckle. Use a hydraulic transmission jack.



AUTODOC recommends:

- For tightening the fasteners correctly, you have to jack up the suspension components to their working position.

19

Tighten the fastener connecting the ball joint to the steering knuckle. Use a combination spanner #22. Use a torque wrench. Tighten it to 50 Nm torque.+60°



20

Tighten the fastener connecting the control arm to the subframe. Use a combination spanner #21. Use Torx E20. Use a torque wrench. Tighten it to 80 Nm torque.+120°



 
21 Remove the support from under the steering knuckle.




AUTODOC recommends:

- Replacement: front lower arm – MERCEDES-BENZ SLC (R172). Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.

22 Treat all joints of the arm. Use copper grease.



 23 Clean the wheel rim mounting seat. Use a wire brush.




24

Treat the surface where the brake disc contacts the wheel rim. Use ceramic grease.



25

 Clean the brake disk surface. Use a brake cleaner.



AUTODOC recommends:

- After applying the spray, wait a few minutes.

26

Install the wheel.



AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. MERCEDES-BENZ SLC (R172)

27

Screw in the wheel bolts. Use wheel impact socket #17.



28

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 130 Nm torque.



29

Remove the jacks and chocks.



WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

CONTROL ARM: A WIDE SELECTION

(i) DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.