How to change fuel filter on **MERCEDES-BENZ SPRINTER 5-t Bus** – replacement guide



SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

(i) Important!

This replacement procedure can be used for: MERCEDES-BENZ SPRINTER 5-t Bus 513 CDI 2.1 (906.653, 906.655, 906.657)

The steps may slightly vary depending on the car design.


This tutorial was created based on the replacement procedure for a similar car part on: MERCEDES-BENZ C-Class Saloon (W204) C 220 CDI (204.008)



4

O



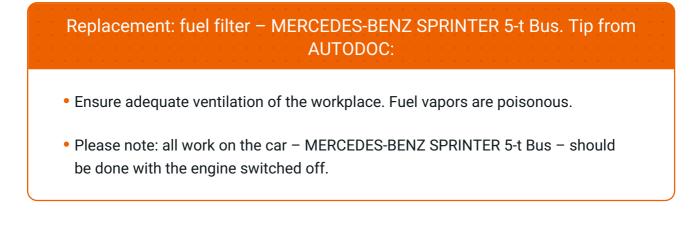

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:



Open the hood.

Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.



Remove the engine cover.



Replacement: fuel filter - MERCEDES-BENZ SPRINTER 5-t Bus. Tip:

- Raise the engine cover, holding it on two sides simultaneously.
- Do not apply excessive force when removing the part. Otherwise you may damage it.



4

Clean the fasteners of the fuel supply lines. Use all-purpose cleaning spray.



5

Unplug the vacuum valve connector.



6

Detach the vacuum valve from its mounting seat and set it aside. Use a crowbar.



7

Detach the connector of the water-in-fuel sensor.







Loosen the fastening clamps of the fuel filter pipes. Use a crowbar.



9

Detach the tubes from the fuel filter.



Replacement: fuel filter – MERCEDES-BENZ SPRINTER 5-t Bus. AUTODOC recommends:

• Be careful! Fuel may leak from the filter housing and hoses.



Unscrew the water-in-fuel sensor fasteners. Use Torx T20.



11

Disconnect the water-in-fuel sensor from the fuel filter.





12

Unclip the fuel filter retainer. Use a crowbar.



13

Remove the fuel filter.



14

Install a new fuel filter.



AUTODOC recommends:

- During installation, take care to prevent dust and dirt from getting into the fuel filter housing.
- Attention! Use quality filters MERCEDES-BENZ SPRINTER 5-t Bus.





Fasten the fuel filter retainer. Use a crowbar.



16

Install the water-in-fuel sensor.



17

Screw in the water-in-fuel sensor fasteners. Use Torx T20.



18

Attach the tubes to the fuel filter.



19

Tighten the fastening clamps of the fuel filter pipes. Use clic-R collar pliers.





20

Attach the connector of the water-in-fuel sensor.



21

Install the vacuum valve.



22

Plug in the vacuum valve connector.



23

Prime the fuel system.





24

Clean the fuel filter. Use all-purpose cleaning spray.



25

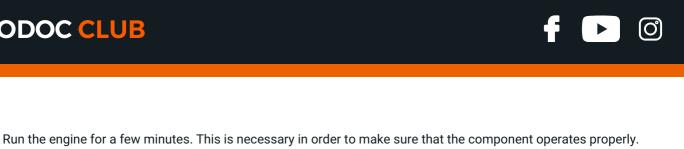

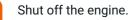





AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

FUEL FILTER: A WIDE SELECTION

i DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.