




How to change anti roll  
bar links on a car –  
replacement tutorial

## VIDEO TUTORIAL



### REQUIRED TOOLS:

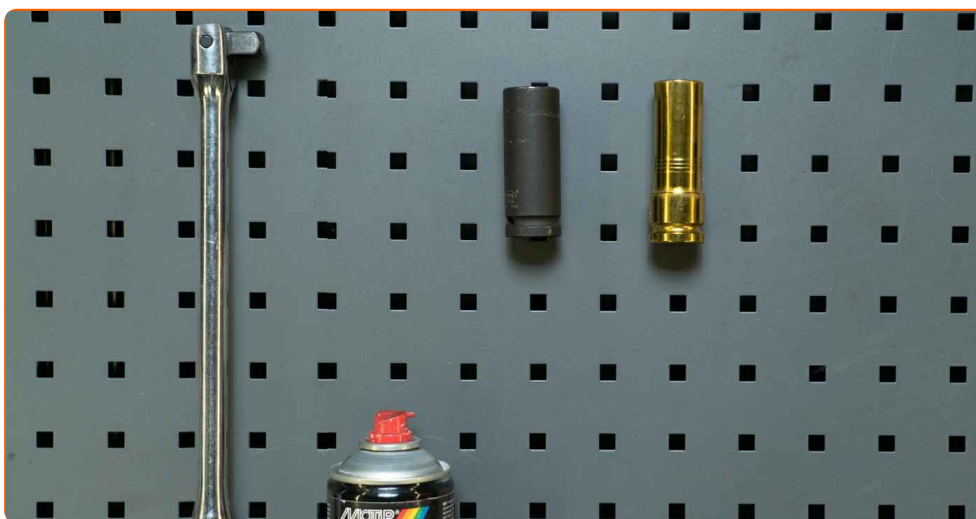

- Tap wrench
- Wheel impact socket
- Impact socket
- Ceramic grease
- Jack

**BUY TOOLS**

Please note!

- The primary function of the sway bar is to reduce body roll
- The drop links connect the left and right wheels of the axle via the sway bar
- Not all cars are fitted with a sway bar, even if the vehicle has an independent suspension
- Sway bar links (also known as drop links) vary in design and can be made of metal or plastic
- They all have fasteners on both ends

1

To replace the drop link using a jack, you will need to remove the wheel

 


Please note!

- When using an inspection pit, car ramp or lift, the part can usually be accessed without removing the wheel
- When using a jack, only one side of the axle is hanging free while the other side is heavily loaded
- This means that the sway bar is heavily strained during the procedure

2

For most cars, you only need to access and remove the drop link fasteners to replace the component



**Caution!**

- Normally, the left and right sway bar links are structurally the same
- But there are also the ones that mirror each other in design and need to be installed on a specific side
- The drop links on the front and rear axles of the vehicle are also different

3

Drop link fasteners are constantly exposed to moisture and dirt, causing them to corrode. This is why it is essential to clean them and treat them with the lubricant before unscrewing them

 


The links can be attached with the following components:

- ball joints
- a ball joint used in combination with a bushing for attaching the component to the suspension arm or other mating part
- a bushing located between the sway bar and the suspension arm


4

The position of the joint stud may be affected when unscrewing the fasteners. Before removing the drop link, the joint stud should be put back in its original position. To do so, prop a suitable tool against the subframe and push it against the sway bar. This will make it easier to remove the sway bar link




5

 
To prevent the stud from turning when tightening or unscrewing the fasteners, it should be secured by inserting an Allen key in a special slot



 
**6** Before installing the new drop link, clean its mounting seats on the sway bar and suspension components



 **7** Coat the threaded parts of the link with an anti-corrosion agent



 **8** Install the fasteners one by one: tighten the first one just a little bit, then go on to the next one




**9** Using a torque wrench, tighten all fasteners to the torque recommended by the car manufacturer




**AUTODOC experts recommend:**

- If the fastener is badly corroded, you can use a nut splitter


- 10 You can tighten the fasteners of drop links that are fitted with ball joints when the wheels are raised off the ground. When the car is lowered to the ground, the links will move into the required position

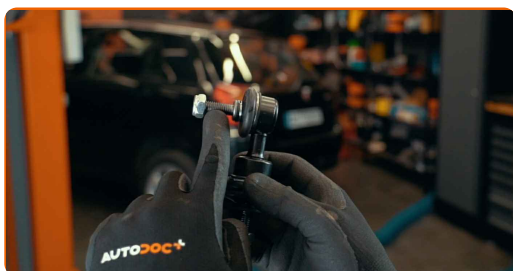

- 11 The fasteners of the drop links with rubber bushings should only be tightened after the car is lowered to the ground. Otherwise, the bushings will rotate and get damaged, as well as the drop link itself.

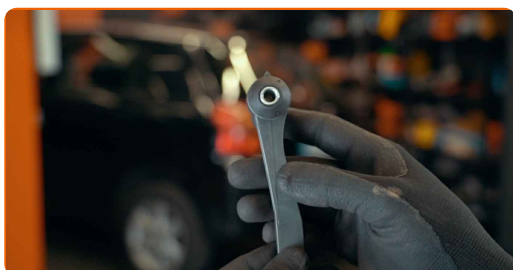

- 12 After tightening the link fasteners, treat them with an anti-corrosion agent

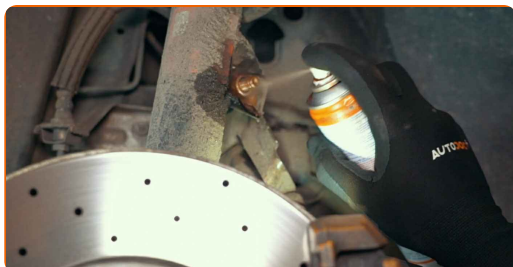


- 13 Treat the surface of the brake disc that will be in contact with the wheel



**14**

Tighten the wheel fasteners one by one in a crisscross pattern to the car manufacturer's recommended torque

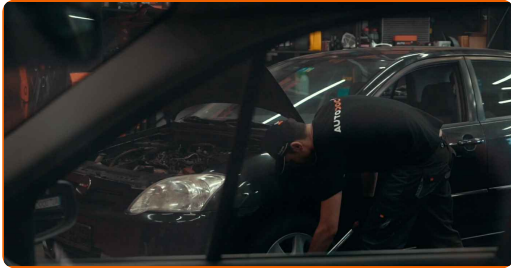



# AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

**AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING**



**+ AUTODOC**

GET IT ON  
**Google Play**

Download on the  
**App Store**

**Download**

**A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR**

**ANTI ROLL BAR LINKS: A WIDE SELECTION**

## **DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.