



How to change car
battery on a car –
replacement tutorial

VIDEO TUTORIAL



REQUIRED TOOLS:



- Combination spanner
- Impact socket
- Ratchet wrench
- Fender cover

BUY TOOLS

Please note!

- Sometimes even experienced drivers find it difficult to answer which battery terminal to disconnect first before removing the battery or working with the car's electric system.
- Yet, there are certain rules to follow not only for removing the battery, but also for installing one, measuring its charge, and operating it.

 
1

A battery has two terminals, one positive and one negative



2

The negative one is connected to the car body or engine block



3

The positive one is connected to the car's electrical system containing the following consumers: a starter, ignition coils, electronic control units, various servos, headlights, an infotainment system, and other devices.



 
4

When removing the battery, disconnect the negative terminal first




5

In the process of removing the battery terminals, you can accidentally touch its bracket, metal parts in the engine compartment, or the car body. In case you're removing the positive terminal first, this will lead to a short circuit.

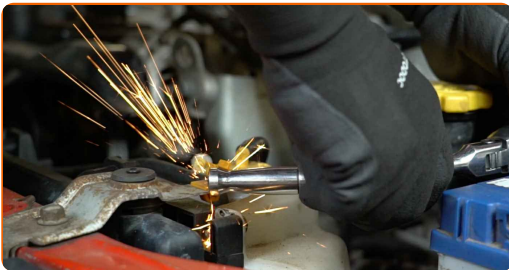

6

 Moreover, there will be residual voltage in the system for some time after disconnecting the positive terminal, meaning that contact between the terminal and metal parts will also cause a short circuit

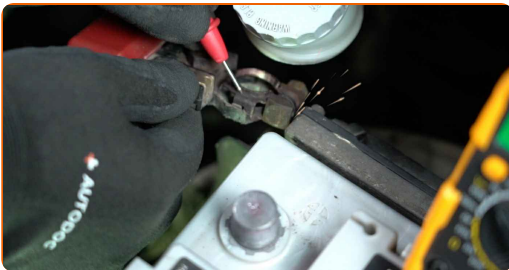

7

When installing a battery, you should, vice versa, connect the positive terminal first.



AUTODOC recommends:

- Please note! When working on the battery, make sure to insulate its positive post to prevent a short circuit

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

CAR BATTERY: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.