



How to change EGR valve
on a car – replacement
tutorial

VIDEO TUTORIAL



REQUIRED TOOLS:



 
- Wire brush
- WD-40 spray
- Combination spanner
- Impact socket
- Torx bit
- Ratchet wrench
- Torque wrench
- Fender cover

BUY TOOLS

Please note!

- Poor quality fuel, engine oil in the combustion chambers, or improper air-fuel ratio cause contamination of the exhaust gas recirculation valve, which leads to its malfunctioning.


- 1 Check your car repair manual for where your EGR valve is located and what components you need to remove to access the valve in order to detach it for cleaning or replacement.



Important!

- In some cars, the valve is not blocked by other parts. In others, it's necessary to remove the engine cover, the throttle body, and the air filter hose and housing.

 
- 2 Disconnect the negative battery terminal.




3 Detach the electrical connector, hoses, and pipes from the valve body.



 
4 Unscrew the fasteners of the valve body and remove it.



 5 Using a cloth and the cleaner, remove dirt from the valve mounting seat.



6 Replace the EGR valve gasket.

 

7 Install the valve.

 


AUTODOC recommends:

- Use a torque wrench to tighten the fasteners and be sure to apply the tightening torque specified by the car manufacturer.

8

Reattach all connectors, hoses, and pipes; reinstall all parts that were removed.

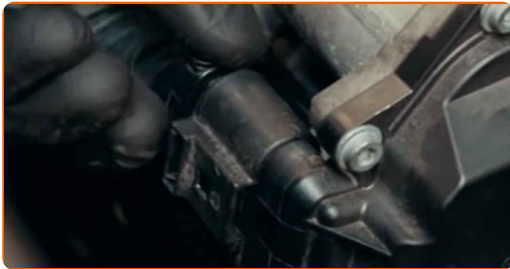


9

Reconnect the battery terminal.



10

 Clear the diagnostic trouble codes and adapt the EGR valve according to the procedure specified by the car manufacturer.



AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

EGR VALVE: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.