




How to change glow
plugs on a car –
replacement tutorial

VIDEO TUTORIAL



THINGS YOU MAY NEED:

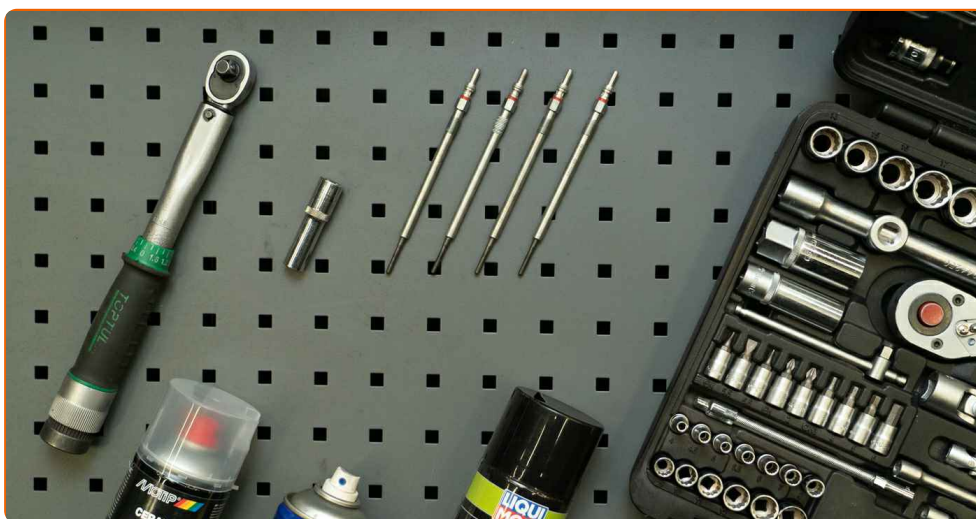

- a set of suitable tools
- a set of new glow plugs
- torque wrench
- a glow plug socket
- high temperature grease
- all-purpose cleaning spray
- WD-40 spray


BUY TOOLS

Please note!

- Glow plugs are heating elements used to aid in starting a diesel engine
- Their number corresponds to the number of engine cylinders
- The glow plugs all have the same service life and should be replaced as a set
- Glow plugs are located in the cylinder head
- Depending on the vehicle design, they can be fitted at the front, rear or on top of the engine


1

Before getting down to work, make sure that the engine has cooled down

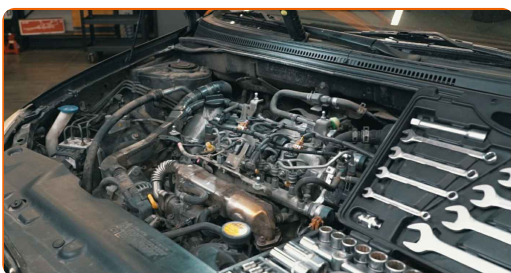


2

Open the bonnet and remove the engine cover

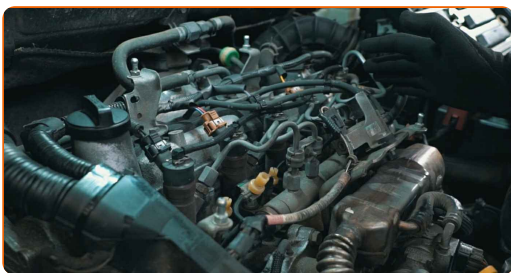


3

Locate the glow plugs

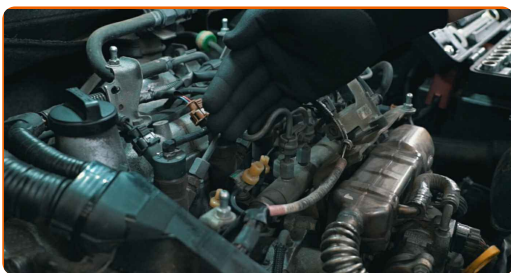

4

Look at the design of the glow plugs and their electrical contacts

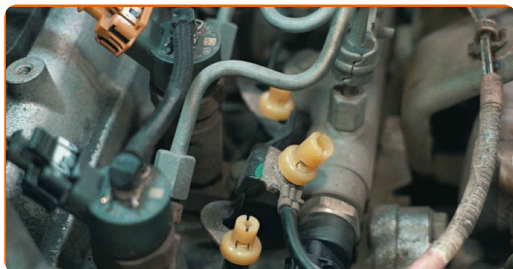


Important!

- Before getting down to work, check that no power is being supplied to the glow plugs
- Make sure the ignition is off
- In some cases you may need to disconnect the negative battery terminal


5

Remove the common power supply terminal, if your car has one

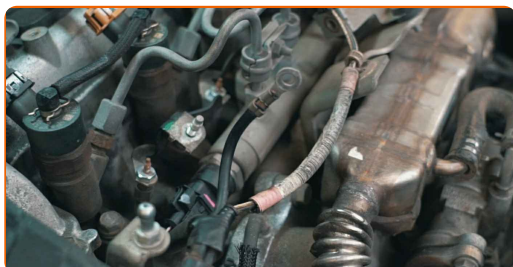


6

 Or detach the connectors from all glow plugs



7

Clean the working area

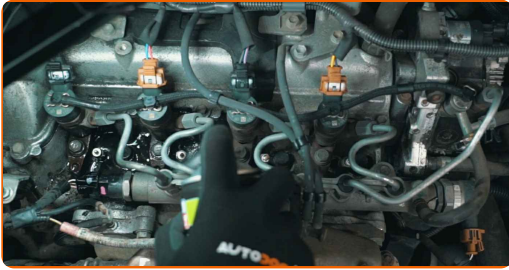


8

To unscrew the glow plugs, use a torque wrench with a suitable socket



9


Set the wrench to the torque value recommended by the car manufacturer. This value may be specified on the package or in the car repair manual

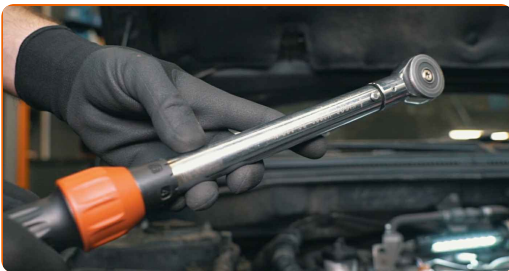


Caution!

- To avoid breaking the glow plug, do not exceed the prescribed torque

 
10 Before removing the glow plugs, clean the working area again



 11 If the glow plugs are difficult to access, use a magnetic pickup tool with a flexible shaft



 12 If the preset torque is insufficient to unscrew the glow plugs, you can try the following: Remove the parts after warming up the engine to the operating temperature



Important!

- Proceed with caution to prevent burns

 
13 Use WD-40 spray



14 If the plugs are mounted at an angle, wrap them in cloths to keep them exposed to the agent



15 For the best effect, repeat this procedure several times over the day




AUTODOC recommends:

- If none of the methods work, seek professional help

16

 After removing the glow plugs, make sure that their wells are free of soot and other dirt




Please note!

- Do not touch the heating portion of new glow plugs


17

 Treat the portion of the body from the beginning of the thread to the base with high-temperature grease. This will prevent the spread of corrosion



18

 Carefully install the new glow plugs, avoiding touching the walls of their wells




19

Tighten the parts to the torque recommended by the car manufacturer




20

 Check the condition of the connectors and replace them if necessary



21

 Tighten the fasteners of the common terminal to the torque recommended by the car manufacturer



AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

 Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

GLOW PLUGS: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.