




How to change engine oil
and filter on a car –
replacement tutorial

VIDEO TUTORIAL



THINGS YOU MAY NEED:

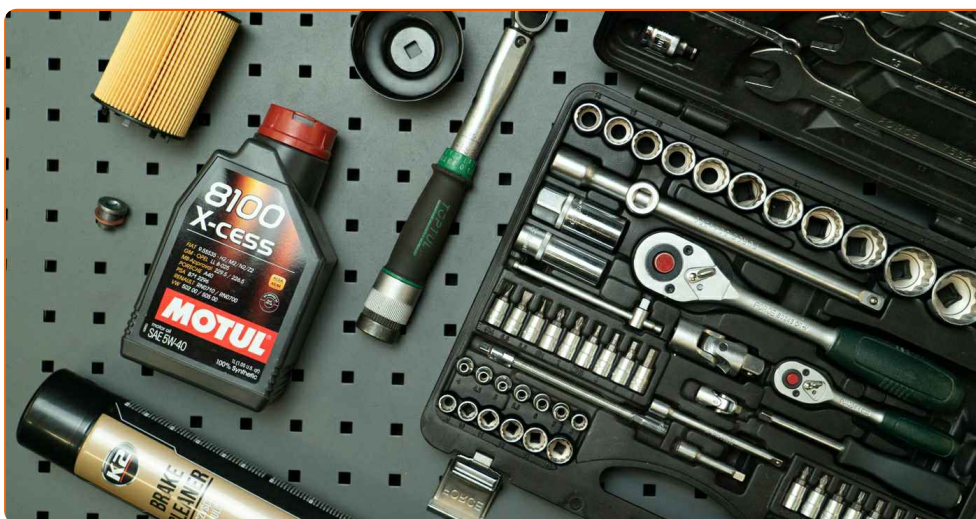

- Suitable engine oil
- A new oil filter
- A new drain plug
- A set of the necessary tools
- An oil filter removal tool
- A waste oil container
- Torque wrench
- Oil-resistant work gloves
- A cleaning agent


BUY TOOLS

AUTODOC experts recommend:

- Replace the oil filter every time when changing motor oil.

1

You'll first need to locate the main elements of the engine lubrication system

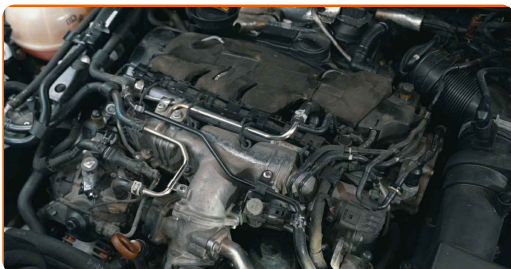

2

The oil filler. This is located on the top of the engine



3

The cap is usually labelled accordingly



4

The oil dipstick. It is located in the engine oil pan and sends the data on the oil level to the dashboard via the ECU



5 Instead of a dipstick, some vehicles are equipped with an electronic sensor

 
Important!

- Vehicles with automatic transmission may have 2 dipsticks in the engine bay
- One is used to check the engine oil level, and the other to check the transmission fluid level
- Do not mix them up


6 The oil filter. This can be designed as a cartridge that’s inserted into the housing on the engine block or made as a separate one-piece spin-on component



7 The oil filter may be located on either side of the engine



8 If the oil filter is installed on the underside of the engine, you’ll need to remove the engine splash guard

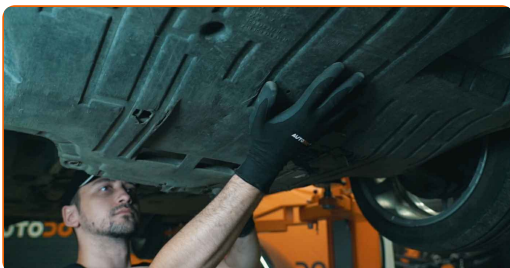


- 9 On some cars, the splash guard doesn't need to be removed, because a special service cover is provided for easy access to the filter



- 10 The drain plug. It is located under the engine in its oil pan



 - 11 To access the underside of the vehicle, use a car lift, or an inspection pit or ramp or a jack



Please note!

- When using a jack you also need to use jack stands

- 12** Make sure that the car is in a completely level position. This way, the oil can be drained evenly from all parts of the engine



- 13** Oil filters from different manufacturers may vary in design. So it's advisable to use a universal wrench



 
AUTODOC recommends:

- Change the oil while the engine is still warm
- Warm oil has a higher fluidity

- 14** Unscrew the oil filler plug



15 Pull up the oil dipstick




16 Clean the working area



17 Unscrew the oil filter cap or the filter itself



 18 Take the oil filter out of its housing



Be careful!

- Prevent dirt from entering the filter mounting seat

 
19 Place the waste oil container under the drain plug



20 Clean the working area




21 Unscrew the drain plug




Important!

- Proceed with care to avoid spilling the oil

 
22 Wait until the oil has completely drained from the drainage hole



23 Clean the oil filter seat

 

 
24 If the filter is a spin-on style one, lubricate its seal with some fresh oil




25 If the filter is a cartridge style one, remove it from its mounting seat on the cap



 
26 Remove the O-rings



 
27 Clean the mounting seat of the cartridge



 
28 Install new O-rings and a new filtering element



 
29 Prepare a new drain plug with a new gasket




30 Clean the working area

 

 
31 Tighten the drain plug using a torque wrench to the manufacturer's recommended torque




32 Remove the waste oil container

 

33 Reinstall the engine splash guard

 

 34 Install the oil filter and tighten it using a torque wrench to the manufacturer's recommended torque




35 Insert a funnel into the oil filler



Please note!

- Only use the oil type approved by the car manufacturer

 36 Pour new oil into the engine in the amount recommended by the car manufacturer




37 Check its level with the dipstick from time to time



AUTODOC recommends:

- Check the oil level with the dipstick with the car standing on a flat, even surface

 
38 Extract the dipstick and wipe off the old oil




39 Insert the dipstick as far as it can go and wait for a few seconds



 
40 Extract the dipstick and inspect it without turning it upside down



 41 Wipe the dipstick and put it back in its place



 
42 Remove the funnel and screw on the oil filler cap



43 Start the engine and let it run for 30 seconds



 
44 During this time, the engine oil will be distributed throughout the system



45 Shut down the engine and wait for a couple of minutes



 
46 Recheck the engine oil level and correct it, if necessary



Please note!

- The oil level should be between the Min and Max marks

 
47 As soon as the procedure is completed, reset the service interval



48 Alternatively, you can make a note of what mileage the maintenance job was done at



 49 If your vehicle is not equipped with an oil dipstick, the oil level is displayed on the dashboard



AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

 Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

OIL FILTER: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.