




How to change power steering fluid on a car – replacement tutorial

VIDEO TUTORIAL



YOU WILL NEED:

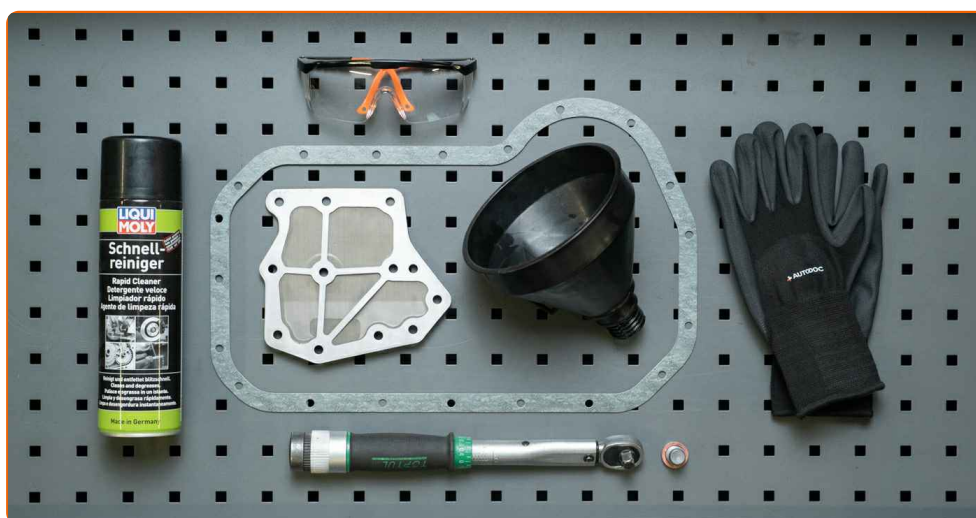

- a car lift or jack
- power steering fluid
- combination pliers
- a syringe to pump out the fluid
- a drain pan to collect the old fluid
- gloves

BUY TOOLS

Please note!


- Poor steering response, a jerking steering wheel, and strange noises under the bonnet are the main signs that the power steering fluid has become unserviceable.
- It should be changed at the intervals set by your car manufacturer.
- The change procedure depends on your car's make and model and is described in the car service manual.

1


Raise your car a little with a lift or jack up its front wheels.

**2**

 Remove the power steering reservoir cap and pump out the old fluid with the help of a syringe.

**3**


Remove the hoses from the reservoir and drain out the rest of the old fluid from the return hose into the prepared drain pan.

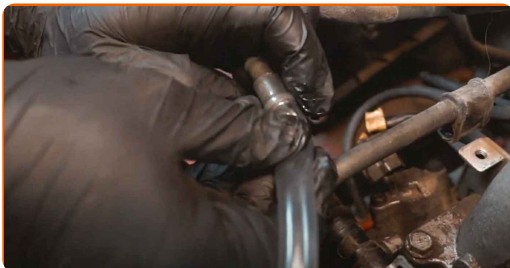


- 4 Set the ignition key to the ACC position to unlock the steering wheel and turn it lock-to-lock several times to pump the fluid out of the system.




- 5 Add a small amount of new fluid into the reservoir. When it starts flowing out of the hose, this means that the system is completely cleared of the old fluid.

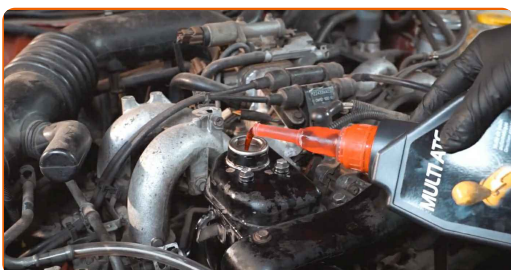


- 6 Reattach the hoses to the reservoir.

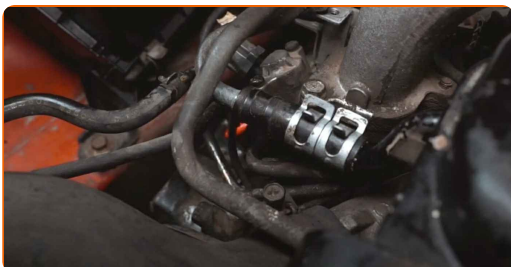


- 7 Pour in the new power steering fluid. The type and amount to use is specified by the car manufacturer.

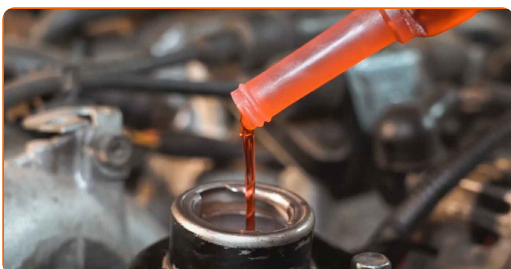

 8 Turn the steering wheel lock-to-lock several times.




9 Check the fluid level, it should be between the reservoir's Min and Max marks. If there are no marks on the reservoir, use the dipstick attached to the cap.

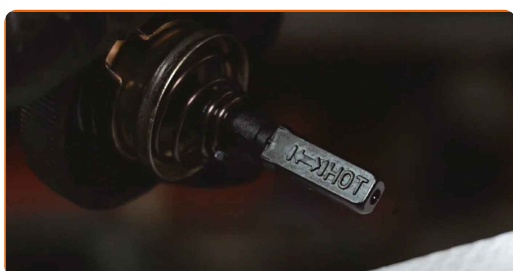


Please note!

- Some cars have four marks: Min Hot, Max Hot, Min Cold and Max Cold.
- In that case, the level can be checked on either a hot or cold engine.

 10 Lower the car to the ground. Run the engine for a few seconds.




- 11 Stop it and add the fluid to the recommended level. Start the engine and turn the steering wheel lock-to-lock several times.

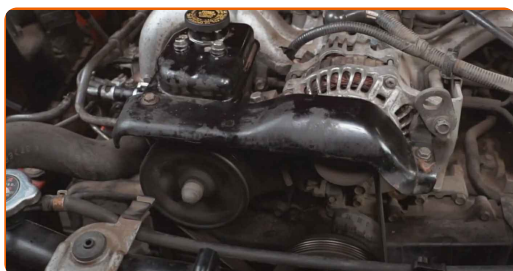

- 12 Make sure there is enough fluid in the reservoir.

- 13 Take a test drive at a low speed and check the steering response. Adjust the power steering fluid level if necessary.

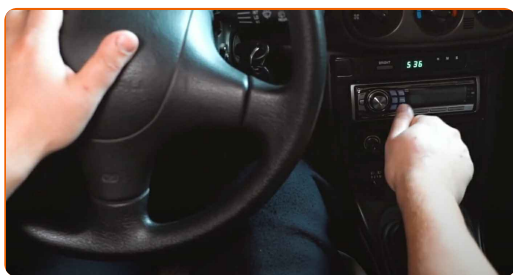

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

POWER STEERING FLUID: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.