




How to change  
serpentine belt on a car –  
replacement tutorial

## VIDEO TUTORIAL



### THINGS YOU MAY NEED:

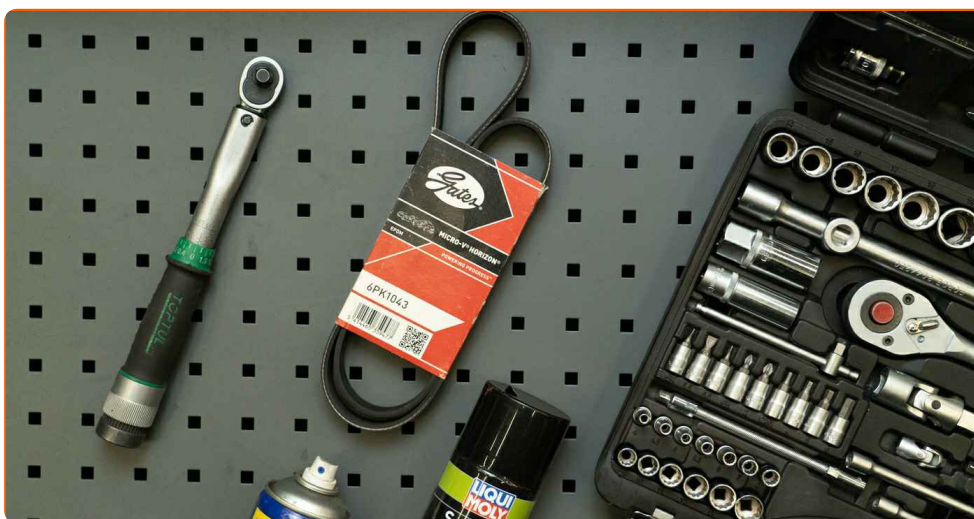


- a new serpentine belt
- a set of suitable tools
- torque wrench
- universal spray cleaner and a wire brush
- WD-40 spray
- depending on the car's design: a jack, jack stands, and wheel chocks

**BUY TOOLS**


Installing a new serpentine belt may be necessary in the following cases:

- abnormal noises when the engine is started or running
- malfunctions of the engine-driven accessories
- routine replacement


**1** On most cars with a transverse engine you will need to remove the front right wheel to replace the belt

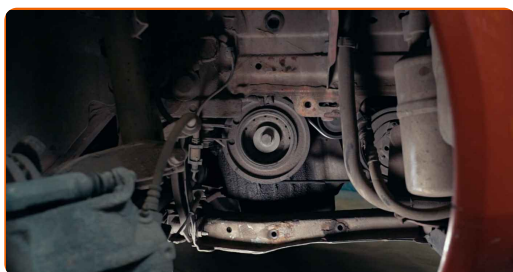

**2** On some cars, you can access the belt just by opening the bonnet

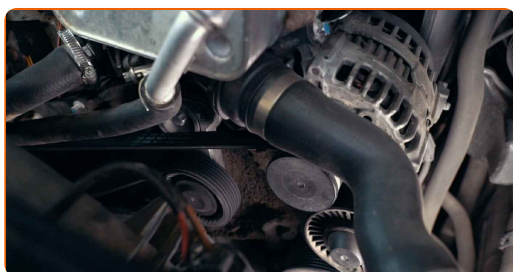

 **3** On others, some car body parts have to be removed first




The serpentine belt drives the engine-driven accessories:

- viscous fan coupling
- alternator
- air conditioner compressor
- power steering pump
- water pump and other equipment

4

 The serpentine belt transmits torque from the crankshaft to the pulleys of other devices, activating them




5

On most vehicles, you can locate the engine-driven accessories by opening the bonnet. However, you will not be able to replace the belt due to the tight space




6

 Loosen the belt before removing it. Use the tensioner pulley for this



**7** Move the automatic tensioner aside or manually loosen the mechanical one. The belt can then be easily removed

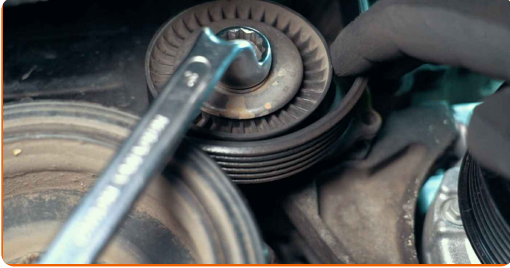


There are two types of tensioners:

- - an automatic one uses a spring to tension the belt
- - a mechanical one needs to be turned manually to adjust the tension

**8** There are self-tensioning belts which are used without a tensioning mechanism. Replacing this type of belt requires special equipment



 **9** Access the belt and identify the tensioner type



**10** Take a picture or sketch a belt routing diagram




**11** Attach a suitable tool to the tensioner and move it aside



**Important!**

 - The tool must be secured reliably to prevent injury


**12** After loosening the belt, remove it from one of the pulleys




**13** Return the tensioning mechanism to its original position




**14** Remove the belt from the other pulleys

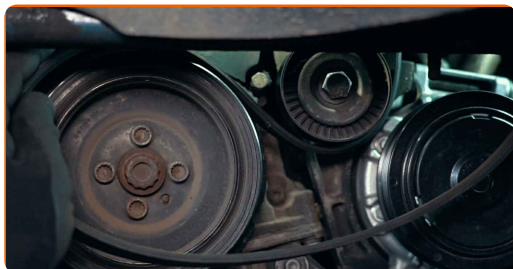

 **15** Use a lock pin if the design of the tensioner provides for this



 **16** Check that the tensioner and idler pulleys can move freely and check the condition of the alternator one-way clutch, crankshaft damper pulley, and all other pulleys




**AUTODOC experts recommend:**

- Replace these components if necessary


**17** Position the new belt in accordance with the routing diagram



 
**18** Install the belt on the pulleys one by one



 
**19** Make sure that the belt is installed correctly, not misaligned, and that its ribs are fitted into the pulley grooves



 **20** Lower the tensioner and remove the lock pin if you used one



 **21** If the tensioner is mechanical, check the belt deflection by pressing on the long section between the pulleys



**Important!**

- It should not deflect too much



22

If an automatic tensioner does not provide the correct tension, replace it



Please note!

- Special tools can be used to measure the tension

# AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

**AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING**



**+ AUTODOC**

GET IT ON  
**Google Play**

 Download on the  
**App Store**

**Download**

**A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR**

**SERPENTINE BELT: A WIDE SELECTION**

## **DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.