



How to change shock absorber dust cover & bump stops on a car – replacement tutorial

VIDEO TUTORIAL



REQUIRED TOOLS:



- Flat screwdriver
- Tap wrench
- Wheel impact socket
- Impact socket
- Ceramic grease
- Jack

BUY TOOLS

Please note!

- The dust boot protects the piston rod of the shock absorber from dirt, water, and other environmental factors
- The bump stop is a cushioning element that limits the travel of the piston rod and prevents the shock absorber body from hitting against the mount
- The dust boot and bump stop can be combined into a dust cover kit or installed separately
- On some cars, the bump stop can be replaced without removing and disassembling the shock absorber
- If the dust boot is attached to the bump stop, then damage to the former will cause malfunction of the latter
- This results in dust and water getting on the shock absorber's piston rod, causing its corrosion and failure

1

Be sure to support the suspension parts before getting down to work

2

 
Remove the upper fasteners. You can access them either from the car boot or the wheel arch




Replacement of the dust boot and bump stop on a shock absorber mounted separately from the spring

- Carry out replacement in the following order


3 Unscrew the lower shock absorber fasteners from the suspension components and remove the shock absorber



 4 It may be necessary to disassemble the shock absorber to reach the dust boot and bump stop



 5 Inspect all the parts and replace if necessary




AUTODOC recommends:

- Replace the parts in pairs on an axle

6 Reinstall the components in reverse order



 
7 Tighten the fasteners to the torque recommended by the car manufacturer




Replacement of the dust boot and bump stop on a suspension strut

- Carry out replacement in the following order

 
8 Unscrew the suspension strut from the steering knuckle or remove it from its mounting seat on the knuckle



 9 In some cases it may also be necessary to disconnect the strut from the suspension arms



10 Remove the suspension strut

 


11

Compress and secure the spring



12

Use a special coil spring compressor

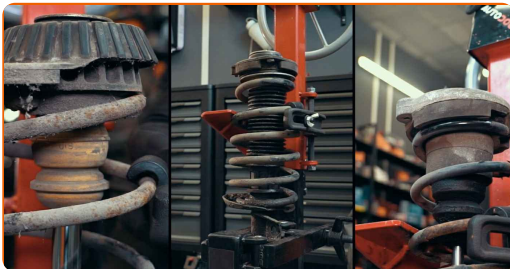

13

Remove the upper strut mount in order to reach the dust boot and the bump stop




Please note!

- The bump stop may be installed on the piston rod or attached to the mount
- The dust boot may be fitted on the bump stop, installed between the spring and mount, or secured to the mount.

14

Reassemble all the components in reverse order.

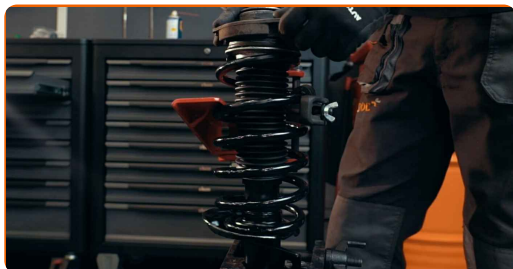


Important!

- Pay attention to the strut mount position to ensure it's facing in the right direction

15

 Fit the suspension strut into its mounting seat



16

Tighten the fasteners to the torque recommended by the car manufacturer



AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

 Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

SHOCK ABSORBER DUST COVER & BUMP STOPS: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.