




How to change track rod
end on a car –
replacement tutorial

VIDEO TUTORIAL



YOU MAY NEED THE FOLLOWING:

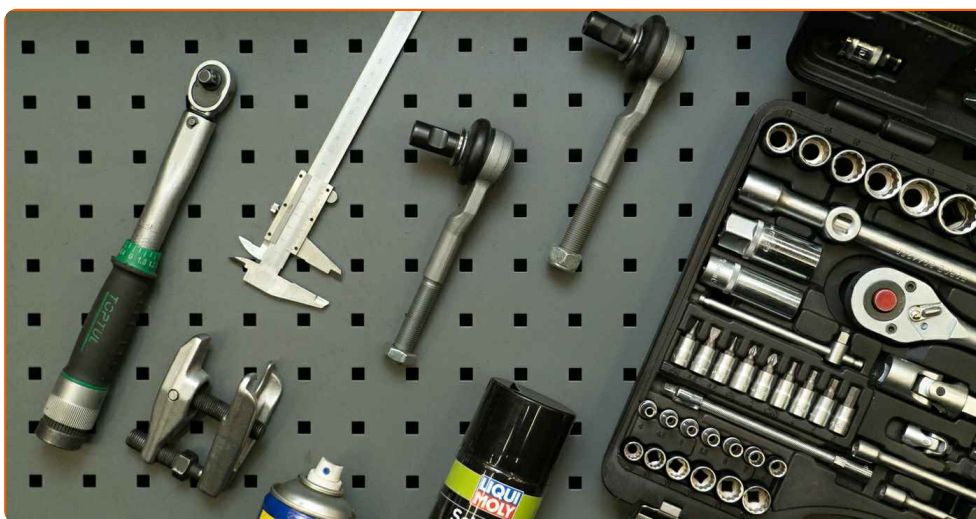

- a new tie rod end
- a set of suitable tools
- a universal spray cleaner and a wire brush
- WD-40 spray
- a measuring tool
- ball joint puller
- torque wrench

 
BUY TOOLS

Please note!

- Tie rod ends are pivoting components of the steering system
- They transmit force to the steering knuckles to turn the wheels
- Usually, the left and right components mirror each other in design and need to be mounted on the correct side
- They are not interchangeable

1

Raise the car with a car lift or a jack



Important!

- When using a jack you also need to use jack stands


2

Turn the steering wheel as far as it will go to access the tie rod end



3

Clean the fasteners connecting the tie rod end to the steering knuckle and the tie rod

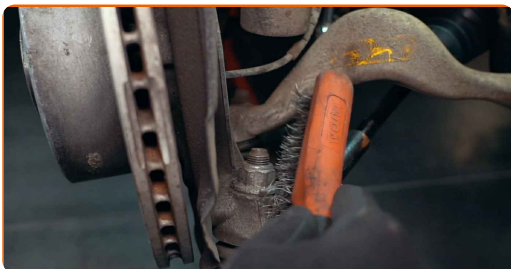


The tie rod end is additionally secured on the tie rod

- with a clamping bolt
- or a lock nut that prevents the part from self-loosening


4

 Remove the ball joint from the steering knuckle. Use a ball joint puller



5

The connection between the tie rod end and the tie rod is adjustable

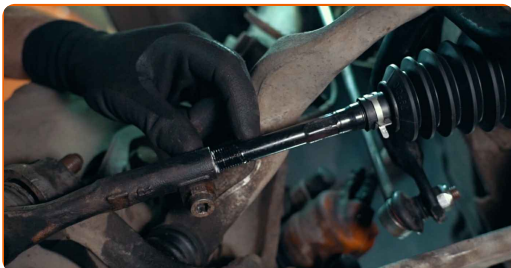

Caution!

- How far the tie rod end is screwed onto the threaded portion affects the wheel toe angle


6

Measure the distance from the beginning of the threaded portion on the tie rod to the tie rod end




7

Maintain this value when installing a new tie rod end

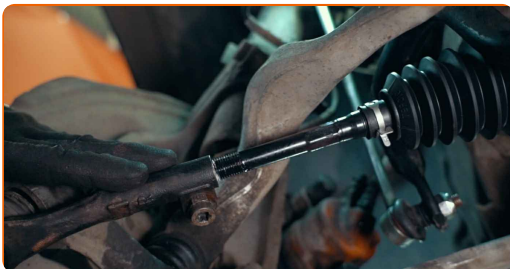

8

 
Loosen the additional fastener and unscrew the tie rod end from the tie rod




AUTODOC experts recommend:

- You can also make a mark on the tie rod to make installing a new tie rod end easier

 
9 Clean the tie rod end mounting seats with an anti-corrosion agent




10 Install a new tie rod end

 

11 Maintain the required length on the tie rod

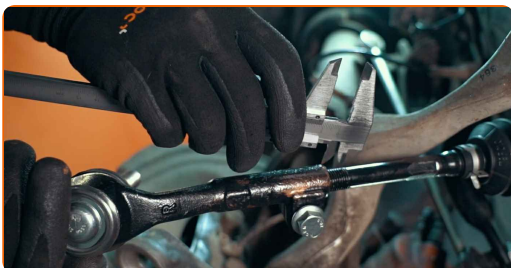

 12 After installation, check that the length of the threaded portion is the same as before




Important!

- Adjust it by turning the tie rod for the required number of rotations

13 Secure the tie rod end



 
14 Treat the fasteners with an anti-corrosion agent




Please note!

- When measuring, do not use the length of the lock nut as a reference
- The length of a new lock nut may be different from that of the old one

 
15 If the ball stud is tapered, position the removal tool under the dust boot to remove the tie rod end



 
- 16 If the ball stud has a thrust washer, position the remover so that the force is applied between the steering knuckle and the ball stud



 
- 17 Unscrew the tie rod end while holding the tie rod



 - 18 Make sure its mounting seat is free from corrosion and dirt



 - 19 Make sure that the wheel mounting surface is clean and smooth



- 20 Clean it and treat it with an anti-corrosion agent



Important!

- Align the wheels
- It is recommended to check the condition of the tie rods and replace them, if necessary

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

 Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

TRACK ROD END: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.