




How to change rear
brake pads on **NISSAN**
Interstar Minibus (X70) –
replacement guide

SIMILAR VIDEO TUTORIAL

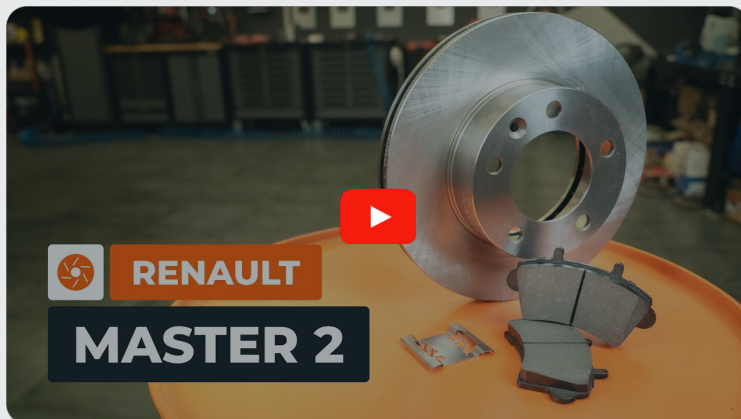

This video shows the replacement procedure of a similar car part on another vehicle

Important!

This replacement procedure can be used for:

NISSAN INTERSTAR Bus (X70) 1.9 dCi 80, NISSAN INTERSTAR Bus (X70) 2.2 dCi 90, NISSAN INTERSTAR Bus (X70) dCi 115, NISSAN INTERSTAR Bus (X70) 3.0 dCi 140, NISSAN INTERSTAR Bus (X70) 2.5 dCi 100, NISSAN INTERSTAR Bus (X70) dCi 120, NISSAN INTERSTAR Bus (X70) dCi 150, NISSAN INTERSTAR Bus (X70) dCi 100

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: RENAULT MASTER II Box (FD) 2.2 dCi 90

REPLACEMENT: BRAKE PADS – NISSAN INTERSTAR MINIBUS (X70). LIST OF THE TOOLS YOU'LL NEED:



- Wire brush
- Nylon brush
- WD-40 spray
- All-purpose cleaning spray
- Brake cleaner
- Anti-squeal paste
- Ceramic grease
- Torque wrench
- 19 mm combination spanner
- 13 mm socket
- 18 mm socket
- T40 Torx bit
- 24 mm wheel impact socket
- Ratchet wrench or power tool for removal/installation of threaded fasteners
- Ratchet screwdriver
- Tommy bar
- Mounting lever
- Brake caliper wind back tool
- Car lift or jack with jack stands, and wheel chocks

[Buy tools](#)

Replacement: brake pads – NISSAN Interstar Minibus (X70). Professionals recommend:

- Replace the brake discs and pads in axle sets, regardless of their condition. This will ensure even braking.
- The procedure for replacing the brake discs and pads is identical for both sides of the same axle.
- All the work should be carried out with the engine switched off.

 
REPLACEMENT: BRAKE PADS – NISSAN INTERSTAR MINIBUS (X70). TAKE THE FOLLOWING STEPS:

1 Open the bonnet.

2 Loosen the brake fluid reservoir cap.




3 If you are going to use a jack, secure the wheels with chocks.



4

 Loosen the wheel fasteners. Use a 24 mm wheel impact socket. Use a tommy bar.



5

Raise the vehicle.

Warning!

- If you are using a jack, make sure the car is parked on a hard, flat surface.
- Make sure to additionally secure the car with jack stands.

6

Unscrew the wheel fasteners.



Replacement: brake pads – NISSAN Interstar Minibus (X70). AUTODOC recommends:

- To avoid injury, hold up the wheel when unscrewing the fasteners.

7 Remove the wheel.



 
8 Clean the brake caliper fasteners. Use a wire brush. Use WD-40 spray.



9 Unscrew the brake caliper fasteners. Use a 19 mm combination spanner. Use a 13 mm socket. Use a ratchet wrench.



10 Remove the fastening bolts.



11

Remove the brake caliper. Use a mounting lever.




AUTODOC recommendation:

- Tie the caliper to the suspension or to the body with a wire without disconnecting it from the brake hose to avoid opening the brake line.
- Make sure that the brake caliper is not hanging from the brake hose.
- Do not press the brake pedal after the caliper has been removed. This may cause the piston to fall out of the caliper bore resulting in the brake fluid leakage and air entering the system.

12

Remove the brake pads. Use a mounting lever.

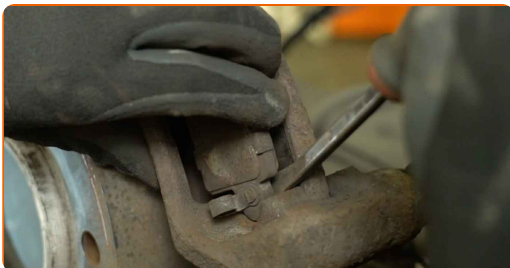

13

Clean the brake caliper piston. Use a nylon brush. Use a brake cleaner.



14

Retract the brake caliper piston. Use a brake caliper wind back tool.



15

Treat the new brake pads in the areas where they touch their guides on the brake caliper bracket. Use anti-squeal paste.



16

Install new brake pads.



17

Install the brake caliper.



 
18

Install the fastening bolts.



19

Tighten the brake caliper fasteners. Use a 19 mm combination spanner. Use a 13 mm socket. Use a torque wrench. Tightening torque: 30 N·m.



20

Clean the wheel rim mounting seat. Use a wire brush. Use an all-purpose cleaning spray.

21

Treat the brake disc surface that contacts the wheel rim. Use ceramic grease.



22

Install the wheel.



Replacement: brake pads – NISSAN Interstar Minibus (X70). Tip:

- To avoid injury, hold up the wheel when screwing in the fasteners.

23

Screw in the wheel fasteners. Use a 24 mm wheel impact socket. Use a ratchet wrench.

 


24


Lower the car and tighten the wheel fasteners in a criss-cross pattern. Use a 24 mm wheel impact socket. Use a torque wrench. Tightening torque: 172 N·m.



- 25 Remove the jack, jack stands, and wheel chocks.



 - 26 Without starting the engine, press the brake pedal several times until you feel significant resistance.



- 27 Check the brake fluid level in the reservoir and top up if necessary.



- 28 Tighten the brake fluid reservoir cap.




- 29 Close the bonnet.

WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING

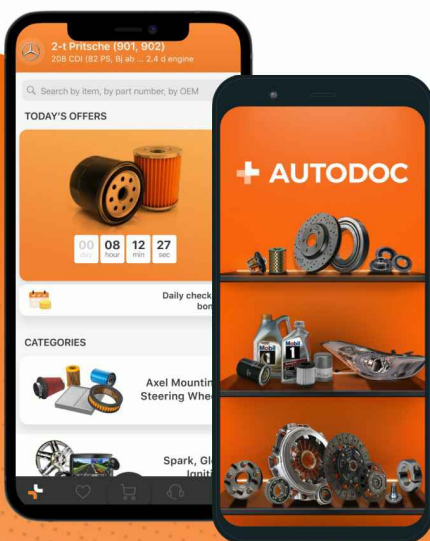

+ AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BRAKE PADS: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2025 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.